ACS320

User’s Manual
ACS320 Drives (0.5 to 30 Hp)



List of related manuals

DRIVE MANUALS	Document Number
ACS310 User's Manual	3AUA0000044201

OPTION MANUALS	Document Number
MFDT-01 FlashDrop User's Manual	3AFE68591074
MREL-01 Relay Output Extension Module User's Manual for ACS310/ ACS320/ACS350	3AUA0000035974
MUL1-R1 Installation Instructions for ACS150, ACS310, ACS320 and ACS350	3AFE68642868
MUL1-R3 Installation Instructions for ACS150, ACS310, ACS320 and ACS350	3AFE68643147
MUL1-R4 Installation Instructions for ACS320 and ACS350	3AUA0000025916
SREA-01 Ethernet Adapter Module Quick Start-up Guide	3AUA0000042902
SREA-01 Ethernet Adapter Module User's Manual	3AUA0000042896

MAINTENANCE MANUALS	Document Number
Guide for Capacitor Reforming in ACS50, ACS55, ACS150, ACS310, ACS320, ACS350, ACS550 and ACH550	3AFE68735190

All manuals are available in PDF format on the Internet at www.abbnow.com

BACnet is a registered trademark of ASHRAE.
CANopen is a registered trademark of CAN in Automation e.V.
ControlNet is a registered trademark of ControlNet International.
DeviceNet is a registered trademark of Open DeviceNet Vendor Association.
DRIVECOM is a registered trademark of DRIVECOM User Organization.
Interbus is a registered trademark of Interbus Club.
LonWorks is a registered trademark of Echelon Corp.
Metasys is a registered trademark of Johnson Controls Inc.
Modbus and Modbus Plus are registered trademarks of Schneider Automation Inc.
Profibus is a registered trademark of Profibus Trade Org.
Profibus-DP is a registered trademark of Siemens AG.

User’s Manual

ACS320

Table of contents 

1. Safety 

4. Mechanical installation 

6. Electrical installation 

8. Start-Up 

© 2009 ABB Inc. All Rights Reserved.

3AUA00000 Rev Rev B
EN
EFFECTIVE: June 1, 2009

Table of contents

List of related manuals 2

1. Safety

What this chapter contains 15
Use of warnings 15
Safety in installation and maintenance 16
Electrical safety 16
General safety 17
Safe start-up and operation 17
General safety 17

2. Introduction to the manual

What this chapter contains 18
Applicability 18
Target audience 18
Purpose of the manual 18
Contents of this manual 19
Related documents 20
Categorization by frame size 20
Quick installation and commissioning flowchart 21

3. Operation principle and hardware description

What this chapter contains 22
Operation principle 22
Product overview 23
Layout 23
Power connections and control interfaces 24
Type designation label 25
Type designation key 26

4. Mechanical installation

What this chapter contains 27
Checking the installation site 27
Requirements for the installation site 27
Required tools 28
Unpacking 29
Checking the delivery 29
Installing 30
Install the drive 30
Fasten clamping plates 32

5. Planning the electrical installation

What this chapter contains 33

Implementing the AC power line connection 33
Selecting the supply disconnecting device (disconnecting means) 33
European union 34
North America 34
Other regions 34
Checking the compatibility of the motor and drive 34
Selecting the power cables 34
General rules 34
Alternative power cable types 35
Motor cable shield 35
Additional North American requirements 36
Selecting the control cables 36
General rules 36
Relay cable 37
Control panel cable 37
Routing the cables 37
Control cable ducts 38
Protecting the drive, input power cable, motor and motor cable in short circuit situations and against thermal overload 39
Protecting the drive and input power cable in short-circuit situations 39
Protecting the motor and motor cable in short-circuit situations 39
Protecting the drive, motor cable and input power cable against thermal overload 40
Protecting the motor against thermal overload 40
Using residual current devices (RCD) with the drive 40
Implementing a bypass connection 40
Protecting the contacts of relay outputs 41

6. Electrical installation

What this chapter contains 42
Checking the insulation of the assembly 42
Drive 42
Input power cable 42
Motor and motor cable 43
Checking the compatibility with IT (ungrounded) and corner grounded TN systems 43
Connecting the power cables 44
Connection diagram 44
Connection procedure 45
Connecting the control cables 46
I/O terminals 46
Default I/O connection diagram 49
Connection procedure 50
Connecting the embedded fieldbus 51
Connection diagram 51

7. Installation checklist

Checking the installation 52

8. Start-Up

HVAC Control Panel Features 54
General Display Features 55
Start-Up 56
Start-Up by Using the Start-Up Assistant 56
Start-Up by Changing the Parameters Individually 57
Modes 59
Standard Display Mode 59
Parameters Mode 61
Start-Up Assistant Mode 62
Changed Parameters Mode 64
Fault Logger Mode 64
Drive Parameter Backup Mode 65
Clock Set Mode 70
I/O Settings Mode 72
Application Macros 72
Overview 72
General Considerations 73
Application / Macro Listing 74
Selecting an Application Macro 75
Restoring Defaults 75
Control Wiring 75
HVAC Default 76
Supply Fan 77
Return Fan 78
Cooling Tower Fan 79
Condenser 80
Booster Pump 81
PFC Control Macro 82
Default I/O connections 82
Internal Timer 83
Internal Timer with Constant Speeds / PRV 84
Floating Point 85
Dual Setpoint with PID 86
Dual Setpoint with PID and Constant Speeds 87
E-Clipse 88
Hand Control 89

9. Program features

What this chapter contains 90
Start-up Assistant 90
Introduction 90
List of the tasks and the relevant drive parameters 91
Contents of the assistant displays 93
Local control vs. external control 93
Local control 94
External control 94
Settings 94
Diagnostics 95

Block diagram: Start, stop, direction source for EXT1 95
Block diagram: Reference source for EXT1 95
Reference types and processing 96
Settings 96
Diagnostics 96
Reference trimming 97
Settings 97
Programmable analog inputs 97
Settings 98
Diagnostics 98
Programmable analog output 98
Settings 98
Diagnostics 98
Programmable digital inputs 99
Settings 99
Diagnostics 100
Programmable relay output 100
Settings 100
Diagnostics 100
Frequency input 100
Settings 100
Diagnostics 101
Transistor output 101
Settings 101
Diagnostics 101
Actual signals 101
Settings 101
Diagnostics 102
Power loss ride-through 102
Settings 102
DC Magnetizing 103
Settings 103
Maintenance trigger 103
Settings 103
Acceleration and deceleration ramps 103
Settings 103
Critical Speeds 104
Settings 104
Constant speeds 104
Settings 104
Custom U/f ratio 105
Settings 105
Diagnostics 105
IR compensation 106
Settings 106
Programmable protection functions 106
AI<Min 106
Panel Loss 106
External Fault 106
Stall Protection 106
Motor Thermal Protection 107

Earth Fault Protection 107
Incorrect wiring 107
Preprogrammed faults 108
Overcurrent 108
DC overvoltage 108
DC undervoltage 108
Drive temperature 108
Short circuit 108
Internal fault 108
Supply phase loss 108
Operation limits 108
Settings 108
Power limit 109
Automatic resets 109
Settings 109
Diagnostics 109
Supervisions 109
Settings 109
Diagnostics 109
Parameter lock 110
Settings 110
PID control 110
Process controller PID1 110
External/Trim controller PID2 110
Block diagrams 111
Settings 113
Diagnostics 113
Sleep function for the process PID (PID1) control 114
Example 115
Settings 116
Diagnostics 116
Motor temperature measurement through the standard I/O 116
Settings 117
Diagnostics 117
Timed functions 118
Examples 119
Settings 119
User load curve 120
Settings 120
Diagnostics 120
Energy optimizer 121
Settings 121
Diagnostics 121
Pump cleaning 121
Settings 122
Load analyzer 122
Settings 122
Diagnostics 122
PFC Control
(Requires use of MREL-01 option purchased Separately) 123
PFC control 123

Settings 124
Diagnostics 124

10. Actual signals and parameters

What this chapter contains 125
Terms and abbreviations 125
Fieldbus equivalent 126
Actual signals in the short parameter view 126
04 FAULT HISTORY 126
Parameters in the short parameter view 126
11 REFERENCE SELECT 126
12 CONSTANT SPEEDS 126
13 ANALOG INPUTS 126
14 RELAY OUTPUTS 126
16 SYSTEM CONTROLS 126
20 LIMITS 126
21 START/STOP 127
22 ACCEL/DECEL 127
99 START-UP DATA 127
Parameter Descriptions 128
Group 99: Start-up Data 128
Group 01: Operating Data 130
Group 03: Actual Signals 134
Group 04: Fault History 139
Group 10: Start/Stop/Dir 140
Group 11: Reference Select 142
Group 12: Constant Speeds 148
Group 13: Analog Inputs 152
Group 14: Relay Outputs 153
Group 15: Analog Outputs 156
Group 16: System Controls 158
Group 17: Override 164
Group 18: Freq In & Tran Out 167
Group 20: Limits 169
Group 21: Start/Stop 171
Group 22: Accel/Decel 173
Group 25: Critical Speeds 175
Group 26: Motor Control 176
Group 29: Maintenance Trig 179
Group 30: Fault Functions 180
Group 31: Automatic Reset 184
Group 32: Supervision 186
Group 33: Information 188
Group 34: Panel Display Process Variables 189
Group 35: Motor Temp Meas 192
Group 36: Timer Functions 196
Group 37: User Load Curve 201
Group 40: Process PID Set 1 203
Group 41: Process PID Set 2 219
Group 42: External PID 219

Group 44: Pump Protection 222
Group 45: Energy Savings 228
Group 46: Pump Cleaning 230
Group 52: Panel Communication 232
Group 53: EFB Protocol 234
Group 64: Load Analyzer 235
Group 81: PFA 239
Group 98: Options 256

11. Fieldbus control with embedded fieldbus

System overview 257
Control Interface 259
Planning 259
Mechanical and Electrical Installation – EFB 260
Communication Set-up – EFB 262
Serial Communication Selection 262
Serial Communication Configuration 262
Activate Drive Control Functions – EFB 265
Controlling the Drive 265
Start/Stop Direction Control 265
Input Reference Select 265
Miscellaneous Drive Control 266
Relay Output Control 267
Analog Output Control 268
PID Control Setpoint Source 269
Communication Fault 269
Feedback from the Drive – EFB 269
Pre-defined Feedback 269
Mailbox Read/Write 271
Actual Value Scaling 271
Diagnostics – EFB 272
Fault Queue for Drive Diagnostics 272
Serial Communication Diagnostics 272
Diagnostic Situations 272
N2 Protocol Technical Data 274
Overview 274
N2 Analog Input Objects 277
N2 Binary Input Objects 278
N2 Analog Output Objects 279
N2 Binary Output Objects 280
DDL File for NCU 280
FLN Protocol Technical Data 282
Overview 282
Reports 282
Scaling Drive Feedback Values 286
Loop Gains 287
Point Database 287
Detailed Point Descriptions 291
BACnet Protocol Technical Data 296
Binary Input Object Instance Summary 296

Binary Output Object Instance Summary 297
Binary Value Object Instance Summary 297
Analog Input Object Instance Summary 299
Analog Output Object Instance Summary 300
Analog Value Object Instance Summary 300
BACnet Quick-Start Sequence 302
Protocol Implementation Conformance Statement (PICS) 303
Statement 304
BACnet Object Definitions 306
Object/Property Support Matrix 306
Modbus Protocol Technical Data 307
Overview 307
Modbus Addressing 309
ABB Control Profiles Technical Data 315
Overview 315
Status Word 318
State Diagram 321
Reference Scaling 324

12. Fault tracing

What this chapter contains 328
Safety 328
Alarm and fault indications 328
How to reset 328
Fault history 329
Alarm messages generated by the drive 330
Alarms generated by the Basic Control Panel 333
Fault messages generated by the drive 336
Embedded fieldbus faults 343
No master device 343
Same device address 343
Incorrect wiring 343

13. Maintenance and hardware diagnostics

What this chapter contains 344
Maintenance intervals 344
Cooling fan 345
Replacing the cooling fan (frame sizes R1...R4) 345
Capacitors 346
Reforming the capacitors 346
Power connections 346
Control panel 347
Cleaning the control panel 347
Changing the battery in the Assistant Control Panel 347
LEDs 347

14. Technical data

What this chapter contains 348

Ratings 349
Definitions 349
Sizing 350
Derating 350
Power cable sizes and fuses 351
Dimensions, weights and free space requirements 352
Dimensions and weights 352
Free space requirements 352
Losses, cooling data and noise 353
Losses and cooling data 353
Noise 354
Terminal and lead-through data for the power cables 354
Terminal and lead-through data for the control cables 354
Electric power network specification 355
Motor connection data 355
Control connection data 356
Efficiency 356
Degrees of protection 356
Ambient conditions 357
Materials 358
Applicable standards 358
CE marking 359
Compliance with the European EMC Directive 359
Compliance with EN 61800-3:2004 359
Definitions 359
Category C2 359
Category C3 360
UL marking 360
UL checklist 360
C-Tick marking 361
RoHS marking 361
Liability limits 362
Patent protection in the USA 362

15. Dimension drawings

Frame sizes R0 and R1, IP20 (cabinet installation) / UL open 364
Frame sizes R0 and R1, IP20 / NEMA 1 365
Frame size R2, IP20 (cabinet installation) / UL open 366
Frame size R2, NEMA 1 367
Frame size R3, IP20 (cabinet installation) / UL open 368
Frame size R3, NEMA 1 369
Frame size R4, IP20 (cabinet installation) / UL open 370
Frame size R4, NEMA 1 371

16. Index

Further information

Product and service inquiries 393
Product training 393

Providing feedback on ABB Drives manuals 393
Document library on the Internet 393



1

Safety

What this chapter contains

The chapter contains safety instructions which you must follow when installing, operating and servicing the drive. If ignored, physical injury or death may follow, or damage may occur to the drive, motor or driven equipment. Read the safety instructions before you work on the drive.

Use of warnings

Warnings caution you about conditions which can result in serious injury or death and/or damage to the equipment, and advise on how to avoid the danger. The following warning symbols are used in this manual:



Electricity warning warns of hazards from electricity which can cause physical injury and/or damage to the equipment.



General warning warns about conditions, other than those caused by electricity, which can result in physical injury and/or damage to the equipment.

Safety in installation and maintenance

These warnings are intended for all who work on the drive, motor cable or motor.

Electrical safety

WARNING! Ignoring the following instructions can cause physical injury or death, or damage to the equipment.

Only qualified electricians are allowed to install and maintain the drive!

- Never work on the drive, motor cable or motor when input power is applied. After disconnecting the input power, always wait for 5 minutes to let the intermediate circuit capacitors discharge before you start working on the drive, motor or motor cable.

  Always ensure by measuring with a multimeter (impedance at least 1 Mohm) that there is no voltage between the drive input phases U1, V1 and W1 and the ground.
- Do not work on the control cables when power is applied to the drive or to the external control circuits. Externally supplied control circuits may carry dangerous voltage even when the input power of the drive is switched off.
- Do not make any insulation or voltage withstand tests on the drive.
- If a drive whose EMC filter is not disconnected is installed on an IT system (an ungrounded power system or a high resistance-grounded [over 30 ohms] power system), the system will be connected to ground potential through the EMC filter capacitors of the drive. This may cause danger or damage the drive.
- If a drive whose EMC filter is not disconnected is installed on a corner grounded TN system, the drive will be damaged.
- All ACS320 Drive End Grounding screws are removed at the factory. See Product Overview for location details.
- All ELV (extra low voltage) circuits connected to the drive must be used within a zone of equipotential bonding, ie within a zone where all simultaneously accessible conductive parts are electrically connected to prevent hazardous voltages appearing between them. This is accomplished by a proper factory grounding.

Note:

- Even when the motor is stopped, dangerous voltage is present at the power circuit terminals U1, V1, W1 and U2, V2, W2.
- For more technical information, contact the factory or your local ABB sales representative.

General safety

WARNING! Ignoring the following instructions can cause physical injury or death, or damage to the equipment.

- Never attempt to repair a malfunctioning drive; contact your local ABB representative or Authorized Service Center for service support.
- Make sure that dust from drilling does not enter the drive during the installation. Electrically conductive dust inside the drive may cause damage or lead to malfunction.
- Ensure sufficient cooling.

Safe start-up and operation

These warnings are intended for all who plan the operation, start up or operate the drive.

General safety

WARNING! Ignoring the following instructions can cause physical injury or death, or damage to the equipment.

- Before adjusting the drive and putting it into service, make sure that the motor and all driven equipment are suitable for operation throughout the speed range provided by the drive. The drive can be adjusted to operate the motor at speeds above and below the speed provided by connecting the motor directly to the power line.
- Do not activate automatic fault reset functions if dangerous situations can occur. When activated, these functions will reset the drive and resume operation after a fault.
- Do not control the drive with an AC contactor or disconnecting device (disconnecting means); use the control panel start and stop keys and or external commands (I/O or fieldbus). The maximum allowed number of charging cycles of the DC capacitors (ie power-ups by applying power) is two per minute and the maximum total number of chargings is 15,000.

Note:

- If an external source for start command is selected and it is ON, the drive will start immediately after an input voltage break or fault reset unless the drive is configured for 3-wire (a pulse) start/stop.
- When the control location is not set to local (LOC not shown on the display), the stop key on the control panel will not stop the drive. To stop the drive using the control panel, first press the LOC/REM key and then the stop key .

2

Introduction to the manual

What this chapter contains

The chapter describes applicability, target audience and purpose of this manual. It describes the contents of this manual and refers to a list of related manuals for more information. The chapter also contains a flowchart of steps for checking the delivery, installing and commissioning the drive. The flowchart refers to chapters/sections in this manual.

Applicability

The manual is applicable to the ACS320 drive firmware version 4.00E or later. See parameter *3301* FW VERSION on page *188*.

Target audience

The reader is expected to know the fundamentals of electricity, wiring, electrical components and electrical schematic symbols.

The manual is written for readers worldwide. Both SI and imperial units are shown. Special US instructions for installations in the United States are given.

Purpose of the manual

This manual provides information needed for planning the installation, installing, commissioning, using and servicing the drive.

Contents of this manual

The manual consists of the following chapters:

- *Safety* (page *15*) gives safety instructions you must follow when installing, commissioning, operating and servicing the drive.
- *Introduction to the manual* (this chapter, page *18*) describes applicability, target audience, purpose and contents of this manual. It also contains a quick installation and commissioning flowchart.
- *Operation principle and hardware description* (page *22*) describes the operation principle, layout, power connections and control interfaces, type designation label and type designation information in short.
- *Mechanical installation* (page *27*) tells how to check the installation site, unpack, check the delivery and install the drive mechanically.
- *Planning the electrical installation* (page *33*) tells how to check the compatibility of the motor and the drive and select cables, protections and cable routing.
- *Electrical installation* (page *42*) tells how to check the insulation of the assembly and the compatibility with IT (ungrounded) and corner grounded TN systems as well as connect power cables, control cables and embedded fieldbus.
- *Installation checklist* (page *52*) contains a checklist for checking the mechanical and electrical installation of the drive.
- *Start-Up* (page *54*) tells how to start up the drive as well as how to start, stop, change the direction of the motor rotation and adjust the motor speed through the I/O interface.
- *Application Macros* (page *72*) gives a brief description of each application macro together with a wiring diagram showing the default control connections. It also explains how to save a user macro and how to recall it.
- *Program features* (page *90*) describes program features with lists of related user settings, actual signals, and fault and alarm messages.
- *Actual signals and parameters* (page *125*) describes actual signals and parameters. It also lists the default values for the different macros.
- *Fault tracing* (page *328*) tells how to reset faults and view fault history. It lists all alarm and fault messages including the possible cause and corrective actions.
- *Maintenance and hardware diagnostics* (page *344*) contains preventive maintenance instructions and LED indicator descriptions.
- *Technical data* (page *348*) contains technical specifications of the drive, eg ratings, sizes and technical requirements as well as provisions for fulfilling the requirements for CE and other marks.
- *Dimension drawings* (page *363*) shows dimension drawings of the drive.
- *Further information* (inside of the back cover) tells how to make product and service inquiries, get information on product training, provide feedback on ABB Drives manuals and find documents on the Internet.


Related documents

See *List of related manuals* on page *2*.

Categorization by frame size

The ACS320 is manufactured in frame sizes R0…R4. Some instructions and other information which only concern certain frame sizes are marked with the symbol of the frame size (R0…R4). To identify the frame size of your drive, see the table in section *Ratings* on page *349*.

Quick installation and commissioning flowchart

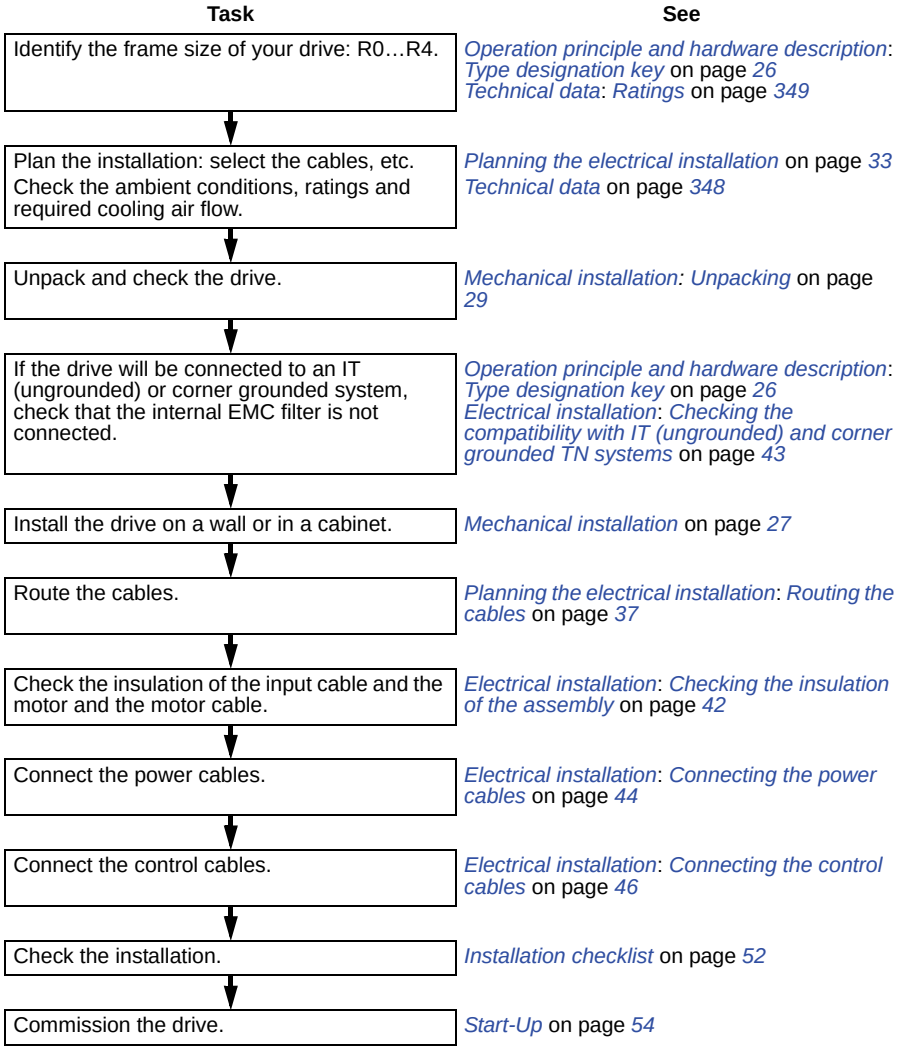
Task
See
Identify the frame size of your drive: R0…R4.
Operation principle and hardware description: Type designation key on page 26
Technical data: Ratings on page 349
Plan the installation: select the cables, etc. Check the ambient conditions, ratings and required cooling air flow.
Planning the electrical installation on page 33
Technical data on page 348
Unpack and check the drive.
Mechanical installation: Unpacking on page 29
If the drive will be connected to an IT (ungrounded) or corner grounded system, check that the internal EMC filter is not connected.
Operation principle and hardware description: Type designation key on page 26
Electrical installation: Checking the compatibility with IT (ungrounded) and corner grounded TN systems on page 43
Install the drive on a wall or in a cabinet.
Mechanical installation on page 27
Route the cables.
Planning the electrical installation: Routing the cables on page 37
Check the insulation of the input cable and the motor and the motor cable.
Electrical installation: Checking the insulation of the assembly on page 42
Connect the power cables.
Electrical installation: Connecting the power cables on page 44
Connect the control cables.
Electrical installation: Connecting the control cables on page 46
Check the installation.
Installation checklist on page 52
Commission the drive.
Start-Up on page 54

3

Operation principle and hardware description


What this chapter contains

The chapter briefly describes the operation principle, layout, type designation label and type designation information. It also shows a general diagram of power connections and control interfaces.

Operation principle

The ACS320 is a wall or cabinet mountable drive for controlling AC motors.


The figure below shows the simplified main circuit diagram of the drive. The rectifier converts three-phase AC voltage to DC voltage. The capacitor bank of the intermediate circuit stabilizes the DC voltage. The inverter converts the DC voltage back to AC voltage for the AC motor.

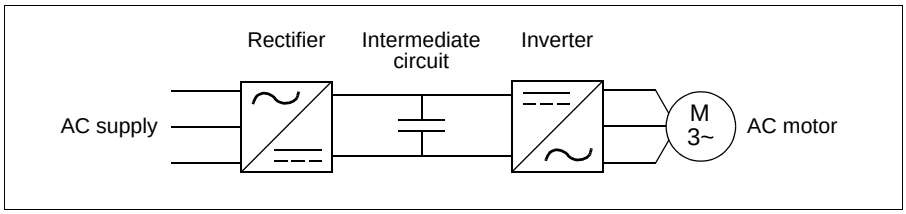

Product overview

Layout

The layout of the drive is presented below. The figure shows a frame size R2 drive. The construction of the different frame sizes R0…R4 varies to some extent.

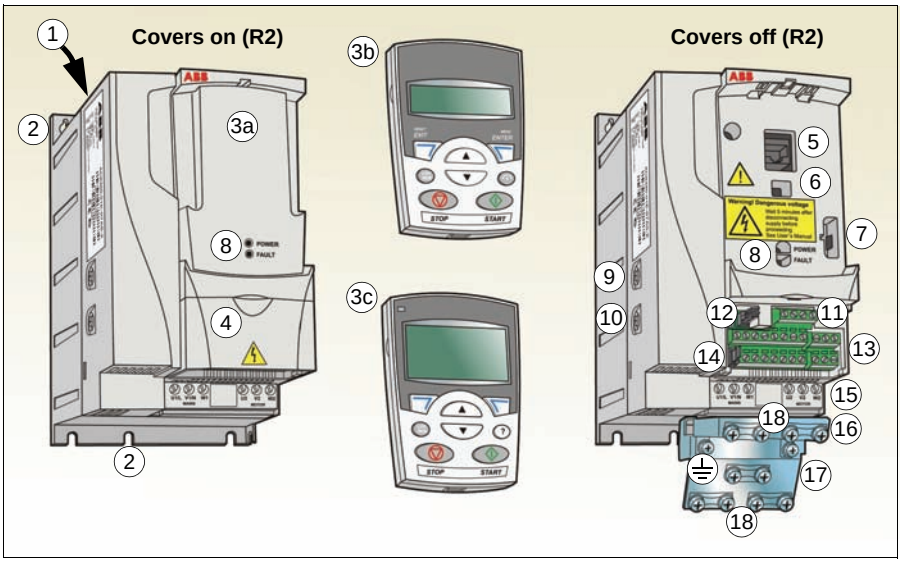


1	Cooling outlet through top cover
2	Mounting holes
3	Panel cover (a) / Basic Control Panel (b) / Assistant Control Panel (c)
4	Terminal cover
5	Panel connection
6	Option connection
7	FlashDrop connection
8	Power OK and Fault LEDs. See section *LEDs* on page *347*.

9	EMC filter grounding screw (EMC). **Note:** The screw is on the front in frame size R4.
10	Varistor grounding screw (VAR)
11	RS-485 connection
12	Jumper J701 for connecting RS-485 termination resistor
13	I/O connections
14	Switch S1 for selecting voltage or current for analog inputs
15	Input power connection (U1, V1, W1) and motor connection (U2, V2, W2). (Braking chopper connection is disabled.)
16	I/O clamping plate
17	Clamping plate
18	Clamps


Power connections and control interfaces

The diagram gives an overview of connections. I/O connections are parameterable. See *Application Macros* on page *72* for I/O connections for the different macros and chapter *Electrical installation* on page *42* for installation in general.

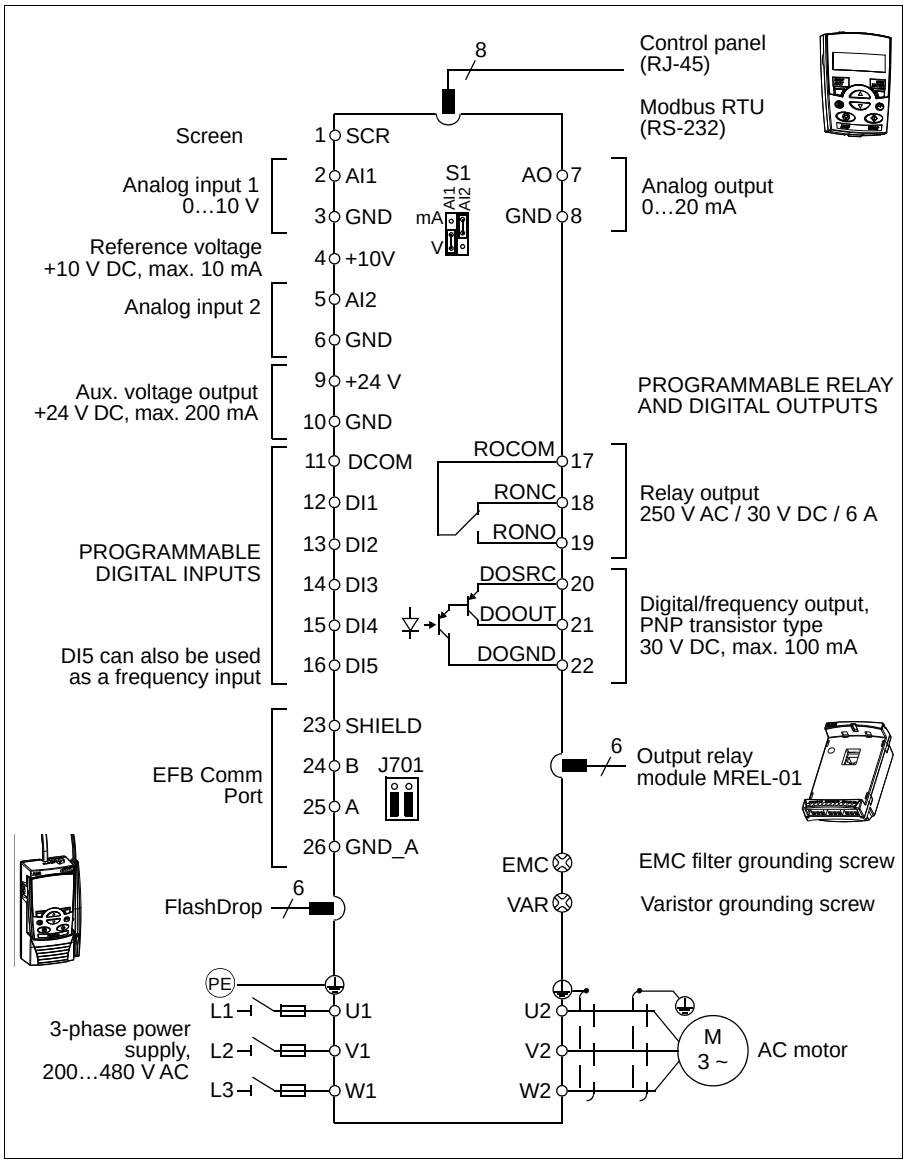

Type designation label


The type designation label is attached to the left side of the drive. An example label and explanation of the label contents are shown below.

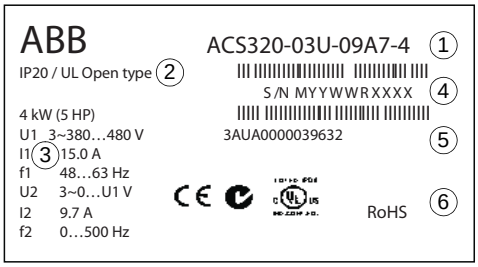

1	Type designation, see section *Type designation key* on page *26*
2	Degree of protection by enclosure (IP and UL/NEMA)
3	Nominal ratings, see section *Ratings* on page *349*.
4	Serial number of format MYYWWRXXXX, where M: Manufacturer YY: 08, 09, 10, …, for 2008, 2009, 2010, … WW: 01, 02, 03, … for week 1, week 2, week 3, … R: A, B, C, … for product revision number XXXX: Integer starting every week from 0001
5	ABB MRP code of the drive
6	CE marking and C-Tick, C-UL US and RoHS marks (the label of your drive shows the valid markings)

Type designation key

The type designation contains information on the specifications and configuration of the drive. You find the type designation on the type designation label attached to the drive. The first digits from the left express the basic configuration, for example ACS320-03U-09A7-4. The optional selections are given after that, separated by + signs, for example +J404. The explanations of the type designation selections are described below.

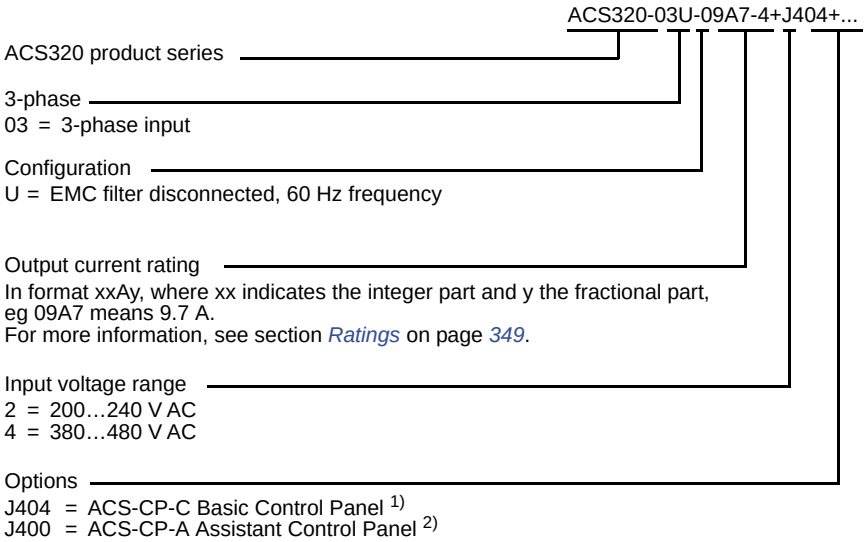
ACS320-03U-09A7-4+J404+...
ACS320 product series
3-phase
03 = 3-phase input
Configuration
U = EMC filter disconnected, 60 Hz frequency
Output current rating
In format xxAy, where xx indicates the integer part and y the fractional part, eg 09A7 means 9.7 A.
For more information, see section Ratings on page 349.
Input voltage range
2 = 200…240 V AC
4 = 380…480 V AC
Options
J404 = ACS-CP-C Basic Control Panel 1)
J400 = ACS-CP-A Assistant Control Panel 2)

1) The ACS320 is compatible with ACS-CP-C Basic Control Panel Rev M or later.
2) The ACS320 is compatible with ACH-CP-B Assistant Control Panel Rev E or later (new panel series manufactured since 2007 with serial number XYYWWRXXXX, where year YY = 07 or greater and revision R = E, F, G, …)

4

Mechanical installation

What this chapter contains

The chapter tells how to check the installation site, unpack, check the delivery and install the drive mechanically.

Checking the installation site

The drive may be installed on the wall or in a cabinet. Check the enclosure requirements for the need to use the NEMA 1 option in wall installations (see chapter *Technical data* on page *348*.

The drive can be installed in three different ways, depending on the frame size:

a) back mounting (all frame sizes)

b) side mounting (frame sizes R0…R2)

c) DIN rail mounting (all frame sizes).

The drive must be installed in an upright position.

Check the installation site according to the requirements below. Refer to chapter *Dimension drawings* on page *363* for frame details.

Requirements for the installation site

Operation conditions

See chapter *Technical data* on page *348* for the allowed operation conditions of the drive.

Wall

The wall should be as close to vertical and even as possible, of non-flammable material and strong enough to carry the weight of the drive.

Floor

The floor/material below the installation should be non-flammable.

Free space around the drive

The required free space for cooling above and below the drive is 75 mm (3 in). No free space is required on the sides of the drive, so drives can be installed side by side.

Required tools

To install the drive, you need the following tools:


- screwdrivers (as appropriate for the mounting hardware used)
- wire stripper
- tape measure
- drill (if the drive will be installed with screws/bolts)
- mounting hardware: screws or bolts (if the drive will be installed with screws/bolts). For the number of screws/bolts, see *With screws* on page *30*.



Unpacking

The drive (1) is delivered in a package that also contains the following items (frame size R2 shown in the figure):

- plastic bag (2) including clamping plate (also used for I/O cables in frame sizes R3 and R4), I/O clamping plate (for frame sizes R0…R2), clamps and screws
- panel cover (3)
- mounting template, integrated into the package (4)
- user's manual (5)
- possible options

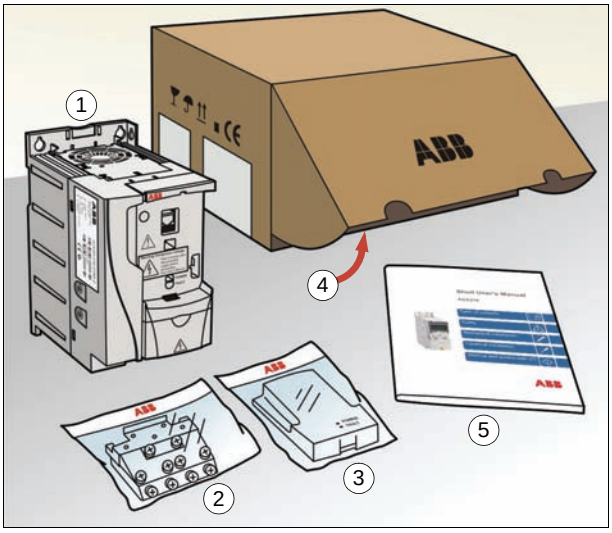

Checking the delivery

Check that there are no signs of damage. Notify the shipper immediately if damaged components are found.

Before attempting installation and operation, check the information on the type designation label of the drive to verify that the drive is of the correct type. See section *Type designation label* on page *25*.

Installing

The instructions in this manual cover drives with the IP20 degree of protection. To comply with NEMA 1, use the MUL-R1, MUL-R3 or MUL-R4 option kit, which is delivered with multilingual installation instructions (3AFE68642868, 3AFE68643147 or 3AUA0000025916, respectively).


Install the drive

Install the drive with screws or on a DIN rail as appropriate.


Note: Make sure that dust from drilling does not enter the drive during the installation.


With screws

1. Mark the hole locations using for example the mounting template cut out from the package. The locations of the holes are also shown in the drawings in chapter *Dimension drawings* on page *363*. The number and location of the holes used depend on how the drive is installed:
   a) back mounting (frame sizes R0…R4): four holes
   b) side mounting (frame sizes R0…R2): three holes; one of the bottom holes is located in the clamping plate.
2. Fix the screws or bolts to the marked locations.

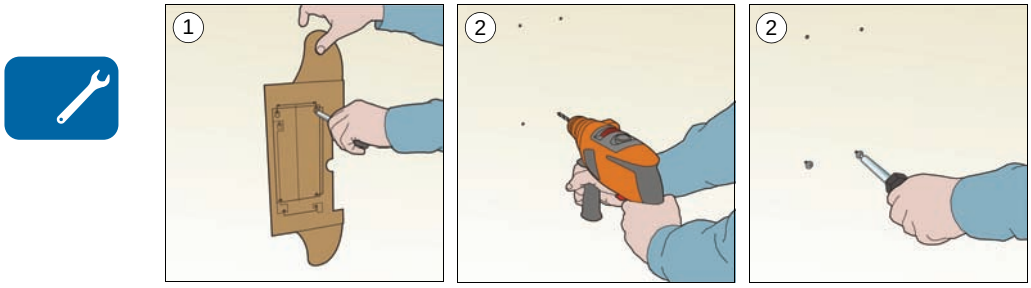


3. Position the drive onto the screws on the wall.
4. Tighten the screws in the wall securely.

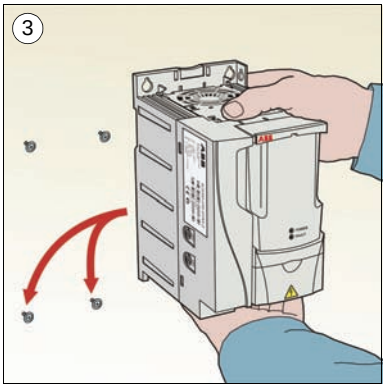


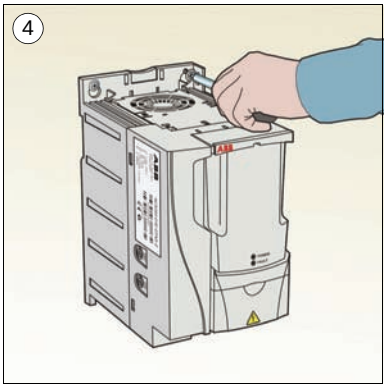

On DIN rail


1. Click the drive to the rail.
   To detach the drive, press the release lever on top of the drive (1b).

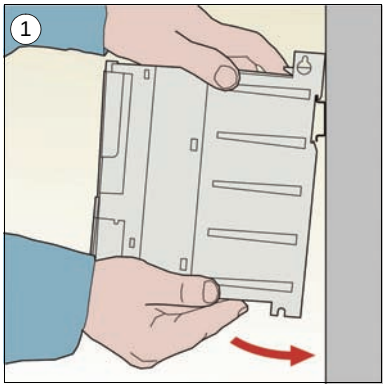


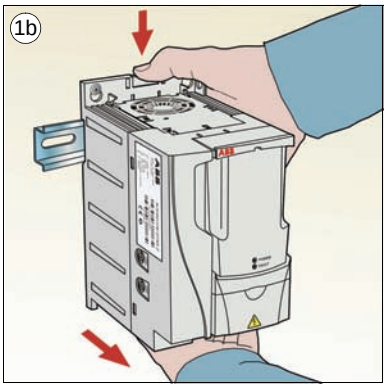

Fasten clamping plates

1. Fasten the clamping plate to the plate at the bottom of the drive with the provided screws.
2. For frame sizes R0…R2, fasten the I/O clamping plate to the clamping plate with the provided screws.

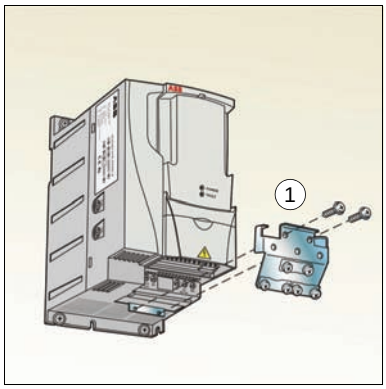

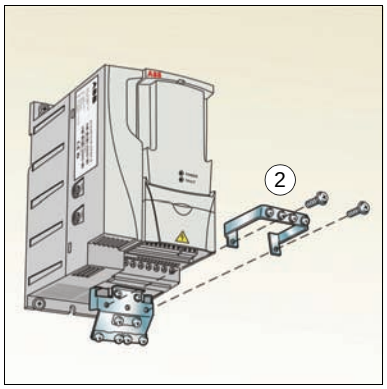

5

Planning the electrical installation

What this chapter contains

The chapter contains the instructions that you must follow when checking the compatibility of the motor and drive, and selecting cables, protections, cable routing and way of operation for the drive.

Note: The installation must always be designed and made according to applicable local laws and regulations. ABB does not assume any liability whatsoever for any installation which breaches the local laws and/or other regulations. Furthermore, if the recommendations given by ABB are not followed, the drive may experience problems that the warranty does not cover.

Implementing the AC power line connection

See the requirements in section *Electric power network specification* on page *355*. Use a fixed connection to the AC power line.

WARNING! As the leakage current of the device typically exceeds 3.5 mA, a fixed installation is required according to IEC 61800-5-1.

Selecting the supply disconnecting device (disconnecting means)

Install a hand-operated supply disconnecting device (disconnecting means) between the AC power source and the drive. The disconnecting device must be of a type that can be locked to the open position for installation and maintenance work.

European union

To meet the European Union Directives, according to standard EN 60204-1, Safety of Machinery, the disconnecting device must be one of the following types:

- a switch-disconnector of utilization category AC-23B (EN 60947-3)
- a disconnector having an auxiliary contact that in all cases causes switching devices to break the load circuit before the opening of the main contacts of the disconnector (EN 60947-3)
- a circuit breaker suitable for isolation in accordance with EN 60947-2.

North America

The ACS320 does not include a disconnect device. A means to disconnect input power must be installed between the AC power source and the ACS320. This branch circuit protection must:

- Be sized to conform to applicable safety regulations, including but not limited to, both National and local electrical codes.
- Be locked in an open position during installation and maintenance work.

The disconnect device must not be used to control the motor. Instead use the control panel, or commands to the I/O terminals for motor control.

Other regions

The disconnecting device must conform to the applicable safety regulations.

Checking the compatibility of the motor and drive

Check that the 3-phase AC induction motor and the drive are compatible according to the rating table in section *Ratings* on page *349*. The table lists the typical motor power for each drive type.

Selecting the power cables

General rules

Dimension the input power and motor cables **according to local regulations**.

- The input power and the motor cables must be able to carry the corresponding load currents. See section *Ratings* on page *349* for the rated currents.
- The cable must be rated for at least 70 °C maximum permissible temperature of the conductor in continuous use. For US, see section *Additional North American requirements* on page *36*.
- The conductivity of the PE conductor must be equal to that of the phase conductor (same cross-sectional area).
- 600 V AC cable is accepted for up to 500 V AC.

- Refer to chapter *Technical data* on page *348* for the EMC requirements.

A symmetrical shielded motor cable (see the figure below) must be used to meet the EMC requirements of the CE and C-Tick marks.

A four-conductor system is allowed for input cabling, but a shielded symmetrical cable is recommended.

Compared to a four-conductor system, the use of a symmetrical shielded cable reduces electromagnetic emission of the whole drive system as well as motor bearing currents and wear.

Alternative power cable types


Power cable types that can be used with the drive are presented below.


Motor cables

(recommended for input cables also)

Symmetrical shielded cable: three phase conductors, a concentric or otherwise symmetrically constructed PE conductor and a shield


Note: A separate PE conductor is required if the conductivity of the cable shield is not sufficient for the purpose.

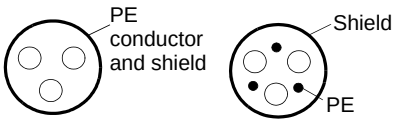



Allowed as input cables

A four-conductor system: three phase conductors and a protective conductor




Motor cable shield

To function as a protective conductor, the shield must have the same cross-sectional area as the phase conductors when they are made of the same metal.

To effectively suppress radiated and conducted radio-frequency emissions, the shield conductivity must be at least 1/10 of the phase conductor conductivity. The requirements are easily met with a copper or aluminium shield. The minimum requirement of the motor cable shield of the drive is shown below. It consists of a

concentric layer of copper wires. The better and tighter the shield, the lower the emission level and bearing currents.

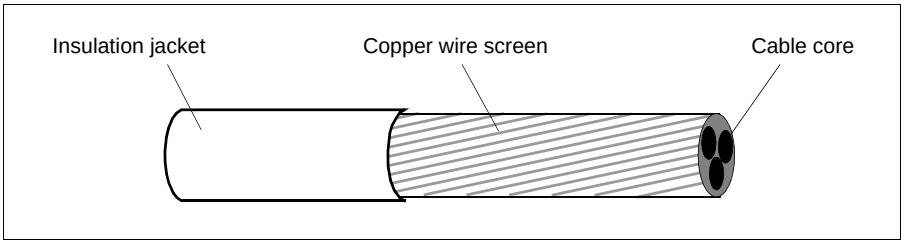

Additional North American requirements

Type MC continuous corrugated aluminium armor cable with symmetrical grounds or shielded power cable is recommended for the motor cables if metallic conduit is not used.

The power cables must be rated for 75 °C (167 °F).

Conduit

Where conduits must be coupled together, bridge the joint with a ground conductor bonded to the conduit on each side of the joint. Bond the conduits also to the drive enclosure. Use separate conduits for input power, motor and control wiring. Do not run motor wiring from more than one drive in the same conduit.

Armored cable / shielded power cable

Six-conductor (three phases and three ground) type MC continuous corrugated aluminium armor cable with symmetrical grounds is available from the following suppliers (trade names in parentheses):

- Anixter Wire & Cable (Philsheath)
- BICC General Corp (Philsheath)
- Rockbestos Co. (Gardex)
- Oaknite (CLX).

Shielded power cable is available from the following suppliers:

- Belden
- LAPPKABEL (ÖLFLEX)
- Pirelli.


Selecting the control cables

General rules

All analog control cables and the cable used for the frequency input must be shielded.

Use a double-shielded twisted pair cable (Figure a, for example JAMAK by Draka NK Cables) for analog signals. Employ one individually shielded pair for each signal. Do not use common return for different analog signals.

A double-shielded cable is the best alternative for low-voltage digital signals, but a single-shielded or unshielded twisted multipair cable (Figure b) is also usable. However, for frequency input, always use a shielded cable.

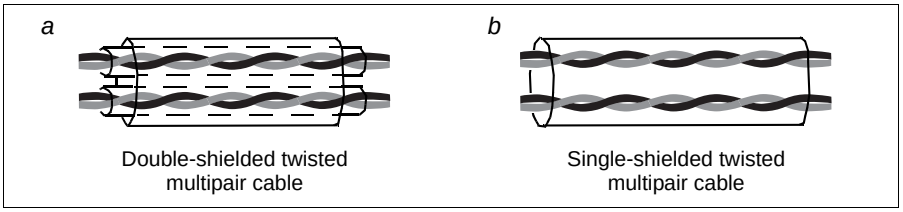

Run analog and digital signals in separate cables.

Relay-controlled signals, providing their voltage does not exceed 48 V, can be run in the same cables as digital input signals. It is recommended that the relay-controlled signals are run as twisted pairs.

Never mix 24 V DC and 115/230 V AC signals in the same cable.

Relay cable

The cable type with braided metallic screen (for example ÖLFLEX by LAPPKABEL) has been tested and approved by ABB.

Control panel cable

In remote use, the cable connecting the control panel to the drive must not exceed 3 m (10 ft). The cable type tested and approved by ABB is used in control panel option kits.


Routing the cables

Route the motor cable away from other cable routes. Motor cables of several drives can be run in parallel installed next to each other. It is recommended that the motor cable, input power cable and control cables are installed on separate trays. Avoid long parallel runs of motor cables with other cables to decrease electromagnetic interference caused by the rapid changes in the drive output voltage.


Where control cables must cross power cables make sure that they are arranged at an angle as near to 90 degrees as possible.

The cable trays must have good electrical bonding to each other and to the grounding electrodes. Aluminium tray systems can be used to improve local equalizing of potential.


A diagram of the cable routing is shown below.

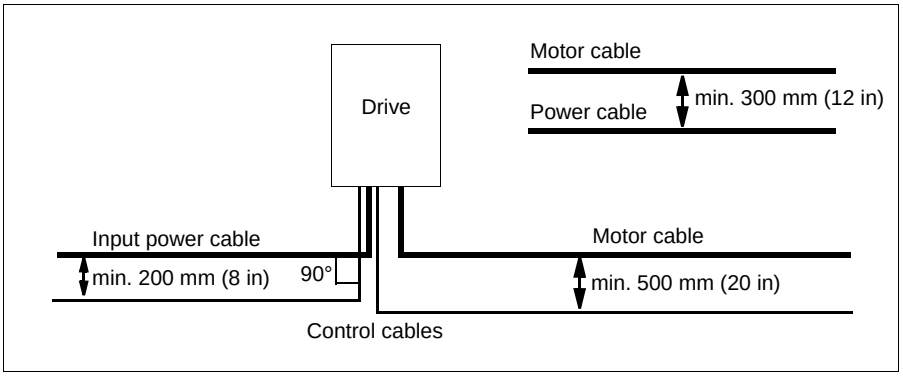

Control cable ducts

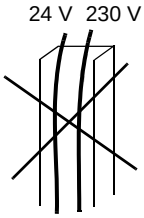

Not allowed unless the 24 V cable is insulated for 230 V or insulated with an insulation sleeving for 230 V.

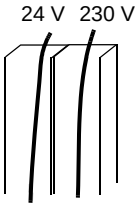


Lead 24 V and 230 V control cables in separate ducts inside the cabinet.

Protecting the drive, input power cable, motor and motor cable in short circuit situations and against thermal overload

Protecting the drive and input power cable in short-circuit situations

Arrange the protection according to the following guidelines.

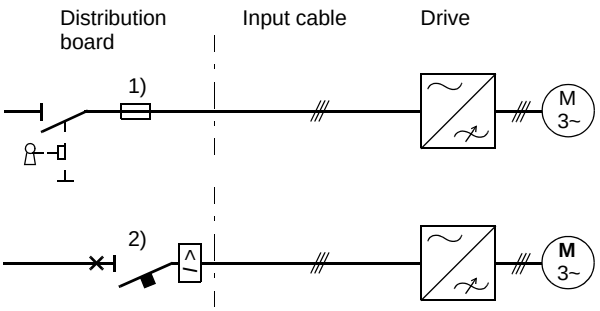Circuit diagram	Short-circuit protection
	Protect the drive and input cable with fuses or a circuit breaker. See footnotes 1) and 2).

1) Size the fuses according to instructions given in chapter *Technical data* on page *348*. The fuses will protect the input cable in short-circuit situations, restrict drive damage and prevent damage to adjoining equipment in case of a short-circuit inside the drive.

2) Circuit breakers which have been tested by ABB with the ACS350 can be used. Fuses must be used with other circuit breakers. Contact your local ABB representative for the approved breaker types and supply network characteristics.

WARNING! Due to the inherent operating principle and construction of circuit breakers, independent of the manufacturer, hot ionized gases may escape from the breaker enclosure in case of a short-circuit. To ensure safe use, special attention must be paid to the installation and placement of the breakers. Follow the manufacturer's instructions.

Protecting the motor and motor cable in short-circuit situations

The drive protects the motor and motor cable in a short-circuit situation when the motor cable is dimensioned according to the nominal current of the drive. No additional protection devices are needed.

Protecting the drive, motor cable and input power cable against thermal overload

The drive protects itself and the input and motor cables against thermal overload when the cables are dimensioned according to the nominal current of the drive. No additional thermal protection devices are needed.

WARNING! If the drive is connected to multiple motors, a separate thermal overload switch or a circuit breaker must be used for protecting each cable and motor. These devices may require a separate fuse to cut off the short-circuit current.

Protecting the motor against thermal overload

According to regulations, the motor must be protected against thermal overload and the current must be switched off when overload is detected. The drive includes a motor thermal protection function that protects the motor and switches off the current when necessary. It is also possible to connect a motor temperature measurement to the drive. The user can tune both the thermal model and the temperature measurement function further by parameters.

The most common temperature sensors are:

- motor sizes IEC180…225: thermal switch (for example Klixon)
- motor sizes IEC200…250 and larger: PTC or Pt100.

For more information on the thermal model, see section *Motor Thermal Protection* on page *107*. For more information on the temperature measurement function see section *Motor temperature measurement through the standard I/O* on page *116*.

Using residual current devices (RCD) with the drive

ACS320-03x drives are suitable to be used with residual current devices of Type B. Other measures for protection in case of direct or indirect contact, such as separation from the environment by double or reinforced insulation or isolation from the supply system by a transformer, can also be applied.

Implementing a bypass connection

WARNING! Never connect the supply power to the drive output terminals U2, V2 and W2. Power line voltage applied to the output can result in permanent damage to the drive.


If frequent bypassing is required, employ mechanically connected switches or contactors to ensure that the motor terminals are not connected to the AC power line and drive output terminals simultaneously.

Protecting the contacts of relay outputs

Inductive loads (relays, contactors, motors) cause voltage transients when switched off.

Equip inductive loads with noise attenuating circuits (varistors, RC filters [AC] or diodes [DC]) in order to minimize the EMC emission at switch-off. If not suppressed, the disturbances may connect capacitively or inductively to other conductors in the control cable and form a risk of malfunction in other parts of the system.

Install the protective component as close to the inductive load as possible. Do not install protective components at the I/O terminal block.

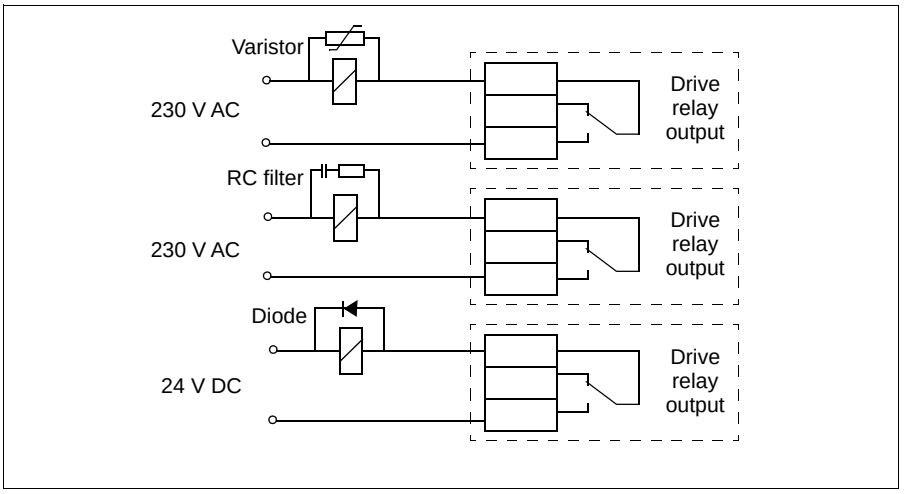

6

Electrical installation

What this chapter contains

The chapter tells how to check the insulation of the assembly and the compatibility with IT (ungrounded) and corner grounded TN systems as well as connect power cables, control cables and embedded fieldbus.

WARNING! The work described in this chapter may only be carried out by a qualified electrician. Follow the instructions in chapter *Safety* on page 15. Ignoring the safety instructions can cause injury or death.

Make sure that the drive is disconnected from the input power during installation. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.

Checking the insulation of the assembly

Drive

Do not make any voltage tolerance or insulation resistance tests (for example hi-pot or megger) on any part of the drive as testing can damage the drive. Every drive has been tested for insulation between the main circuit and the chassis at the factory. Also, there are voltage-limiting circuits inside the drive which cut down the testing voltage automatically.


Input power cable

Check the insulation of the input power cable according to local regulations before connecting to the drive.

Motor and motor cable

Check the insulation of the motor and motor cable as follows:

1. Check that the motor cable is connected to the motor and disconnected from the drive output terminals U2, V2 and W2.
2. Measure the insulation resistance between each phase conductor and the Protective Earth conductor using a measuring voltage of 500 V DC. The insulation resistance of an ABB motor must exceed 10 Mohm (reference value at 25 °C or 77 °F). For the insulation resistance of other motors, please consult the manufacturer's instructions.
   Note: Moisture inside the motor casing will reduce the insulation resistance. If moisture is suspected, dry the motor and repeat the measurement.

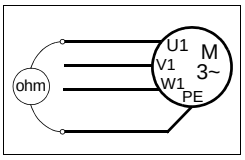


Checking the compatibility with IT (ungrounded) and corner grounded TN systems

WARNING! If a drive whose EMC filter is not disconnected is installed on an IT system (an ungrounded power system or a high resistance-grounded [over 30 ohms] power system), the system will be connected to ground potential through the EMC filter capacitors of the drive. This may cause danger or damage the drive.

If a drive whose EMC filter is not disconnected is installed on a corner grounded TN system, the drive will be damaged.


1. If you have an IT (ungrounded) or corner grounded TN system, disconnect the internal EMC filter by removing the EMC screw. For 3-phase U-type drives (with type designation ACS320-03U-), the EMC screw is already removed at the factory and replaced by a plastic one.

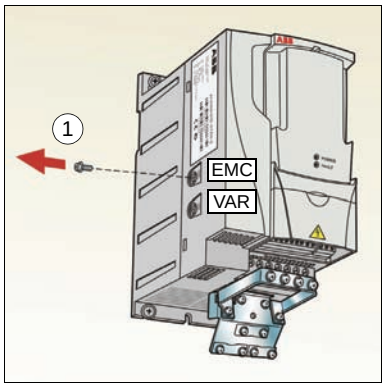

Note: In frame size R4 the EMC screw is located to the right of terminal W2.

Connecting the power cables

Connection diagram

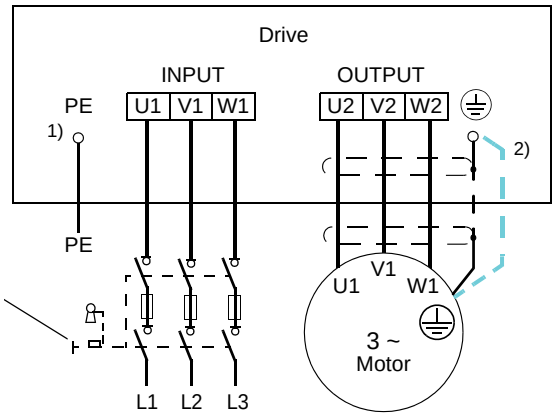

For alternatives, see section *Selecting the supply disconnecting device (disconnecting means)* on page *33*.

1) Ground the other end of the PE conductor at the distribution board.

2) Use a separate grounding cable if the conductivity of the cable shield is insufficient (smaller than the conductivity of the phase conductor) and there is no symmetrically constructed grounding conductor in the cable. See section *Selecting the power cables* on page *34*.

Note:

Do not use an asymmetrically constructed motor cable.


If there is a symmetrically constructed grounding conductor in the motor cable in addition to the conductive shield, connect the grounding conductor to the grounding terminal at the drive and motor ends.

Route the motor cable, input power cable and control cables separately. For more information, see section *Routing the cables* on page *37*.

Grounding of the motor cable shield at the motor end


For minimum radio frequency interference:


- ground the cable by twisting the shield as follows: flattened width $\geq$ 1/5 · length
- or ground the cable shield 360 degrees at the lead-through of the motor terminal box.

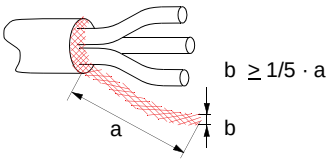


Connection procedure

1. Fasten the grounding conductor (PE) of the input power cable under the grounding clamp. Connect the phase conductors to the U1, V1 and W1 terminals. Use a tightening torque of 0.8 N·m (7 in-lb) for frame sizes R0…R2, 1.7 N·m (15 in-lb) for R3, and 2.5 N·m (22 in-lb) for R4.
2. Strip the motor cable and twist the shield to form as short a pigtail as possible. Fasten the twisted shield under the grounding clamp. Connect the phase conductors to the U2, V2 and W2 terminals. Use a tightening torque of 0.8 N·m (7 in-lb) for frame sizes R0…R2, 1.7 N·m (15 in-lb) for R3, and 2.5 N·m (22 in-lb) for R4.
3. Secure the cables outside the drive mechanically.

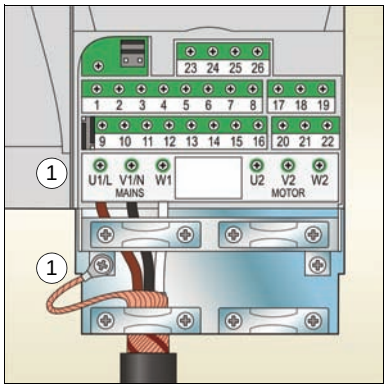

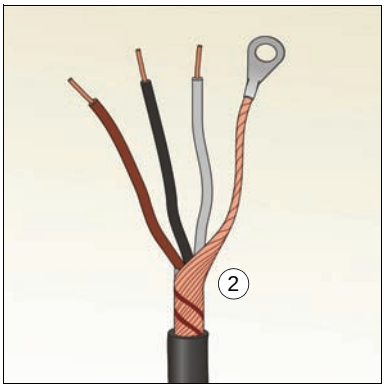


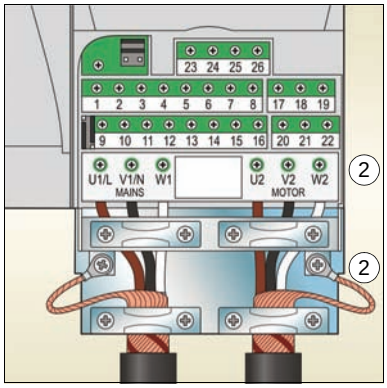

Connecting the control cables

I/O terminals

The figure below shows the I/O terminals. Tightening torque is 0.4 N·m / 3.5 in-lb.

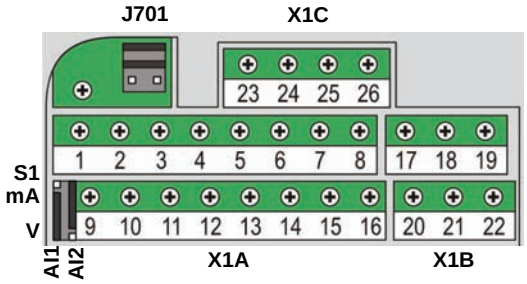

J701: Connects 120 ohm termination resistor. See page *51*.

S1: Selects voltage or current as the signal types for analog inputs AI1 and AI2.

X1A:
1: SCR
2: AI1
3: GND
4: +10 V
5: AI2
6: GND
7: AO
8: GND
9: +24 V
10: GND
11: DCOM
12: DI1
13: DI2
14: DI3
15: DI4
16: DI5 digital or frequency input


X1B:
17: ROCOM
18: RONC
19: RONO
20: DOSRC
21: DOOUT
22: DOGND

X1C:
23: SCR
24: B
25: A
26: GND_A

Voltage and current selection for analog inputs

Switch S1 selects voltage (0 [2]…10 V / -10…10 V) or current (0 [4]…20 mA / -20…20 mA) as the signal types for analog inputs AI1 and AI2. The factory settings are unipolar voltage for AI1 (0 [2]…10 V) and unipolar current for AI2 (0 [4]…20 mA), which correspond to the default usage in the application macros. The switch is located to the left of I/O terminal 9 (see the I/O terminal figure above).






Top position: I (0 [4]…20 mA, default for AI2; or -20…20 mA)
Bottom position: U (0 [2]…10 V, default for AI1; or -10…10 V)

Permanently affix control cables with a minimum 1/4" spacing from power cables.


Voltage and current connection for analog inputs

Bipolar voltage (-10…10 V) and current (-20…20 mA) are also possible. If a bipolar connection is used instead of a unipolar one, see section *Programmable analog inputs* on page *97* for how to set parameters accordingly.

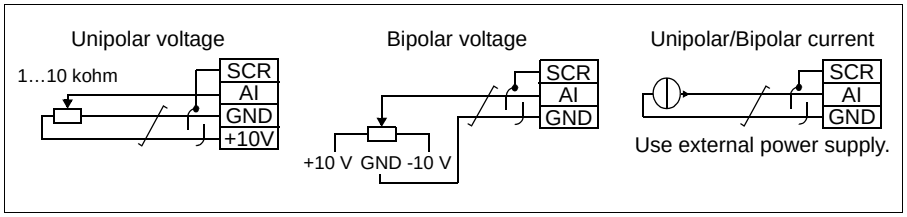


PNP and NPN configuration for digital inputs

You can wire the digital input terminals in either a PNP or NPN configuration.

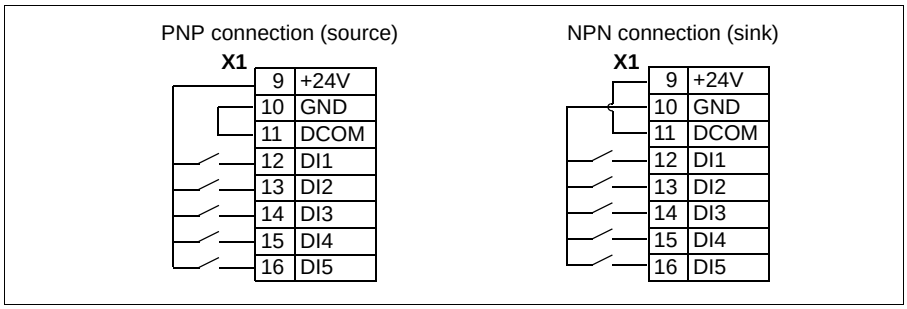

External power supply for digital inputs

For using an external +24 V supply for the digital inputs, see the figure below.

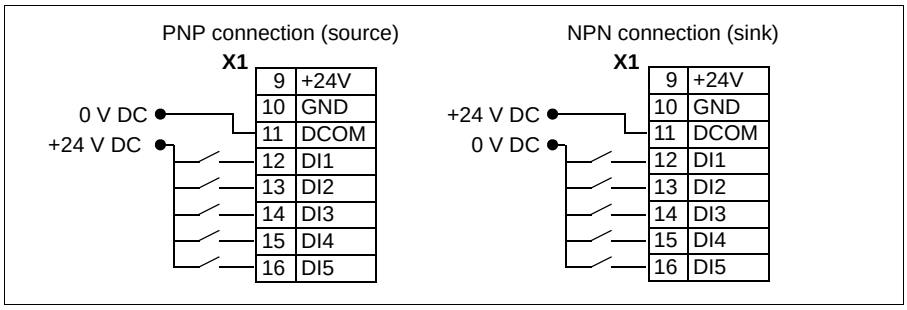


Frequency input

If DI5 is used as a frequency input, see section *Frequency input* on page *100* for how to set parameters accordingly.

Connection example of a two-wire sensor

HVAC Default, Supply Fan, Return Fan, Cooling Tower Fan, Condenser, Booster pumps, PFC Control, Internal Timer, Dual Setpoint with PID, E-Clipse and Dual Setpoint with PID and Constant Speeds macros (see section *Application Macros* on page *72*) use analog input 2 (AI2). The macro wiring diagrams for these macros show the connection when a separately powered sensor is used. The figure below gives an example of a connection using a two-wire sensor.

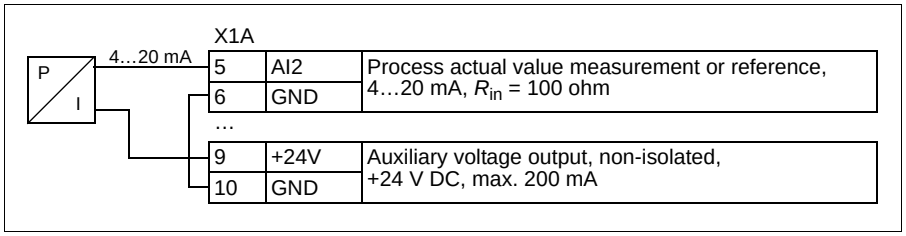


Note: The sensor is supplied through its current output. Thus the output signal must be 4…20 mA.

Default I/O connection diagram

The default connection of the control signals depends on the application macro in use, which is selected with parameter *9902* APPLIC MACRO.

The default macro is the HVAC Default. It provides a general purpose I/O configuration with three constant speeds. Parameter values are the default values given in section *Parameters in the short parameter view* on page *126*. For information on other macros, see chapter *Application Macros* on page *72*.

The default I/O connections for the ABB standard macro are given in the figure below.

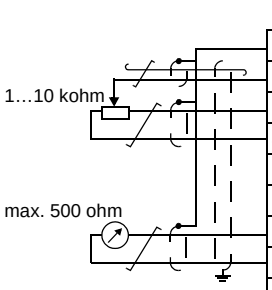

X1A

1	SCR	Signal cable shield (screen)
2	AI1	**External reference**: 0…10 V or 0...20 mA
3	GND	Analog input circuit common
4	+10V	Reference voltage: +10 V DC, max. 10 mA
5	AI2	PID feedback 0…10 V or 0...20 mA
6	GND	Analog input circuit common
7	AO	**Output frequency value**: 0…20 mA
8	GND	Analog output circuit common
9	+24V	Auxiliary voltage output: +24 V DC, max. 200 mA
10	GND	Auxiliary voltage output common
11	DCOM	Digital input common
12	DI1	**Stop (0) / Start (1)**
13	DI2	**Not Configured**
14	DI3	**Constant speed selection** [1]
15	DI4	**Safety Interlock**
16	DI5	**Not Configured**

X1B


17	ROCOM	Relay output 1 **Default operation: Ready**
18	RONC	
19	RONO	
20	DOSRC	Digital output, max. 100 mA **No fault [Fault (-1)]**
21	DOOUT	
22	DOGND	

[1] See parameter *Group 12: Constant Speeds*:


DI3	Operation (parameter)
0	Set speed through AI1
1	Speed 1 (*1202*)
0	Speed 2 (*1203*)
1	Speed 3 (*1204*)

Connection procedure

1. Remove the terminal cover by simultaneously pushing the recess and sliding the cover off the frame.
2. *Digital signals*: Strip the outer insulation of the digital signal cable 360 degrees and ground the bare shield under the clamp.
3. Connect the conductors of the cable to the appropriate terminals. Use a tightening torque of 0.4 N·m (3.5 in-lb).
4. For double-shielded cables, twist also the grounding conductors of each pair in the cable together and connect the bundle to the SCR terminal (terminal 1).

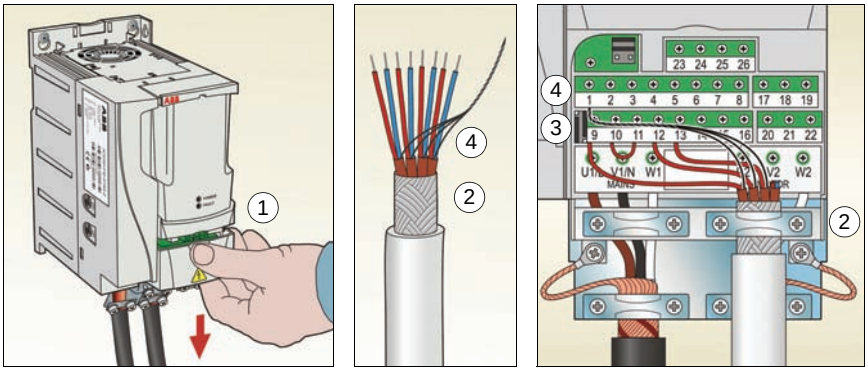

5. *Analog signals*: Strip the outer insulation of the analog signal cable 360 degrees and ground the bare shield under the clamp.
6. Connect the conductors to the appropriate terminals. Use a tightening torque of 0.4 N·m (3.5 in-lb).
7. Twist the grounding conductors of each pair in the analog signal cable together and connect the bundle to the SCR terminal (terminal 1).
8. Secure all cables outside the drive mechanically.
9. Slide the terminal cover back in place.

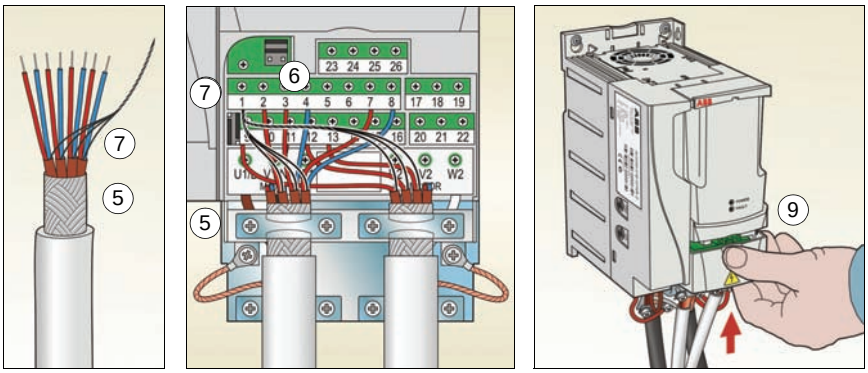


Connecting the embedded fieldbus

Embedded fieldbus can be connected to the drive with RS-485 or RS-232.


Connection diagram

RS-485

The figure below shows the fieldbus connection.

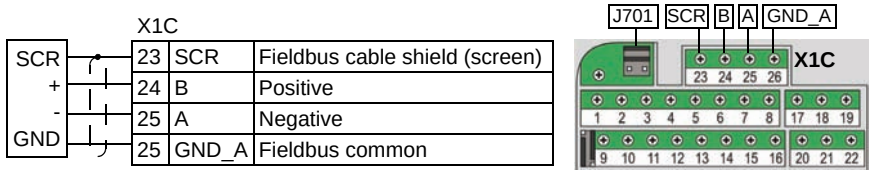


Terminate the RS-485 bus with a 120 ohm resistor at the end of the network by setting the jumper J701 shunts as in the figure below.

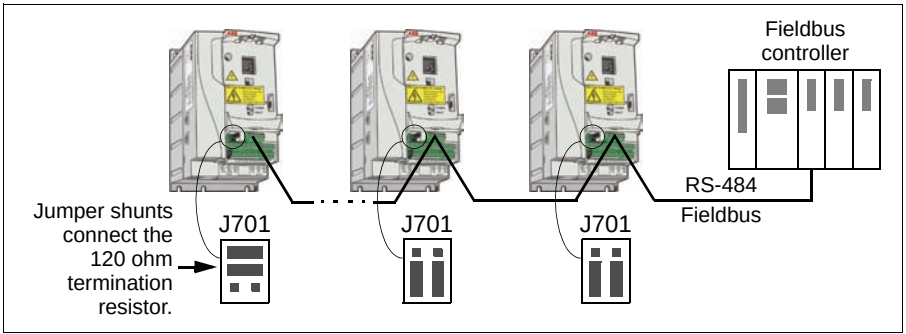

RS-232

Plug a communication cable into the control panel connection X2. The cable must be shorter than 3 meters.

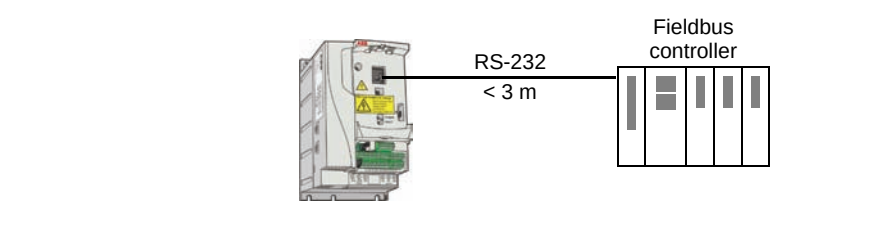

7

Installation checklist

Checking the installation

Check the mechanical and electrical installation of the drive before start-up. Go through the checklist below together with another person. Read chapter *Safety* on page *15* of this manual before you work on the drive.

	Check
MECHANICAL INSTALLATION	
☐	The ambient operating conditions are allowed. (See *Mechanical installation: Checking the installation site* on page *27* as well as *Technical data: Losses, cooling data and noise* on page *353* and *Ambient conditions* on page *357*.)
☐	The drive is fixed properly on an even vertical non-flammable wall. (See *Mechanical installation* on page *27*.)
☐	The cooling air will flow freely. (See *Mechanical installation*: *Free space around the drive* on page *28*.)
☐	The motor and the driven equipment are ready for start. (See *Planning the electrical installation*: *Checking the compatibility of the motor and drive* on page *34* as well as *Technical data: Motor connection data* on page *355*.
ELECTRICAL INSTALLATION (See *Planning the electrical installation* on page *33* and *Electrical installation* on page *42*.)	
☐	For ungrounded and corner grounded systems: The internal EMC filter is disconnected (EMC screw removed).
☐	The capacitors are reformed if the drive has been stored over a year.
☐	The drive is grounded properly.
☐	The input power voltage matches the drive nominal input voltage.
☐	The input power connections at U1, V1 and W1 are OK and tightened with the correct torque.
☐	Appropriate input power fuses and disconnector are installed.
☐	The motor connections at U2, V2 and W2 are OK and tightened with the correct torque.


	Check
☐	The motor cable, input power cable and control cables are routed separately.
☐	Use wire ties to permanently affix control/communications wiring to the clamps provided to maintain a minimum 1/4" spacing from power wiring.
☐	The external control (I/O) connections are OK.
☐	The input power voltage cannot be applied to the output of the drive (with a bypass connection).
☐	Terminal cover and, for NEMA 1, hood and connection box, are in place.

8

Start-Up

HVAC Control Panel Features

The ACS320 HVAC control panel (ACS-CP-B) features:

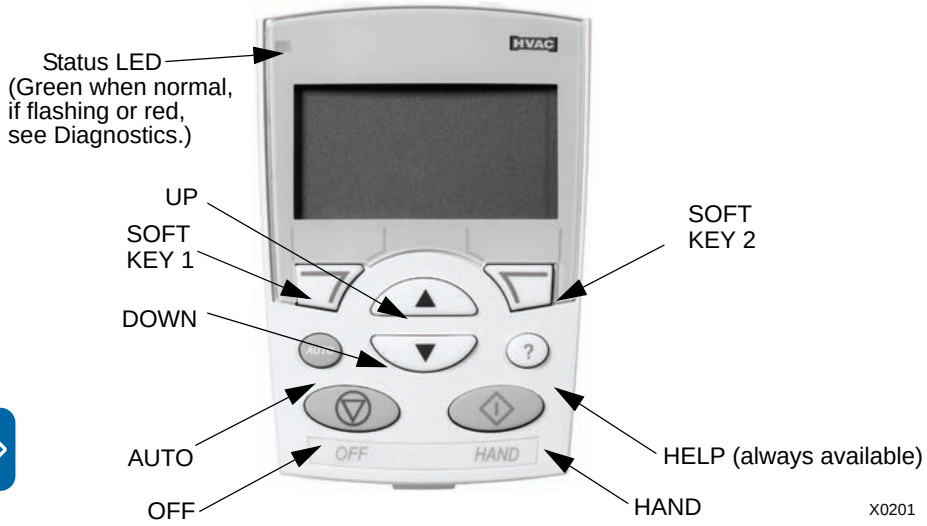

- Language selection for the display
- Drive connection that can be made or detached at any time
- Start-up assistant to facilitate drive commissioning
- Copy function for moving parameters to other ACS320 drives
- Backup function for saving parameter sets
- Context sensitive help
- Real-time clock

General Display Features

Soft Key Functions

The soft key functions are defined by text displayed just above each key.

Display Contrast

To adjust display contrast, simultaneously press  and  or  , as appropriate.

Macros

Note! Selecting the appropriate macro should be part of the original system design, since the control wiring installed depends on the macro used.

---

1. Review the macro descriptions in “Application Macros” on page 72. Use the macro that best fits system needs.
2. Edit parameter 9902 to select the appropriate macro. Use either of the following:

- Use the Start-up Assistant, which displays the macro selection immediately after motor parameter setup.
- Refer to “Parameters Mode” on page 61, for parameter editing instructions.

Turning - Parameters

The system can benefit from one or more of the ACS320 special features, and/or fine tuning.

1. Review the parameter descriptions in “ParameterDescriptions” starting on page 61. Enable options and fine tune parameter values as appropriate for the system.
2. Edit parameters as appropriate.

Fault and Alarm Adjustments

The ACS320 can detect a wide variety of potential system problems. For example, initial system operation may generate faults of alarms that indicate set-up problems.

1. Faults and alarms are reported on the control panel with a number. Note the number reported.
2. Review the description provided for the reported fault/alarm:

- Use the fault and alarm listings shown in *Chapter 12*, *Fault tracing* on *328*.
- Press the help key (Assistant Control Panel only) while fault or alarm is displayed.

3. Adjust the system or parameters as appropriate.



Start-Up

Start-Up can be performed in two ways:

- Using the Start-Up Assistant.
- Changing the parameters individually.

Start-Up by Using the Start-Up Assistant


To start the Start-Up Assistant, follow these steps:

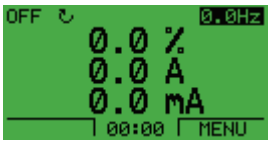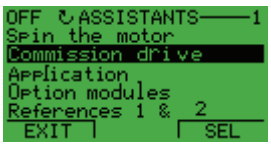1	Select MENU to enter the main menu		
2	Select ASSISTANTS with the Up/ Down buttons and select ENTER.		
3	Scroll to COMMISSION DRIVE with the Up/Down buttons.		
4	Change the values suggested by the assistant to your preferences and then press SAVE after every change.		

The Start-Up Assistant will guide you through the start-up.

Start-Up by Changing the Parameters Individually

To change the parameters, follow these steps:

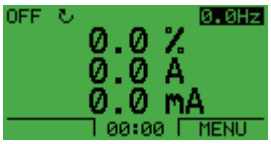1	Select MENU to enter the main menu.		
2	Select the Parameters mode with the UP/DOWN buttons and select ENTER to select the Parameters mode.		
3	Select the appropriate parameter group with the UP/DOWN buttons and select SEL		
4	Select the appropriate parameter in a group with the UP/DOWN buttons.Select EDIT to change the parameter value.		
5	Press the UP/DOWN buttons to change the parameter value.		
6	Select SAVE to store the modified value or select CANCEL to leave the set mode. Any modifications not saved are cancelled.		
7	Select EXIT to return to the listing of parameter groups, and again to return to the main menu.		

To complete the control connections by manually entering the parameters, see "Parameters Mode" in this section.

For detailed hardware description, see the "Technical Data" section.

Note! The current parameter value appears below the highlighted parameter.

Note! To view the default parameter value, press the UP/DOWN buttons simultaneously.

Note! The most typical and necessary parameters to change are parameter groups 99 Start-up data, 10 Start/Stop/Dir, 11 Reference Select, 20 Limits, 21 Start/Stop, 22 Accel/Decel, 30 Fault Functions and 98 & 53 Groups for Comms.

Note! To restore the default factory settings, select the application macro HVAC default.



Modes

The HVAC control panel has several different modes for configuring, operating and diagnosing the drive. The modes are:

- **Standard display mode –** Shows drive status information and operates the drive.
- **Parameters mode –** Edits parameter values individually.
- **Start-up assistant mode –** Guides the start-up and configuration.
- **Changed parameters mode –** Shows changed parameters.
- **Fault logger mode** – Shows the drive fault history.
- **Drive parameter backup mode –** Stores or uploads the parameters.
- **Clock set mode –** Sets the time and date for the drive.
- **I/O settings mode –** Checks and edits the I/O settings.
- **Alarm mode** – Reporting mode triggered by drive alarms.

Standard Display Mode

Use the standard display mode to read information on the drive's status and to operate the drive. To reach the standard display mode, press EXIT until the LCD display shows status information as described below.

Status Information

Top. The top line of the LCD display shows the basic status information of the drive.


- HAND **–** Indicates that the drive control is local, that is, from the control panel.
- AUTO **–** Indicates that the drive control is remote, such as the basic I/O (X1) or fieldbus.
- **–** Indicates the drive and motor rotation status as follows:

Control panel display	Significance
Rotating arrow (clockwise or counterclockwise)	• Drive is running and at setpoint • Shaft direction is forward or reverse
Rotating dotted arrow blinking	Drive is running but not at setpoint
Stationary dotted arrow	Start command is present, but motor is not running. E.g. start enable is missing.

- Upper right **–** shows the active reference.


Middle. Using parameter group 34, the middle of the LCD display can be configured to display:

- One to three parameter values **–** The default display shows parameters 0103 (OUTPUT FREQ) in percentages, 0104 (CURRENT) in amperes and 0120 (AI1) in milliamperes.

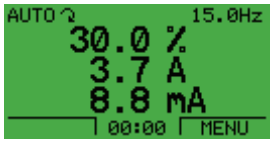

- Use parameters 3401, 3408, and 3415 to select the parameters (from Group 01) to display. Entering “parameter” 0100 results in no parameter displayed. For example, if 3401 = 0100 and 3415 = 0100, then only the parameter specified by 3408 appears in the Control Panel display.
- You can also scale each parameter in the display, for example, to convert the motor speed to a display of conveyor speed. Parameters 3402…3405 scale the parameter specified by 3401, parameters 3409…3412 scale the parameter specified by 3408, etc.

- A bar meter rather than one of the parameter values.
  - Enable bar graph displays using parameters 3404, 3411 and 3418.

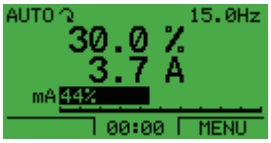

Bottom. The bottom of the LCD display shows:

- Lower corners **–** show the functions currently assigned to the two soft keys.
- Lower middle **–** displays the current time (if configured to show the time).

Operating the Drive

AUTO/HAND – The very first time the drive is powered up, it is in the auto control (AUTO) mode, and is controlled from the Control terminal block X1.

To switch to hand control (HAND) and control the drive using the control panel, press and hold the  or  button.

- Pressing the HAND button switches the drive to hand control while keeping the drive running.
- Pressing the OFF button switches to hand control and stops the drive.

To switch back to auto control (AUTO), press and hold the  button.

Hand/Auto/Off – To start the drive press the HAND or AUTO buttons, to stop the drive press the OFF button.



Reference – To modify the reference (only possible if the display in the upper right corner is in reverse video) press the UP or DOWN buttons (the reference changes immediately).

The reference can be modified in the local control mode, and can be parameterized (using Group 11 reference select) to also allow modification in the remote control mode.

Note! The Start/Stop, Shaft direction and Reference functions are only valid in local control (LOC) mode.

Parameters Mode

To change the parameters, follow these steps:

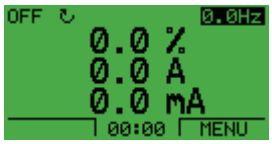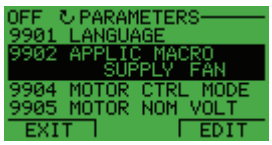1	Select MENU to enter the main menu.		
2	Select the Parameters mode with the UP/DOWN buttons, and select ENTER to select the Parameters mode.		
3	Select the appropriate parameter group with the UP/DOWN buttons and select SEL		
4	Select the appropriate parameter in a group with the UP/DOWN buttons. Select EDIT to change the parameter.		
5	Press the UP/DOWN buttons to change the parameter value.		
6	Select SAVE to store the modified value or select CANCEL to leave the set mode. • Any modifications not saved are cancelled. • Each individual parameter setting is valid immediately after pressing SAVE.		
7	Select EXIT to return to the listing of parameter groups, and again to return to the main menu.		

To complete the control connections by manually entering the parameters, see "Parameters Mode" in the this section.

For detailed hardware description, see the Appendix.

Note! The current parameter value appears below the highlighted parameter.



Note! To view the default parameter value, press the UP/DOWN buttons simultaneously.

Note! The most typical and necessary parameters to change are parameter groups 99 Start-up data, 10 Start/Stop/Dir, 11 Reference Select, 20 Limits, 21 Start/Stop, 22 Accel/Decel, and 30 Fault Functions.

Note! To restore the default factory settings, select the application macro HVAC default.

Start-Up Assistant Mode

To start the Start-Up Assistant, follow these steps:

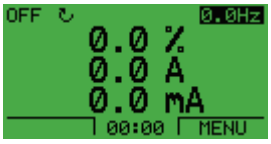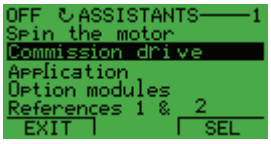1	Select MENU to enter the main menu		
2	Select ASSISTANTS with the Up/Down buttons and select ENTER.		
3	Scroll to COMMISSION DRIVE with the Up/Down buttons and select SEL.		

4	Change the values suggested by the assistant to your preferences and then press SAVE after every change.		

The Start-Up Assistant will guide you through the start-up.

The Start-Up Assistant guides you through the basic programming of a new drive. (You should familiarize yourself with basic control panel operation and follow the steps outlined above.) At the first start, the drive automatically suggests entering the first task, Language Select.The assistant also checks the values entered to prevent entries that are out of range.

The Start-Up Assistant is divided into tasks. You may activate the tasks one after the other, as the Start-Up Assistant suggests, or independently.

Note! If you want to set the parameters independently, use the Parameters mode.


The order of tasks presented by the Start-up Assistant depends on your entries. The following task list is typical.

Task name	Description
Spin the motor	• Prompts for control panel display language selection. • Prompts for motor data. • Guides user through rotation check.
Commission drive	Prompts for motor data.
Application	Prompts for application macro selection.
References 1 & 2	• Prompts for the source of speed references 1 and 2. • Prompts for reference limits. • Prompts for frequency (or speed) limits.
Start/Stop Control	• Prompts for the source for start and stop commands. • Prompts for start and stop mode definition. • Prompts for acceleration and deceleration times.
Protections	• Prompts for current and torque limits. • Prompts for the use of Run enable and Start enable signals. • Prompts for the use of emergency stop. • Prompts for Fault function selection. • Prompts for Auto reset functions selection.
Constant Speeds	• Prompts for the use of constant speeds. • Prompts for constant speed values.

Task name	Description
PID Control	• Prompts for PID settings. • Prompts for the source of process reference. • Prompts for reference limits. • Prompts for source, limits and units for the process actual value. • Defines the use of Sleep function.
Low Noise Setup	• Prompts for switching frequency. • Prompts for definition of Flux optimization. • Prompts for the use of Critical speeds.
Panel Display	Prompts for display variable and unit settings.
Timed Functions	Prompts for the use of Timed functions.
Output	• Prompts for the signals indicated through the relay outputs. • Prompts for signals indicated through the analog outputs AO1 and AO2. Sets the minimum, maximum, scaling and inversion values.

Changed Parameters Mode

To view (and edit) a listing of all parameters that have been changed from macro default values, follow these steps:

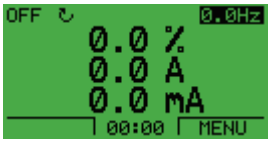1	Select MENU to enter the menu.		
2	Select CHANGED PAR with the UP/DOWN buttons and select ENTER.		
3	A list of changed parameters is displayed. Select EXIT to exit the parameters mode.		

Fault Logger Mode

Use the Fault Logger Mode to see drive fault history, fault state details and help for the faults.

1. Select FAULT LOGGER in the Main Menu.
2. Press ENTER to see the latest faults (up to 10 faults, maximum).
3. Press DETAIL to see details for the selected fault.

• Details are available for the three latest faults.

4. Press DIAG to see the help description for the fault. See "Diagnostics" section.

Note! If a power off occurs, only the three latest faults will remain (with details only in the first fault).

Drive Parameter Backup Mode


Use the parameter backup mode to export parameters from one drive to another. The parameters are uploaded from a drive to the control panel and downloaded from the control panel to another drive. Two options are available:


Par Backup Mode

The Assistant Control Panel can store a full set of drive parameters.




The Par Backup mode has these functions:


- **Upload to Panel** – Copies all parameters from the drive to the Control Panel. This includes user sets of parameters (if defined) and internal parameters such as those created by the Motor Id Run. The Control Panel memory is non-volatile and does not depend on the panel's battery. To upload parameters to control panel, follow these steps:

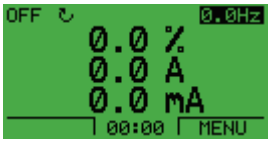1	Select MENU to enter the main menu.		
2	Select PAR BACKUP with the UP/DOWN buttons and select ENTER.		
3	Scroll to Upload to Panel and select SEL.		
4	The text "Copying parameters" and a progress diagram is displayed. Select ABORT if you want to stop the process.		

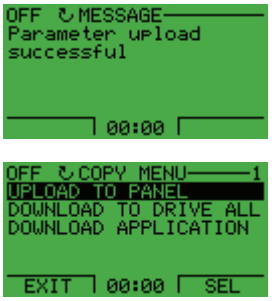5	The text “Parameter upload successful” is displayed and the control panel returns to the PAR BACKUP menu. Select EXIT to return to the main menu. Now you can disconnect the panel.		



- **Download Full Set** – Restores the full parameter set from the Control Panel to the drive. Use this option to restore a drive, or to configure identical drives. This download does not include user sets of parameters.
  To download all parameters to drive, follow these steps:

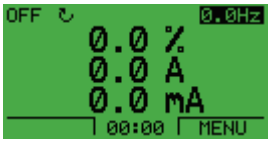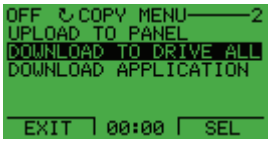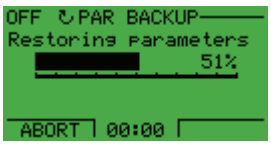
1	Select MENU to enter the menu.		
2	Select PAR BACKUP with the UP/DOWN buttons.		
3	Scroll to Download to drive all and select SEL.		
4	The text “restoring parameters” is displayed. Select ABORT if you want to stop the process.		

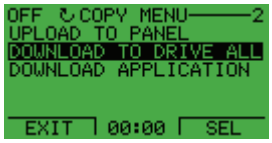5	After the download stops, the message “Parameter download successful” is displayed and the control panel goes back to PAR BACKUP menu. Select EXIT to return to the main menu.		 

Note! Download Full Set writes all parameters to the drive, including motor parameters. Only use this function to restore a drive, or to transfer parameters to systems that are identical to the original system.

- **Download Application** – Copies a partial parameter set from the Control Panel to a drive. The partial set does not include internal motor parameters, parameters 9905…9909, 1605, 1607, 5201, nor any Group 51 and 53 parameters. Use this option to transfer parameters to systems that use similar configurations – the drive and motor sizes do not need to be the same.
  To download application to drive, follow these steps:

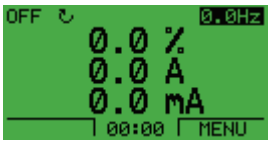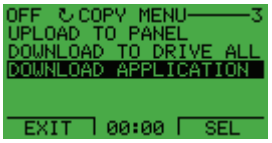1	Select MENU to enter the menu.		
2	Select PAR BACKUP with the UP/DOWN buttons.		
3	Scroll to DOWNLOAD APPLICATION and select SEL.		
4	The text “Downloading parameters (partial)” is displayed. Select ABORT if you want to stop the process.		

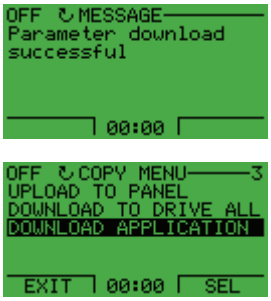5	The text “Parameter download successful” is displayed and the control panel returns to PAR BACKUP menu. Select EXIT to return to the main menu.		

- **Download User Set 1** - Copies USER S1 parameters (user sets are saved using parameter 9902 APPLIC MACRO) from the Control Panel to the drive.
- **Download User Set 2** - Copies USER S2 parameters from the Control Panel to the drive.

Handling Inexact Downloads


In some situations, an exact copy of the download is not appropriate for the target drive. Some examples:

- A download to an old drive specifies parameters/values that are not available on the old drive.
- A download (from an old drive) to a new drive does not have definitions for the new parameters – parameters that did not originally exist.

As a default, the control panel handles these situations by:


- Discarding parameters/values not available on the target drive.
- Using parameter default values when the download provides no values or invalid values.
- Providing a Differences List – A listing of the type and number of items that the target cannot accept exactly as specified.



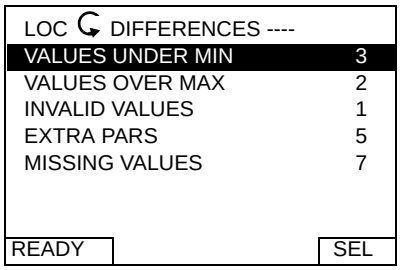

You can either accept the default edits by pressing READY, or view and edit each item as follows:

1. Highlight an item type in the Differences List (left screen below) and press SEL to see the details for the selected type (right screen below).

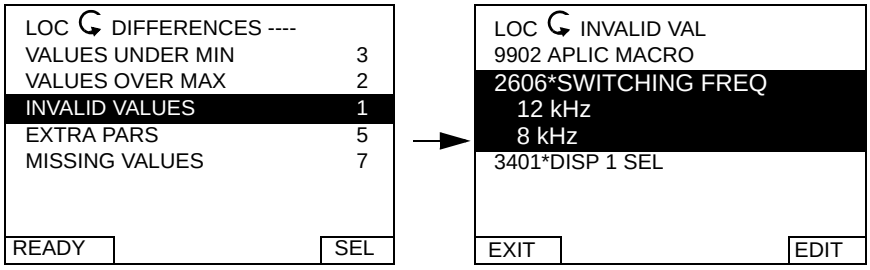

In the above-right “details” screen:

- The first item that requires editing is automatically highlighted and includes details: In general, the first item listed in the details is the value defined by the backup file. The second item listed is the “default edit.”
- For tracking purposes, an asterisk initially appears by each item. As edits are made, the asterisks disappear.

2. In the illustrated example, the backup specifies a switching frequency of 12 kHz, but the target drive is limited to 8 kHz.
3. Press EDIT to edit the parameter. The display is the target drive’s standard edit screen for the selected parameter.
4. Highlight the desired value for the target drive.
5. Press SAVE to save setting.
6. Press EXIT to step back to the differences view and continue for each remaining exception.
7. When your editing is complete, press READY in the Differences List and then select “Yes, save parameters.”

Download Failures

In some situations, the drive may be unable to accept a download. In those cases, the control panel display is: “Parameter download failed” plus one of the following causes:



- Set not found – You are attempting to download a data set that was not defined in the backup. The remedy is to manually define the set, or upload the set from a drive that has the desired set definitions.
- Par lock – The remedy is to unlock the parameter set (parameter 1602).
- Incompat drive/model – The remedy is to perform backups only between drives of the same type and the same model.
- Too many differences – The remedy is to manually define a new set, or upload the set from a drive that more closely resembles the target drive.




Note! If upload or download of parameters is aborted, the partial parameter set is not implemented.

Clock Set Mode

The clock set mode is used for setting the time and date for the internal clock of the ACS320. In order to use the timer functions of the ACS320, the internal clock has to be set first. Date is used to determine weekdays and is visible in Fault logs.


To set the clock, follow these steps:

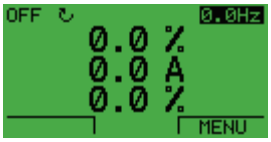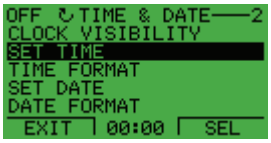1	Select MENU to enter the main menu.		
2	Scroll to Clock Set with the UP/DOWN buttons and select ENTER to enter the Clock Set mode.		
3	Scroll to Clock Visibility with the UP/DOWN buttons and select SEL to change the visibility of the clock.		
4	Scroll to Show Clock with the UP/DOWN buttons and select SEL to make the clock visible.		
5	Scroll to Set Time with the UP/DOWN buttons and select SEL.		
6	Change the hours and minutes with the UP/DOWN buttons and select OK to save the values. The active value is displayed in inverted color.		

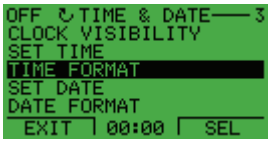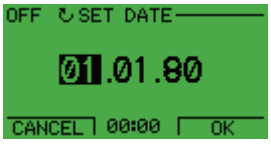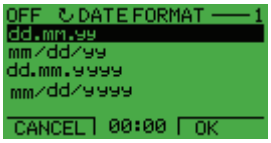7	Scroll to Time Format with the UP/DOWN buttons and select SEL.		
8	The different formats are displayed. Select a format with the UP/DOWN buttons and select SEL to confirm the selection.		
9	Scroll to Set Date with the UP/DOWN buttons and select SEL.		
10	Change the days, months and year with the UP/DOWN buttons and select OK to save the values. The active value is displayed in inverted color.		
11	Scroll to Date Format with the UP/DOWN buttons and select SEL.		
12	The Date formats are displayed. Select a date format with the UP/DOWN buttons and select OK to confirm the selection.		
13	Select EXIT twice to return to the main menu.		

I/O Settings Mode

To view and edit the I/O settings, follow these steps:

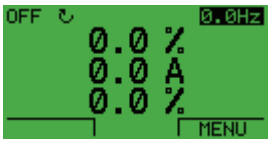1	Select MENU to enter the main menu.		
2	Scroll to I/O Settings with the UP/DOWN buttons and select ENTER.		
3	Scroll to the I/O setting you want to view with the UP/DOWN buttons and select SEL.		
4	Select the setting you want to view with the UP/DOWN buttons and select OK.		
5	You can change the value with the UP/DOWN buttons and save it by selecting SAVE. If you do not want to change the setting, select CANCEL.		
6	Select EXIT to return to the main menu.		

Application Macros

Overview

Macros change a group of parameters to new, predefined values designed for specific applications. Use macros to minimize the need for manual editing of parameters. Selecting a macro sets all other parameters to their default values, except:

- Group 99: Start-up Data parameters
- The PARAMETER LOCK 1602
- The PARAM SAVE 1607
- The COMM FAULT FUNC 3018 and COMM FAULT TIME 3019
- The COMM PROT SEL 9802
- Groups 50…53 serial communication parameters
- Group 29: Maintenance triggers

After selecting a macro, additional parameter changes can be made manually using the control panel.


Application macros are enabled by setting the value for parameter 9902 APPLIC MACRO. By default, HVAC default (value 1) is the enabled macro.

General Considerations

The following considerations apply for all macros:

- When using a direct speed reference in AUTO mode, connect the speed reference to analog input 1 (AI1), and provide the START command using digital input 1 (DI1). In HAND/OFF mode, the control panel provides the speed reference and START command.
- When using process PID, connect the feedback signal to analog input 2 (AI2). As a default, the control panel sets the Setpoint, but analog input 1 can be used as an alternate source. You can set up process PID using parameters (Group 40) or using the PID control assistant (recommended).

The S1 Jumpers are set for AI1 External Reference and PID Feedback as either 20 ma or 10 V.

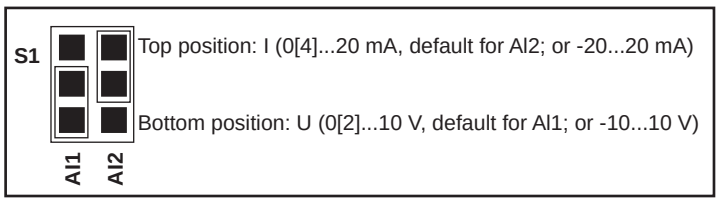



Application / Macro Listing

This section describes the following macros:

9902 Value	Macro		9902 Value	Macro
1	HVAC default		8	Internal timer
2	Supply fan		9	Internal timer with constant speeds
3	Return fan		10	Floating point
4	Cooling tower fan		11	Dual setpoint PID
5	Condenser		12	Dual setpoint PID with constant speeds
6	Booster pump		13	E-Clipse
7	Pump alternation		14	Hand Control

Selecting an Application Macro

To select a macro, follow these steps:

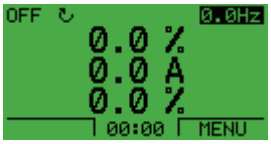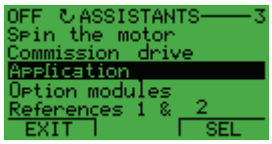1	Select MENU to enter the main menu.		
2	Select ASSISTANTS with the Up/Down buttons and select ENTER.		
3	Scroll to APPLICATION and select ENTER.		
4	Select a macro with the Up/ Down buttons and select SAVE.		

Restoring Defaults


To restore the factory default settings, select the application macro HVAC Default.

Control Wiring

Each macro has specific requirements for control wiring. Specific wiring requirements are included with each macro description.

HVAC Default


This macro provides the factory default parameter settings for the ACS320. Factory defaults can be restored at any time by setting parameter 9902 to 1. The diagram below shows typical wiring using this macro. When using direct speed reference in AUTO mode or process PID, see "General Considerations" on page 73.

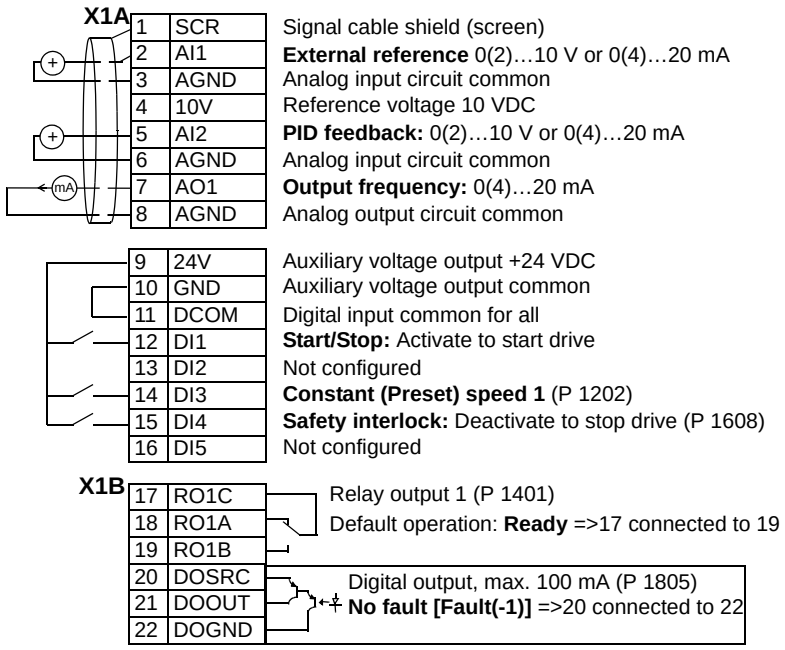

Parameters Changed Relative to HVAC Default			
Parameter	**Value**	**Parameter**	**Value**
None (Default macro)			

Supply Fan


This macro configures for supply fan applications where the supply fan brings fresh air in according to signals received from a transducer. When using direct speed reference in AUTO mode or process PID, see "General Considerations" on page 73.

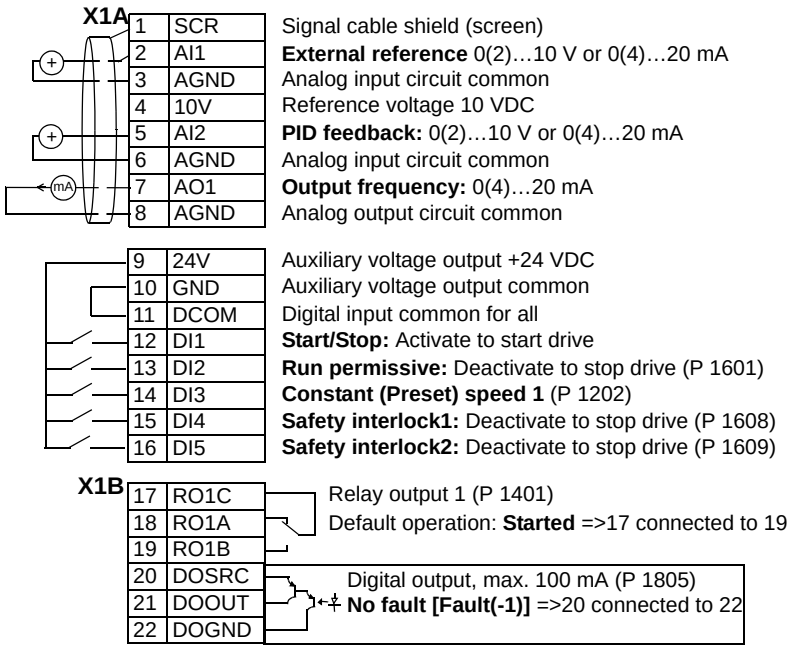

Parameters Changed Relative to HVAC Default					
Parameter		Value	Parameter		Value
9902	applic macro	2 (SUPPLYFAN)	3207	superv 3 param	0103 (OUTPUT FREQ)
1401	relay output 1	7 (STARTED)	4001	gain	0.7
1601	run enable	2 (DI2)	4002	integration time	10.0 s
1609	start enable 2	5 (DI5)	4101	gain	1.0
2202	acceler time 1	15.0 s	4102	integration time	60.0 s
2203	deceler time 1	15.0 s			

Return Fan


This macro configures for return fan applications where the return fan removes air according to signals received from a transducer. When using direct speed reference in AUTO mode or process PID, see "General Considerations" on page 73.

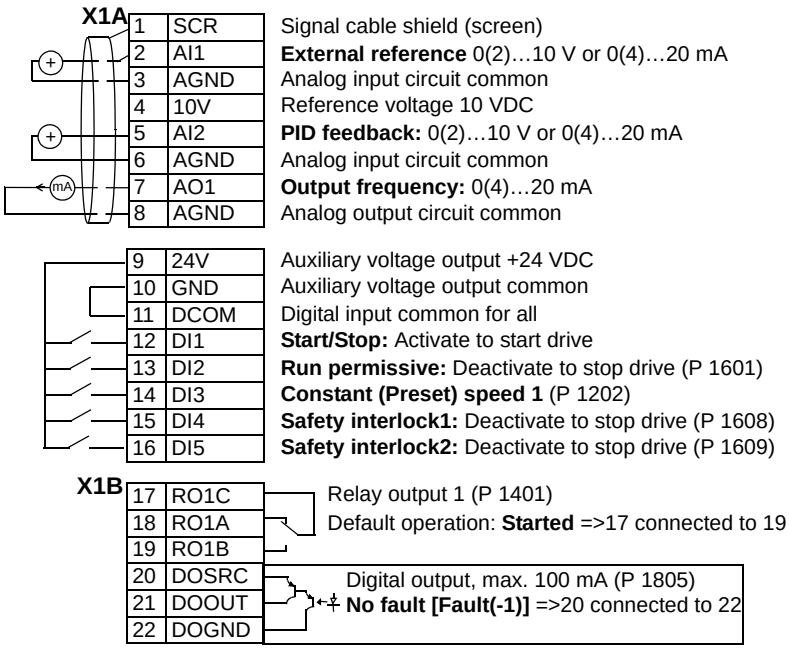

Parameters Changed Relative to HVAC Default					
Parameter		Value	Parameter		Value
9902	applic macro	3 (RETURNFAN)	3207	superv 3 param	0103 (OUTPUT FREQ)
1401	relay output 1	7 (STARTED)	4001	gain	0.7
1601	run enable	2 (DI2)	4002	integration time	10.0 s
1609	start enable 2	5 (DI5)	4101	gain	1.0
2202	acceler time 1	15.0 s	4102	integration time	60.0 s
2203	deceler time 1	15.0 s			

Cooling Tower Fan


This macro configures for cooling tower fan applications where the fan speed is controlled according to the signals received from a transducer. When using direct speed reference in AUTO mode or process PID, see "General Considerations" on page 73.

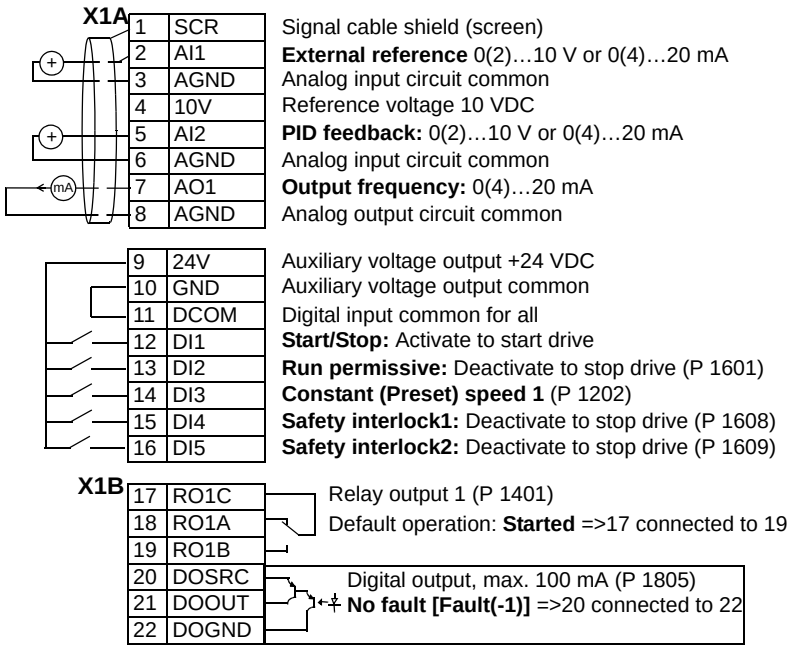

Parameters Changed Relative to HVAC Default					
Parameter		Value	Parameter		Value
9902	applic macro	4 (CLNGTWRFAN)	3207	superv 3 param	0103 (OUTPUT FREQ)
1401	relay output 1	7 (STARTED)	4101	gain	1.0
1601	run enable	2 (DI2)	4102	integration time	60.0 s
1609	start enable 2	5 (DI5)			

Condenser


This macro configures for condenser and liquid cooler applications where fan speed is controlled according to signals received from a transducer. When using direct speed reference in AUTO mode or process PID, see "General Considerations" on page 73.

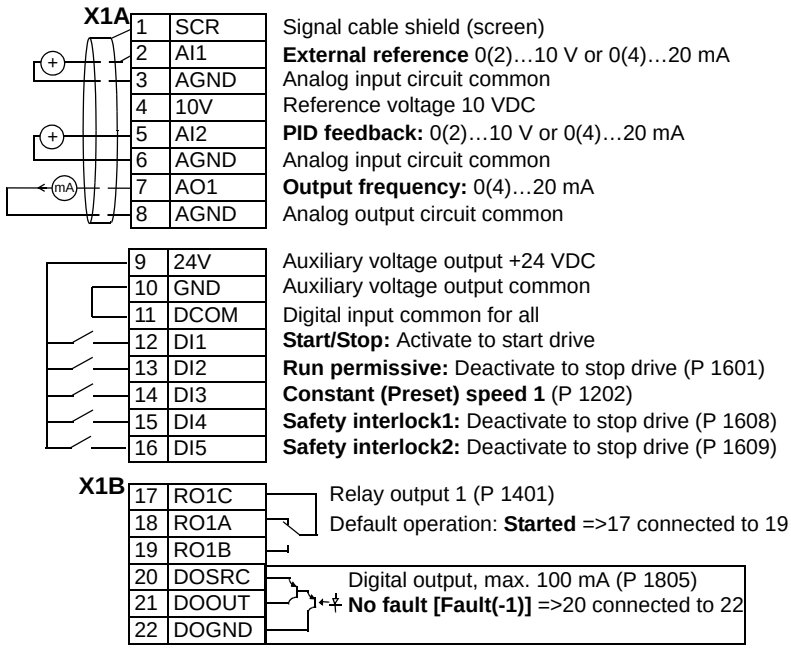

Parameters Changed Relative to HVAC Default					
Parameter		Value	Parameter		Value
9902	applic macro	5 (CONDENSER)	2203	deceler time 1	10.0 s
1401	relay output 1	7 (STARTED)	3207	superv 3 param	0103 (OUTPUT FREQ)
1601	run enable	2 (DI2)	4005	error value inv	1 (YES)
1609	start enable 2	5 (DI5)	4101	gain	1.0
2202	acceler time 1	10.0 s	4102	integration time	60.0 s

Booster Pump

This macro configures for booster pump applications where the pump speed is controlled according to a signal received from a transducer. When using direct speed reference in AUTO mode or process PID, see "General Considerations" on page 73.

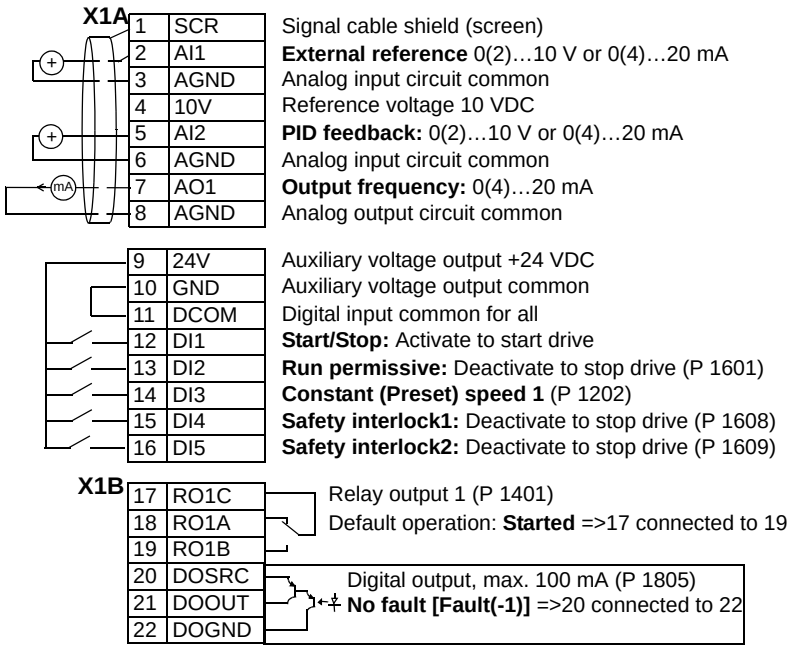


Parameters Changed Relative to HVAC Default					
Parameter		Value	Parameter		Value
9902	applic macro	6 (BOOSTERPUMP)	2203	deceler time 1	5.0 s
1401	relay output 1	7 (STARTED)	3207	superv 3 param	0103 (OUTPUT FREQ)
1601	run enable	2 (DI2)	4001	gain	1.0
1609	start enable 2	5 (DI5)	4002	integration time	60.0 s
2202	acceler time 1	5.0 s			

PFC Control Macro

This macro provides parameter settings for pump and fan control (PFC) applications. To enable the macro, set the value of parameter *9902* APPLIC MACRO to 7 (PFC CONTROL).

Note: Parameter *9902* START INHIBIT must remain in the default setting 0 (OFF).

Default I/O connections

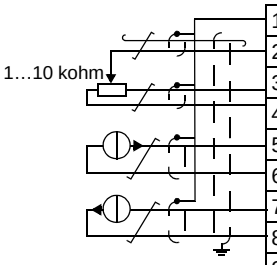

X1A

1	SCR	Signal cable shield (screen)
2	AI1	**Ext. ref. 1 (Hand) / Ext. ref. 2 (PID/PFC)**: 0…10 V
3	GND	Analog input circuit common
4	+10V	Reference voltage: +10 V DC, max. 10 mA
5	AI2	**Process actual value**: 4…20 mA
6	GND	Analog input circuit common
7	AO	**Output frequency value**: 0…20 mA
8	GND	Analog output circuit common
9	+24V	Auxiliary voltage output: +24 V DC, max. 200 mA
10	GND	Auxiliary voltage output common
11	DCOM	Digital input common
12	DI1	**Stop (0) / Start (1) (Hand)**
13	DI2	**Hand (0) / PID/PFC (1) control selection**
14	DI3	**Interlock:** Deactivation always stops the drive
15	DI4	**Interlock:** Deactivation stops constant speed motor
16	DI5	**Stop (0) / Start (1) (PID/PFC)**


X1B

17	ROCOM	Relay output 1 **PFC**
18	RONC	
19	RONO	
20	DOSRC	Digital output, max. 100 mA **No fault [Fault (-1)]**
21	DOOUT	
22	DOGND	

Internal Timer

This macro configures for applications where a built-in timer starts and stops the motor. When the variable speed pump reaches a maximum speed limit, auxiliary pumps start as needed. When using direct speed reference in AUTO mode or process PID, see "General Considerations" on page 73.

Momentarily activating digital input 3 (DI3) provides a boost function which operates the motor. See group 36, Timer Functions, for more information on setting up timers.

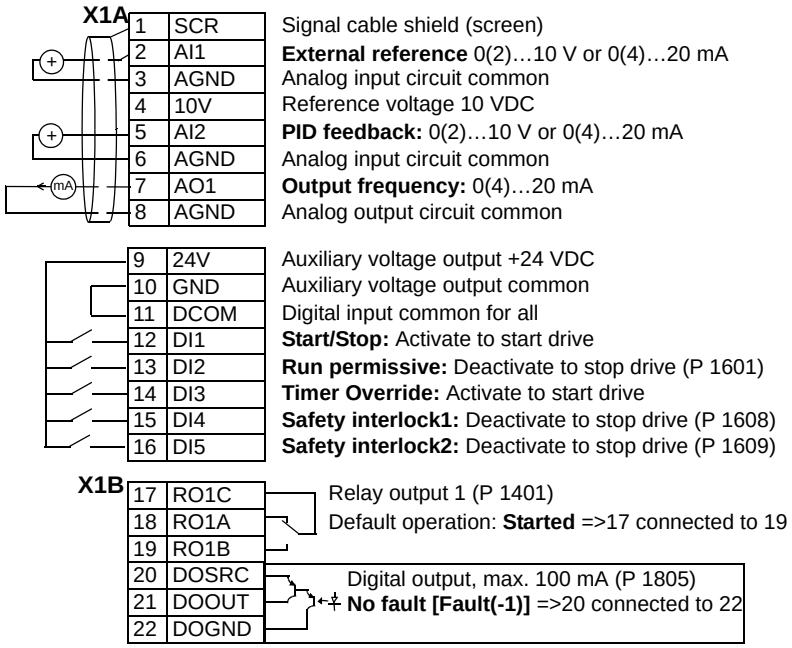


Parameters Changed Relative to HVAC Default					
Parameter		Value	Parameter		Value
9902	applic macro	8 (INT TIMER)	1609	start enable 2	5 (DI5)
1001	ext1 commands	11 (TIMER1)	3207	superv 3 param	0103 (OUTPUT FREQ)
1002	ext2 commands	11 (TIMER1)	3601	timers enable	1 (DI1)
1201	const speed sel	0 (NOT SEL)	3622	boost sel	3 (DI3)
1401	relay output 1	7 (STARTED)	3626	timer 1 src	23 (B+P3+P2+P1)
1601	run enable	2 (DI2)			

Internal Timer with Constant Speeds / PRV

This macro configures for applications such as a timed powered roof ventilator (PRV) which alternates between two constant speeds (constant speed 1 and 2) based on a built-in timer.


Momentarily activating digital input 3 (DI3) provides a boost function which operates the motor. See group 36, Timer Functions, for more information on setting up timers.

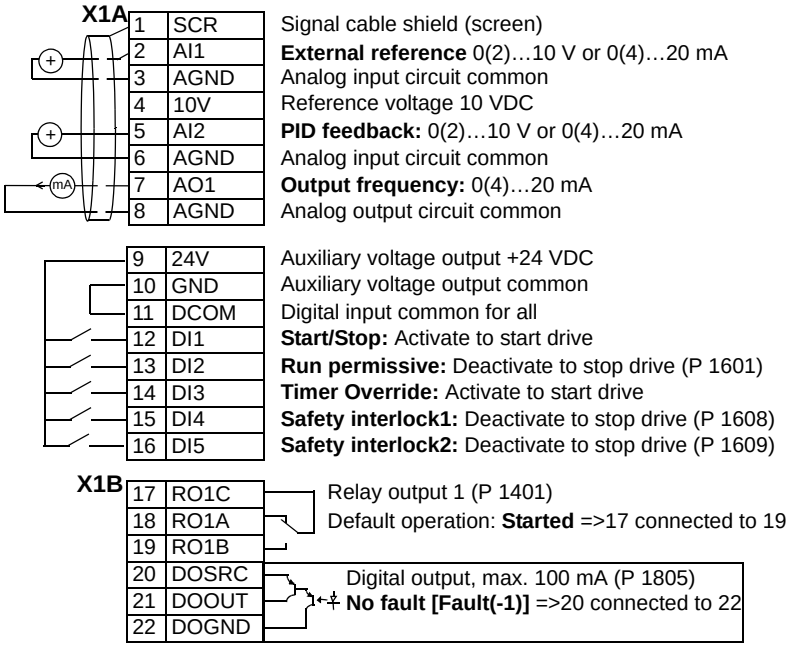

Parameters Changed Relative to HVAC Default					
Parameter		Value	Parameter		Value
9902	applic macro	9 (INT TIMER CS)	3416	signal 3 min	-200.0%
1002	ext2 commands	0 (NOT SEL)	3417	signal 3 max	200.0%
1103	ref1 sel	0 (KEYPAD)	3419	output 3 dsp unit	4 (%)
1106	ref3 sel	2 (AI2)	3420	output 3 min	-200.0%
1201	const speed sel	15 (TIMER1)	3421	output 3 max	200.0%
1301	minimum ai1	0.0%	3622	boost sel	3 (DI3)
1401	relay output 1	7 (STARTED)	4001	gain	1.0
1601	run enable	2 (DI2)	4002	integration time	60.0 s
1609	start enable 2	5 (DI5)	4101	gain	1.0
3207	superv 3 param	0103 (OUTPUT FREQ)	4102	integration time	60.0 s
3415	signal 3 param	0105 (TORQUE)	4110	setpoint sel	1 (AI1)

Floating Point


This application macro is for applications where speed reference needs to be controlled through digital inputs (DI4 & DI5). By activating digital input 4, the speed reference increases, by activating digital input 5, the speed reference decreases. If both digital inputs are active or inactive, the reference does not change.

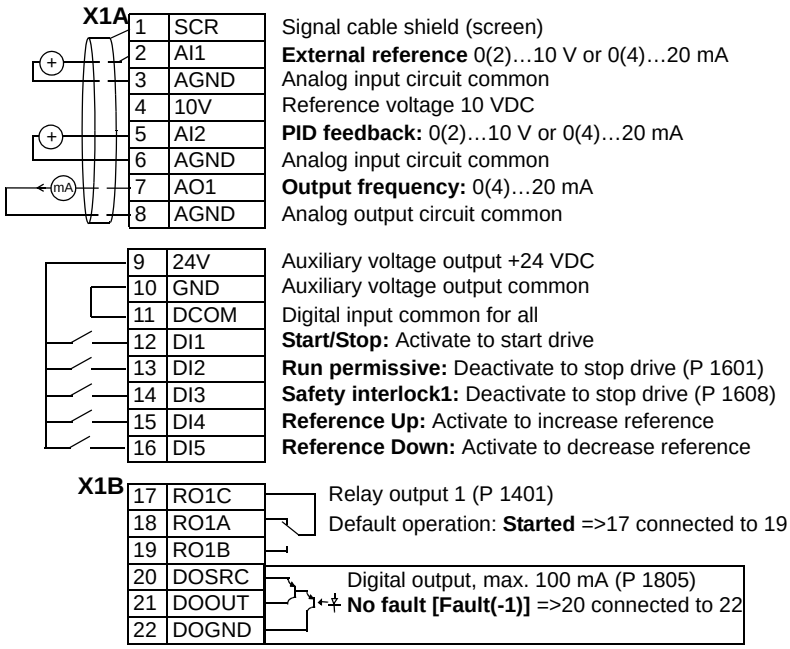

Parameters Changed Relative to HVAC Default					
Parameter		Value	Parameter		Value
9902	applic macro	10 (FLOATINGPNT)	3416	signal 3 min	-200.0%
1103	ref1 sel	7 (DI5U, 6D)	3417	signal 3 max	200.0%
1401	relay output 1	7 (STARTED)	3419	output 3 dsp unit	4 (%)
1601	run enable	2 (DI2)	3420	output 3 min	-200.0%
3207	superv 3 param	0103 (OUTPUT FREQ)	3421	output 3 max	200.0%
3415	signal 3 param	0105 (TORQUE)			

Dual Setpoint with PID


This macro configures for dual setpoint PID applications, where activating digital input 3 (DI3) changes the process PID controller's setpoint to another value. When using direct speed reference in AUTO mode or process PID, see "General Considerations" on page 73. Set process PID setpoints (internal to the drive) using parameters 4011 (SET1) and 4111 (SET2).

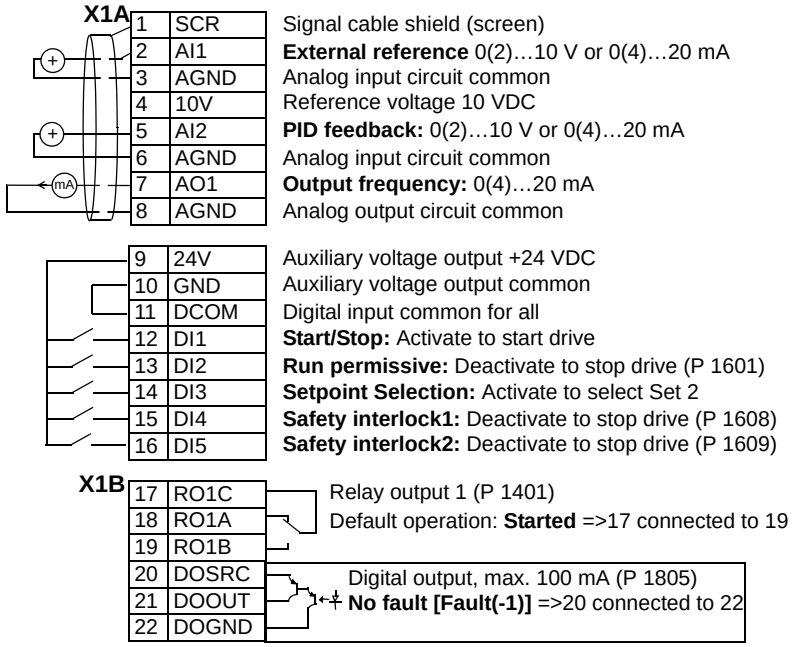

Parameters Changed Relative to HVAC Default					
Parameter		Value	Parameter		Value
9902	applic macro	11 (DUAL SETPNT)	4010	setpoint sel	19 (INTERNAL)
1201	const speed sel	0 (NOT SEL)	4011	internal setpnt	50.0%
1401	relay output 1	7 (STARTED)	4027	pid 1 param set	3 (DI3)
1601	run enable	2 (DI2)	4110	setpoint sel	19 (INTERNAL)
1609	start enable 2	5 (DI5)	4111	internal setpnt	100.0%
3207	superv 3 param	0103 (OUTPUT FREQ)			

Dual Setpoint with PID and Constant Speeds


This macro configures for applications with 2 constant speeds, active PID and PID alternating between two setpoints using digital inputs. Set PID setpoints (internal to the drive) using parameters 4011 (SET1) and 4111 (SET2). The digital input DI3 selects the setpoints.

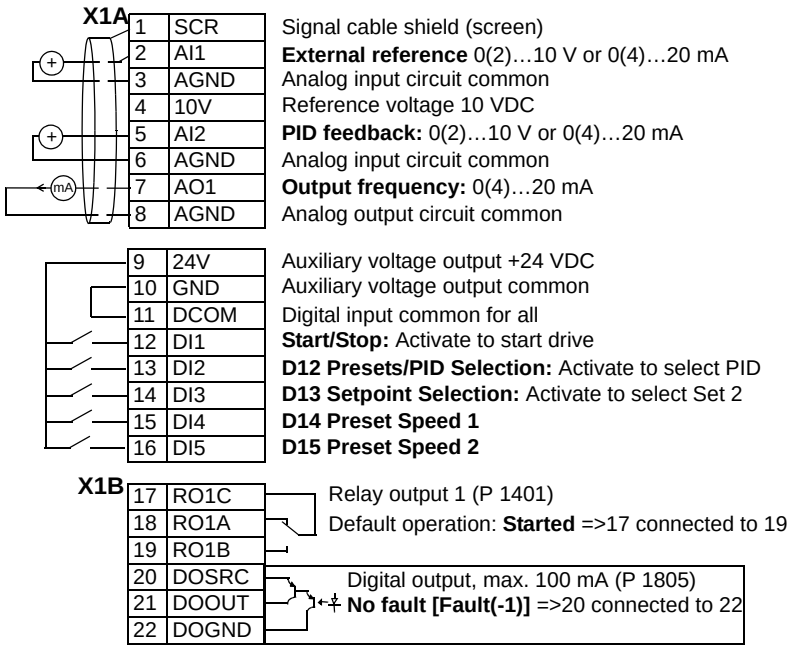

Parameters Changed Relative to HVAC Default					
Parameter		Value	Parameter		Value
9902	applic macro	12 (DUAL SPNTCS)	3207	superv 3 param	0103 (OUTPUT FREQ)
1102	ext1/ext2 sel	2 (DI2)	4001	gain	0.7
1201	const speed sel	11 (DI5, 6)	4002	integration time	10.0 s
1401	relay output 1	7 (STARTED)	4010	setpoint sel	19 (INTERNAL)
1608	start enable 1	0 (NOT SEL)	4011	internal setpnt	50.0%
2108	start inhibit	1 (ON)	4027	pid 1 param set	3 (DI3)
2202	acceler time 1	10.0 s	4101	gain	0.7
2203	deceler time 1	10.0 s	4102	integration time	10.0 s
3105	ar overvoltage	0 (DISABLE)	4110	setpoint sel	19 (INTERNAL)
3107	ar ai<min	0 (DISABLE)	4111	internal setpnt	100.0%

E-Clipse

This macro configures for an E-Clipse Bypass device which can bypass the drive and connect the motor direct on-line. When using direct speed reference in AUTO mode or process PID, see “General Considerations” on page 73.

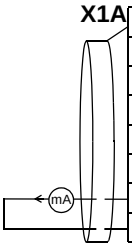

1	SCR	Signal cable shield (screen)
2	AI1	Not configured
3	AGND	Analog input circuit common
4	10V	Reference voltage 10 VDC
5	AI2	Not configured
6	AGND	Analog input circuit common
7	AO1	**Output frequency:** 0(4)…20 mA
8	AGND	Analog output circuit common
9	24V	Auxiliary voltage output +24 VDC
10	GND	Auxiliary voltage output common
11	DCOM	Digital input common for all
12	DI1	Not configured
13	DI2	Not configured
14	DI3	Not configured
15	DI4	Not configured
16	DI5	Not configured


X1B

17	RO1C	Relay output 1 (P 1401)
18	RO1A	Default operation: **Fault (-1)** =>20 connected to 22
19	RO1B	
20	RO2C	Digital output (P 1805)
21	RO2A	Default operation: **Running** =>22 connected to 24
22	RO2B	

Parameters Changed Relative to HVAC Default					
Parameter		Value	Parameter		Value
9902	applic macro	15 (e-clipse)	5303	efbbaud rate	76.8 kb/s
9802	comm proto sel	1 (std modbus)	5304	efb parity	2 (8 even 1)
1001	ext1 commands	10 (comm)	5305	efb ctrl profile	1 (dcu profile)
1002	ext2 commands	10 (comm)	5310	efb par 10	103
1601	run enable	7 (comm)	5311	efb par 11	104
1608	start enable 1	7 (comm)			

Hand Control

This macro configures for drive control using only the control panel with no automated control. Typically, this is a temporary configuration used prior to control wiring.

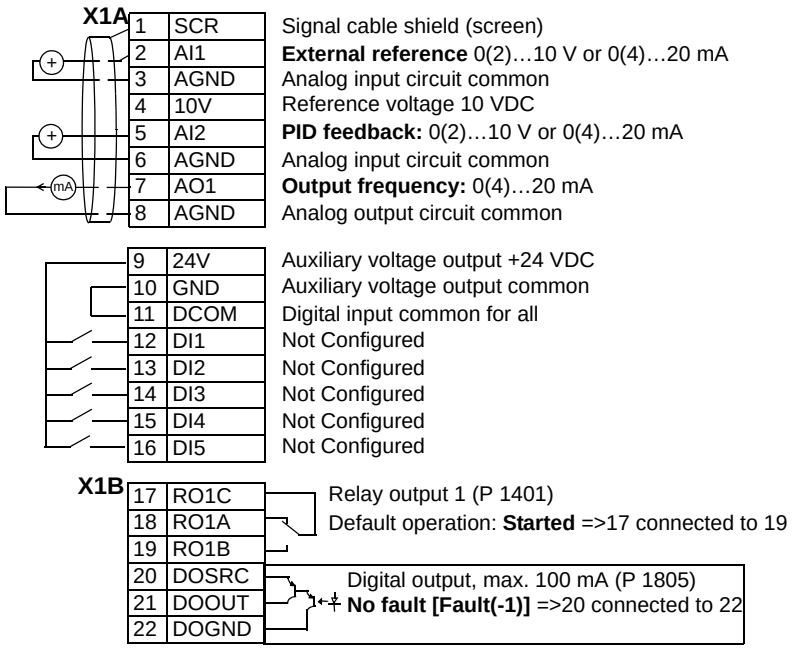

Parameters Changed Relative to HVAC Default					
Parameter		Value	Parameter		Value
9902	applic macro	14 (HAND CONTROL)	3415	signal 3 param	100 (NOT SEL)
1001	ext1 commands	0 (NOT SEL)	3416	signal 3 min	(-)
1002	ext2 commands	0 (NOT SEL)	3417	signal 3 max	(-)
1106	ref3 sel	2 (AI2)	3418	output 3 dsp form	(-)
1201	const speed sel	0 (NOT SEL)	3419	output 3 dsp unit	(-)
1301	minimum ai1	0.0%	3420	output 3 min	(-)
1304	minimum ai2	0.0%	3421	output 3 max	(-)
1401	relay output 1	7 (STARTED)	4001	gain	1.0
1504	minimum ao1	0.0mA	4002	integration time	60.0 s
1510	minimum ao2	0.0mA	4010	setpoint sel	1 (AI1)
1601	run enable	2 (DI2)	4101	gain	1.0
1608	start enable 1	0 (NOT SEL)	4102	integration time	60.0 s
2108	start inhibit	1 (ON)	4110	setpoint sel	1 (AI1)
3207	superv 3 param	0103 (OUTPUT FREQ)	4210	setpoint sel	1 (AI1)



Program features

What this chapter contains

The chapter describes program features. For each feature, there is a list of related user settings, actual signals, and fault and alarm messages.

Start-up Assistant

Introduction

The Start-up Assistant (requires the Assistant Control Panel) guides the user through the start-up procedure, helping to enter the requested data (parameter values) to the drive. The Start-up Assistant also checks that the entered values are valid, ie within the allowed range.

The Start-up Assistant calls other assistants, each of which guides the user through the task of specifying a related parameter set. At the first start, the drive suggests entering the first task, Language Select, automatically. The user may activate the tasks either one after the other as the Start-up Assistant suggests, or independently. The user may also adjust the drive parameters in the conventional way without using the assistant at all.

List of the tasks and the relevant drive parameters


Depending on the selection made in the Application task (parameter *9902* APPLIC MACRO), the Start-up Assistant decides which consequent tasks it suggests.

Name	Description	Set parameters
Language Select	Selecting the language	*9901*
Motor Set-up	Setting the motor data	*9905*…*9909*
Application	Selecting the application macro	*9902*, parameters associated to the macro
Option Modules	Activating the option modules	*Group 35: Motor Temp Meas*, *Group 52: Panel Communication*, *9802*
Speed Control EXT1	Selecting the source for the speed (output frequency) reference	*1103*
	(If AI1 is used: Setting analog input AI1 limits, scale, inversion)	(*1301*…*1303*, *3001*)
	Setting the reference limits	*1104*, *1105*
	Setting the frequency limits	*2007*, *2008*
	Setting the acceleration and deceleration times	*2202*, *2203*
Speed Control EXT2	Selecting the source for the speed (output frequency) reference	*1106*
	(If AI1 is used: Setting analog input AI1 limits, scale, inversion)	(*1301*…*1303*, *3001*)
	Setting the reference limits	*1107*, *1108*
PID Control	Selecting the source for the process reference	*1106*
	(If AI1 is used: Setting analog input AI1 limits, scale, inversion)	(*1301*…*1303*, *3001*)
	Setting the reference limits	*1107*, *1108*
	Setting the speed (reference) limits	*2007*, *2008*
	Setting the source and limits for the process actual value	*4016*, *4018*, *4019*
Start/Stop Control	Selecting the source for start and stop signals of the two external control locations, EXT1 and EXT2	*1001*, *1002*
	Selecting between EXT1 and EXT2	*1102*
	Defining the direction control	*1003*
	Defining the start and stop modes	*2101*…*2103*
	Selecting the use of Run Enable signal	*1601*
Protections	Setting the current limits	*2003*
Output Signals	Selecting the signals indicated through relay output RO	*Group 14: Relay Outputs*
	Selecting the signals indicated through analog output AO Setting the minimum, maximum, scaling and inversion	*Group 15: Analog Outputs*

Name	Description	Set parameters
Timed Functions	Setting the timed functions	*Group 36: Timer Functions*
	Selecting the timed start/stop control for external control locations EXT1 and EXT2	*1001*, *1002*
	Selecting timed EXT1/EXT2 control	*1102*
	Activation of timed constant speed 1	*1201*
	Selecting timed function status indicated through relay output RO	*1401*
	Selecting timed PID1 parameter set 1/2 control	*4027*

Contents of the assistant displays


There are two types of displays in the Start-up Assistant: Main displays and the information displays. The main displays prompt the user to feed in information. The assistant steps through the main displays. The information displays contain help texts for the main displays. The figure below shows a typical example of both and explanations of the contents.

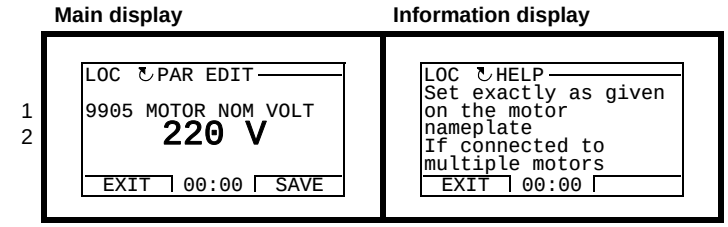

1	Parameter	Help text …
2	Feed-in field	… help text continued

Local control vs. external control


The drive can receive start, stop and direction commands and reference values from the control panel or through digital and analog inputs. Embedded fieldbus enables control over an open fieldbus link. A PC equipped with DriveWindow Light PC tool can also control the drive.

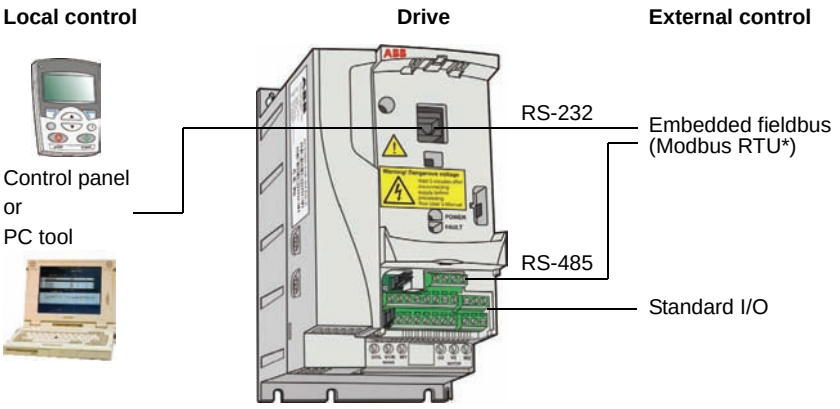

* With SREA-01 Ethernet Adapter Module it is possible to use Modbus TCP/IP with the Ethernet. For more information, see *SREA-01 Ethernet Adapter Module User's Manual* (3AUA0000042896 [English]).

Local control

The control commands are given from the control panel keypad when the drive is in local control. LOC indicates local control on the panel display.

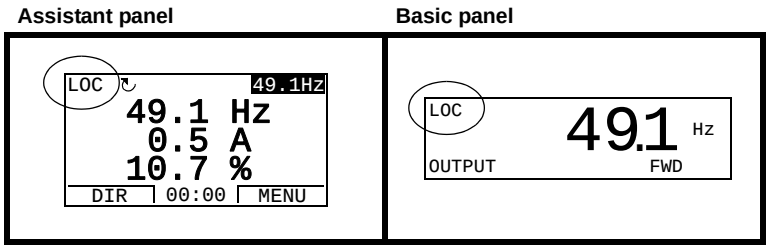


The control panel always overrides the external control signal sources when used in local mode.

External control

When the drive is in external control, the commands are given through the standard I/O terminals (digital and analog inputs) and/or the fieldbus interface. In addition, it is also possible to set the control panel as the source for the external control.

External control is indicated with REM on the panel display.

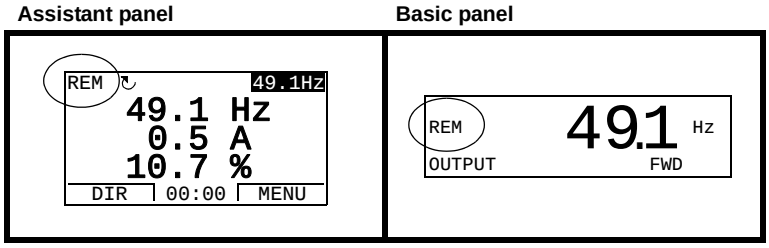

The user can connect the control signals to two external control locations, EXT1 or EXT2. Depending on the user selection, either one is active at a time. This function operates on a 2 ms time level.

Settings


Panel key	**Additional information**
LOC/REM	Selection between local and external control
Parameter	
1102	Selection between EXT1 and EXT2
1001/*1002*	Start, stop, direction source for EXT1/EXT2
1103/*1106*	Reference source for EXT1/EXT2

Diagnostics

Actual signals	Additional information
0111/*0112*	EXT1/EXT2 reference


Block diagram: Start, stop, direction source for EXT1

The figure below shows the parameters that select the interface for start, stop, and direction for external control location EXT1.

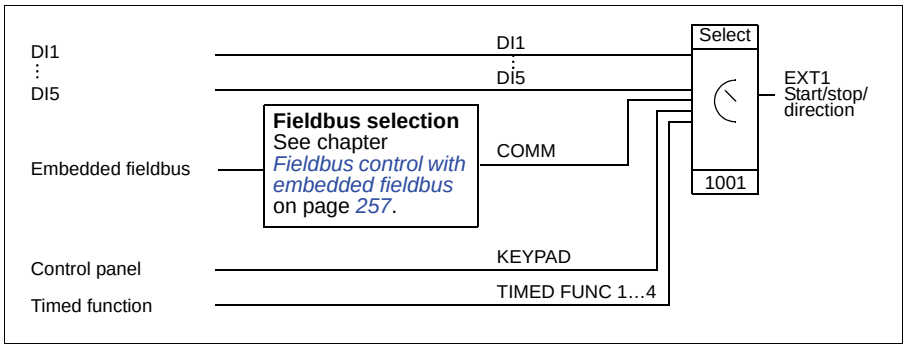

Block diagram: Reference source for EXT1

The figure below shows the parameters that select the interface for the speed reference of external control location EXT1.

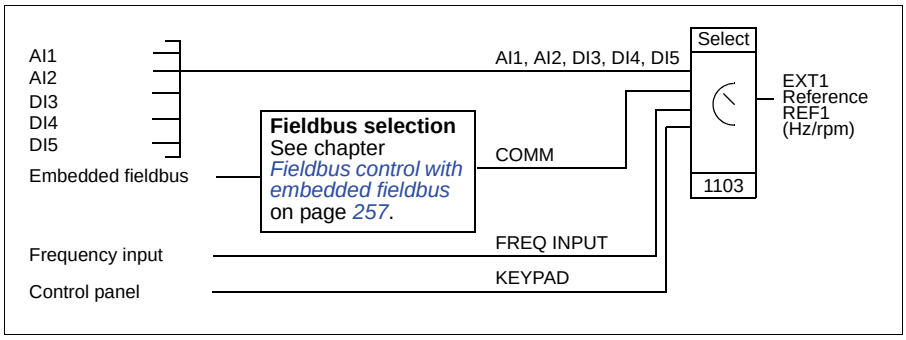

Reference types and processing

The drive can accept a variety of references in addition to the conventional analog input and control panel signals.

- The drive reference can be given with two digital inputs: One digital input increases the speed, the other decreases it.
- The drive can form a reference out of two analog input signals by using mathematical functions: Addition, subtraction, multiplication and division.
- The drive can form a reference out of an analog input signal and a signal received through a serial communication interface by using mathematical functions: Addition and multiplication.
- The drive reference can be given with frequency input.

It is possible to scale the external reference so that the signal minimum and maximum values correspond to a speed other than the minimum and maximum speed limits.

Settings


Parameter	Additional information
Group 11: Reference Select	External reference source, type and scaling
Group 20: Limits	Operating limits
Group 22: Accel/Decel	Speed reference acceleration/deceleration ramps
Group 32: Supervision	Reference supervision

Diagnostics

Actual signal	Additional information
0111/*0112*	REF1/REF2 reference
Group 03: Actual Signals	References in different stages of the reference processing chain

Reference trimming

In reference trimming, the external reference is corrected depending on the measured value of a secondary application variable. The block diagram below illustrates the function.

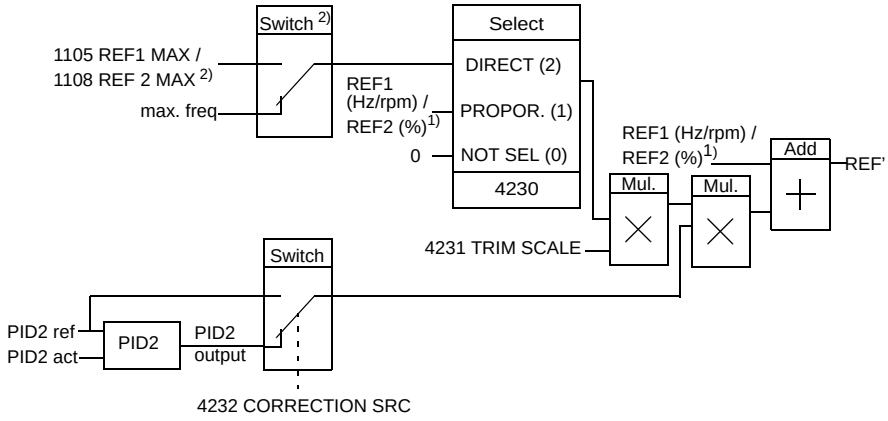

REF1 (Hz/rpm) / REF2 (%) = The drive reference before trimming
REF' = The drive reference after trimming
max. freq = par. *2008* (or *2007* if the absolute value is greater)
PID2 ref = par. *4210*
PID2 act = par. *4214…4221*

1) REF1 or REF2 depending on which is active. See parameter *1102*.

2) When par. *4232* = PID2REF, the maximum trimming reference is defined by parameter *1105* when REF1 is active and by parameter *1108* when REF2 is active.
When par. *4232* = PID2 OUTPUT, the maximum trimming reference is defined by parameter *2008* value.

Settings

Parameter	Additional information
1102	REF1/2 selection
4230 …*4232*	Trimming function settings
4201 ... 4221, *4228*, *4229*	PID control settings
Group 20: Limits	Drive operation limits

Programmable analog inputs

The drive has two programmable analog voltage/current inputs. The inputs can be inverted, filtered and the maximum and minimum values can be adjusted. The update cycle for the analog input is 8 ms (12 ms cycle once per second). The cycle time is shorter when information is transferred to the application program (8 ms -> 2 ms).

Settings

Parameter	Additional information
Group 11: Reference Select	AI as reference source
Group 13: Analog Inputs	Analog input processing
3001, *3021*, *3022*, *3107*	AI loss supervision
Group 35: Motor Temp Meas	AI in motor temperature measurement
Group 40: Process PID Set 1 …*Group 42: External PID*	AI as PID process control reference or actual value source
Group 44: Pump Protection	AI as pump protection measurement source

Diagnostics

Actual signal	Additional information
0120, *0121*	Analog input values
1401	AI1/A2 signal loss
Alarm	
AI1 LOSS / *AI2 LOSS*	AI1/AI2 signal below AI1/AI2 FAULT LIMIT (*3021*/*3022*)
Fault	
AI1 LOSS / *AI2 LOSS*	AI1/AI2 signal below limit AI1/AI2 FAULT LIMIT (*3021*/*3022*)
PAR AI SCALE	Incorrect AI signal scaling (*1302* < *1301* or *1305* < *1304*)

Programmable analog output

One programmable current output (0…20 mA) is available. Analog output signal can be inverted, filtered and the maximum and minimum values can be adjusted. The analog output signals can be proportional to motor speed, output frequency, output current, motor torque, motor power, etc. The update cycle for the analog output is 2 ms.

It is also possible to write a value to an analog output through a serial communication link.

Settings

Parameter	Additional information
Group 15: Analog Outputs	AO value selection and processing
Group 35: Motor Temp Meas	AO in motor temperature measurement

Diagnostics

Actual signal	Additional information
0124	AO value
Fault	
PAR AO SCALE	Incorrect AO signal scaling (*1503* < *1502*)

Programmable digital inputs

The drive has five programmable digital inputs. The update time for the digital inputs is 2 ms.

It is possible to delay the state change of digital inputs with delays defined in group *Group 18: FREQ IN & TRAN OUT*. This enables very simple program sequences by connecting several functions with the same physical wire, eg to remove branches and leaves from a pipe by running the fan in reverse before normal operation.

One digital input (DI5) can be programmed as a frequency input. See section *Frequency input* on page *100*.

Settings

Parameter	Additional information
Group 10: AcStart/Stop/Dir	DI as start, stop, direction
Group 11: Reference Select	DI in reference selection, or reference source
Group 12: Constant Speeds	DI in constant speed selection
Group 16: System Controls	DI as external Run Enable, fault reset or user macro change signal
Group 18: FREQ IN & TRAN OUT	Delays in DI state changes
2109	DI as external emergency stop command source
2201	DI as acceleration and deceleration ramp selection signal
2209	DI as zero ramp force signal
3003	DI as external fault source
Group 35: Motor Temp Meas	DI in motor temperature measurement
3601	DI as timed function enable signal source
3622	DI as booster activation signal source
4010/*4110*/*4210*	DI as PID controller reference signal source
4022/*4122*	DI as sleep function activation signal in PID1
4027	DI as PID1 parameter set 1/2 selection signal source
4034/*4035*	DI as PID reference/output freezing source
4039/4139	DI as PID internal setpoint selection source
4228	DI as external PID2 function activation signal source
4406/*4414*	DI as connection signal source for pump inlet/outlet pressure switch
4421	DI as pipe fill enable source
4601	DI as pump clean trigger source
6403	DI as load analyzer logger reset source
8120	DI as PFC interlock source

Diagnostics

Actual signal	Additional information
0160	DI status
0414	DI status at the time the latest fault occurred

Programmable relay output

The drive has one programmable relay output. It is possible to add three additional relay outputs with the optional Relay Output Extension Module MREL-0. For more information, see *MREL-01 Relay Output Extension Module User's Manual* (3AUA0000035974 [English]).

With a parameter setting it is possible to choose what information to indicate through the relay output: Ready, running, fault, alarm, etc. The update time for the relay output is 2 ms.

A value can be written to a relay output through a serial communication link.

Settings

Parameter	Additional information
Group 14: Relay Outputs	RO value selections and operation times

Diagnostics

Actual signal	Additional information
0134	RO Control Word through fieldbus control
0162	RO 1 status
0173	RO 2…4 status. With option MREL-01 only.

Frequency input

Digital input DI5 can be programmed as a frequency input. Frequency input (0…16000 Hz) can be used as external reference signal source. The update time for the frequency input is 50 ms. Update time is shorter when information is transferred to the application program (50 ms -> 2 ms).

Settings

Parameter	Additional information
Group 18: FREQ IN & TRAN OUT	Frequency input minimum and maximum values and filtering
1103/*1106*	External reference REF1/2 through frequency input
4010, *4110*, *4210*	Frequency input as PID reference source

Diagnostics

Actual signal	Additional information
0161	Frequency input value

Transistor output

The drive has one programmable transistor output. The output can be used either as digital output or frequency output (0…16000 Hz). The update time for the transistor/frequency output is 2 ms.

Settings

Parameter	Additional information
Group 18: FREQ IN & TRAN OUT	Transistor output settings

Diagnostics

Actual signal	Additional information
0163	Transistor output status
0164	Transistor output frequency

Actual signals

Several actual signals are available:

- Drive output frequency, current, voltage and power
- Motor speed and torque
- Intermediate circuit DC voltage
- Active control location (LOCAL, EXT1 or EXT2)
- Reference values
- Drive temperature
- Operating time counter (h), kWh counter
- Digital I/O and analog I/O status
- PID controller actual values.

Three signals can be shown simultaneously on the assistant control panel display (one signal on the basic panel display). It is also possible to read the values through the serial communication link or through the analog outputs.

Settings

Parameter	Additional information
1501	Selection of an actual signal to AO
1801	Selection of an actual signal to frequency output
Group 32: Supervision	Actual signal supervision


Parameter	Additional information
Group 34: Panel Display Process Variables	Selection of an actual signals to be displayed on the control panel

Diagnostics

Actual signal	Additional information
Group 01: Operating Data … *Group 04: Fault History*	Lists of actual signals

Power loss ride-through

If the incoming supply voltage is cut off, the drive will continue to operate by utilizing the kinetic energy of the rotating motor. The drive will be fully operational as long as the motor rotates and generates energy to the drive. The drive can continue the operation after the break if the main contactor remained closed.

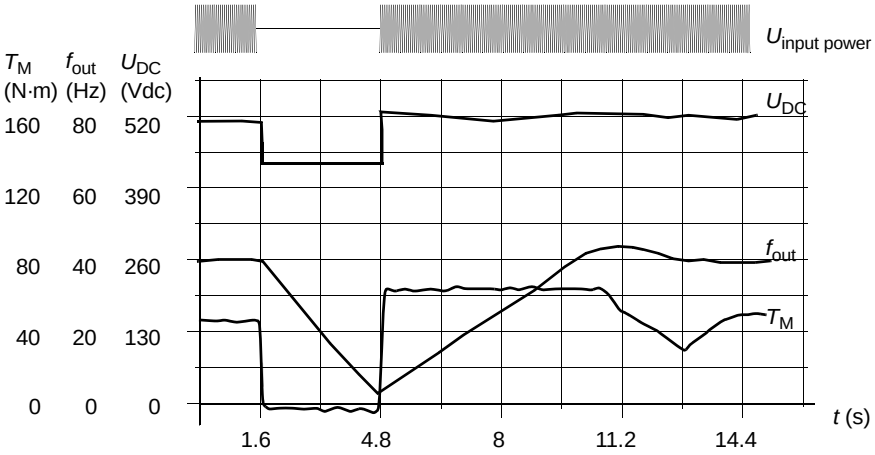

U_{DC} = Intermediate circuit voltage of the drive, f_{out} = Output frequency of the drive, T_M = Motor torque

Loss of supply voltage at nominal load (f_{out} = 40 Hz). The intermediate circuit DC voltage drops to the minimum limit. The controller keeps the voltage steady as long as the input power is switched off. The drive runs the motor in generator mode. The motor speed falls but the drive is operational as long as the motor has enough kinetic energy.

Settings

Parameter *2006* UNDERVOLT CTRL

DC Magnetizing

When DC Magnetizing is activated, the drive automatically magnetizes the motor before starting. This feature guarantees the highest possible breakaway torque, up to 180% of the motor nominal torque. The Automatic Start feature and DC Magnetizing cannot be activated at the same time.

Settings

Parameters *2101* START FUNCTION and *2103* DC MAGN TIME

Maintenance trigger


A maintenance trigger can be activated to show a notice on the panel display when eg drive power consumption has exceeded the defined trigger point.

Settings

Parameter *Group 29: Maintenance Trig*

Acceleration and deceleration ramps

Two user-selectable acceleration and deceleration ramps are available. It is possible to adjust the acceleration/deceleration times and the ramp shape. Switching between the two ramps can be controlled via a digital input or fieldbus.

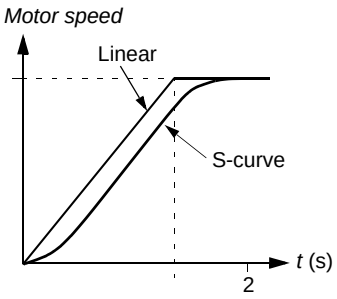

The available ramp shape alternatives are Linear and S-curve.

Linear: Suitable for drives requiring steady or slow acceleration/deceleration.

S-curve: Ideal for conveyors carrying fragile loads, or other applications where a smooth transition is required when changing the speed.

Settings

Parameter *Group 22: Accel/Decel*

Critical Speeds

A Critical Speeds function is available for applications where it is necessary to avoid certain motor speeds (drive output frequencies) or speed bands (output frequency bands) because of eg mechanical resonance problems. The user can define three critical frequencies or frequency bands.

Settings

Parameter *Group 25: Critical Speeds*

Constant speeds

It is possible to define seven positive constant speeds. Constant speeds are selected with digital inputs. Constant speed activation overrides the external speed reference.

Constant speed selections are ignored if

- PID reference is being followed, or
- drive is in local control mode.

This function operates on a 2 ms time level.


Settings

Parameter *Group 12: Constant Speeds*

Constant speed 7 (*1208* CONST SPEED 7) is also used for fault functions. See parameter group *Group 30: Fault Functions*.

Custom U/f ratio

The user can define a U/f curve (output voltage as a function of frequency). This custom ratio is used only in special applications where linear and squared U/f ratio are not sufficient (eg when motor break-away torque needs to be boosted).

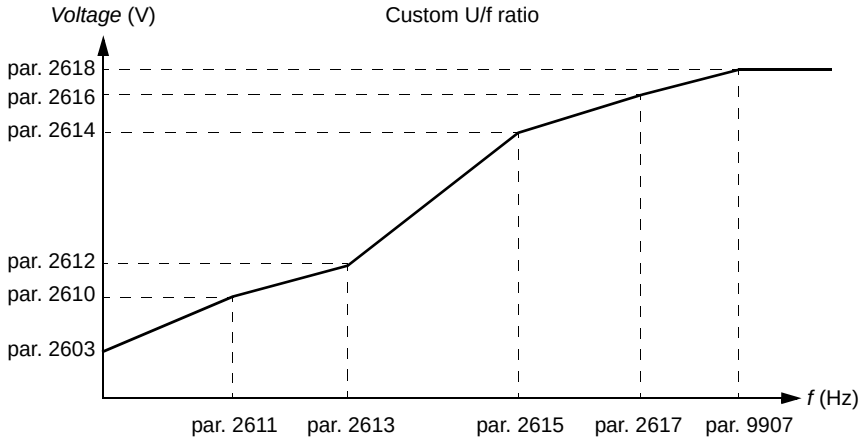

Note: The voltage and the frequency points of the U/f curve must fulfill the following requirements:

2610 < *2612* < *2614* < *2616* < *2618* and
2611 < *2613* < *2615* < *2617* < *9907*

WARNING! High voltage at low frequencies may result in poor performance or motor damage (overheating).

Settings


Parameter	Additional information
2605	Custom U/f ratio activation
2610…2618	Custom U/f ratio settings

Diagnostics

Fault	Additional information
PAR CUSTOM U/F	Incorrect U/f ratio

IR compensation

When IR compensation is activated, the drive gives an extra voltage boost to the motor at low speeds. IR compensation is useful in applications that require high breakaway torque.

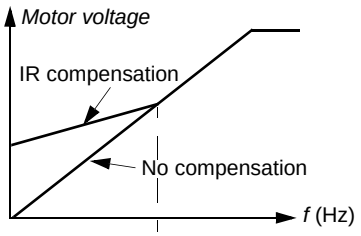

Settings

Parameter *2603* IR COMP VOLT

Programmable protection functions

AI<Min

AI<Min function defines the drive operation if an analog input signal falls below the set minimum limit.

Settings

Parameters *3001* AI<MIN FUNCTION, *3021* AI1 FAULT LIMIT and *3022* AI2 FAULT LIMIT

Panel Loss

Panel Loss function defines the operation of the drive if the control panel selected as control location for the drive stops communicating.

Settings

Parameter *3002* PANEL COMM ERR

External Fault

External Faults (1 and 2) can be supervised by defining one digital input as a source for an external fault indication signal.

Settings

Parameters *3003* EXTERNAL FAULT 1 and *3004* EXTERNAL FAULT 2

Stall Protection

The drive protects the motor in a stall situation. It is possible to adjust the supervision limits (frequency, time) and choose how the drive reacts to the motor stall condition (alarm indication / fault indication & drive stop / no reaction).

Settings


Parameters *3010*…*3012*

Motor Thermal Protection

The motor can be protected against overheating by activating the Motor Thermal Protection function.

The drive calculates the temperature of the motor on the basis of the following assumptions:

1. The motor is in the ambient temperature of 30 °C when power is applied to the drive.
2. Motor temperature is calculated using either the user-adjustable or automatically calculated motor thermal time constant and motor load curve (see the figures below). The load curve should be adjusted in case the ambient temperature exceeds 30 °C.

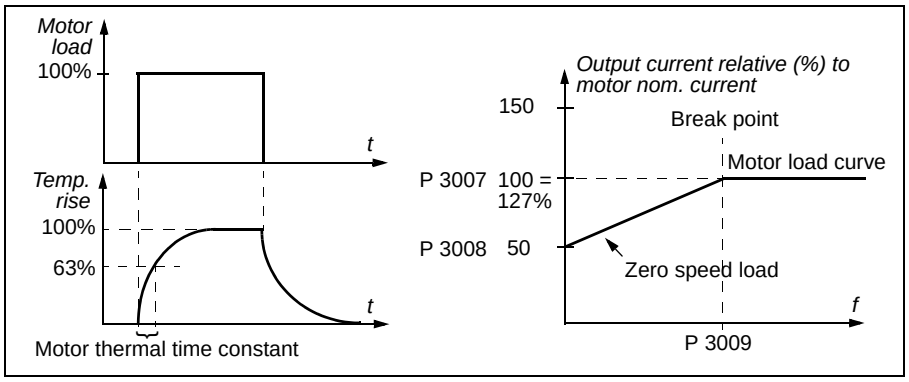

Settings

Parameters *3005*…*3009*

Note: It is also possible to use the motor temperature measurement function. See section *Motor temperature measurement through the standard I/O* on page *116*.

Earth Fault Protection

The Earth Fault Protection detects earth faults in the motor or motor cable. The protection is active only during start.

An earth fault in the input power line does not activate the protection.

Settings

Parameter *3017* EARTH FAULT

Incorrect wiring

Defines the operation when incorrect input power cable connection is detected.

Settings

Parameter *3023* WIRING FAULT

Preprogrammed faults

Overcurrent

The overcurrent trip limit for the drive is 325% of the drive nominal current.

DC overvoltage

The DC overvoltage trip limit is 420 V (for 200 V drives) and 840 V (for 400 V drives).

DC undervoltage

The DC undervoltage trip limit is adaptive. See parameter *2006* UNDERVOLT CTRL.

Drive temperature

The drive supervises the IGBT temperature. There are two supervision limits: Alarm limit and fault trip limit.

Short circuit

If a short circuit occurs, the drive will not start and a fault indication is given.

Internal fault

If the drive detects an internal fault, the drive is stopped and a fault indication is given.

Supply phase loss

If the drive detects supply phase loss (excessive DC voltage ripple), the drive is stopped and a fault indication is given.

Operation limits

The drive has adjustable limits for output frequency, current (maximum) and DC voltage.

Settings

Parameter *Group 20: Limits*

Power limit

Power limitation is used to protect the input bridge and the DC intermediate circuit. If the maximum allowed power is exceeded, the drive torque is automatically limited. Maximum overload and continuous power limits depend on the drive hardware. For specific values, see chapter *Technical data* on page *348*.

Automatic resets

The drive can automatically reset itself after overcurrent, overvoltage, undervoltage, external and “analog input below a minimum” faults. The Automatic Resets must be activated by the user.

Settings

Parameter	Additional information
Group 31: Automatic Reset	Automatic reset settings

Diagnostics

Alarm	Additional information
AUTORESET	Automatic reset alarm

Supervisions

The drive monitors whether certain user selectable variables are within the user-defined limits. The user may set limits for speed, current etc. The supervision status can be indicated through relay or digital output.

The supervision function outputs can be used for triggering some drive functionality (start/stop, sleep, pump cleaning).

The supervision functions operate on a 2 ms time level.

Settings

Parameter group *Group 32: Supervision*

Diagnostics

Actual signal	Additional information
1001/*1002*	EXT1/EXT2 start/stop according to supervision functions
1401	Supervision status through RO 1
1402/*1403*/*1410*	Supervision status through RO 2…4. With option MREL-01 only.
1805	Supervision status through DO
4022/*4122*	Sleep start according to supervision functions
4601	Pump clean trigger according to supervision functions

Parameter lock

The user can prevent parameter adjustment by activating the parameter lock.

Settings

Parameters *1602* PARAMETER LOCK and *1603* PASS CODE

PID control

There are two built-in PID controllers in the drive:

- Process PID (PID1) and
- External/Trim PID (PID2).

The PID controller can be used when the motor speed needs to be controlled based on process variables such as pressure, flow or temperature.

When the PID control is activated, a process reference (setpoint) is connected to the drive instead of a speed reference. An actual value (process feedback) is also brought back to the drive. The drive compares the reference and the actual values, and automatically adjusts the drive speed in order to keep the measured process quantity (actual value) at the desired level (reference).

The control operates on a 2 ms time level.

Process controller PID1

PID1 has two separate sets of parameters (*Group 40: Process PID Set 1*, *Group 41: Process PID Set 2*). Selection between parameter sets 1 and 2 is defined by a parameter.

In most cases when there is only one transducer signal wired to the drive, only parameter set 1 is needed. Two different parameter sets (1 and 2) are used eg when the load of the motor changes considerably in time.

External/Trim controller PID2


PID2 (*Group 42: External PID*) can be used in two different ways:

- External controller: Instead of using additional PID controller hardware, the user can connect PID2 output via drive analog output or fieldbus controller to control a field instrument like a damper or a valve.
- Trim controller: PID2 can be used to trim or fine tune the reference of the drive. See section *Reference trimming* on page *97*.


Block diagrams

The figure below shows an application example: The controller adjusts the speed of a pressure boost pump according to the measured pressure and the set pressure reference.


Example:
Pressure boost pump

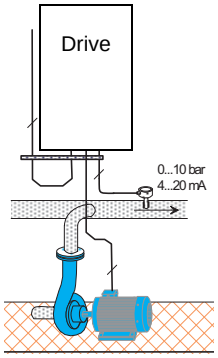

PID control block diagram

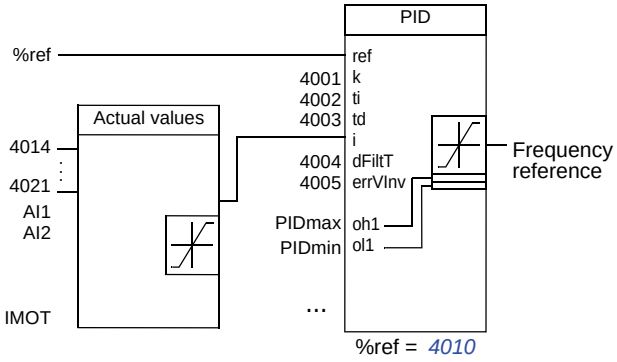

The following figure presents the speed/scalar control block diagram for process controller PID1.

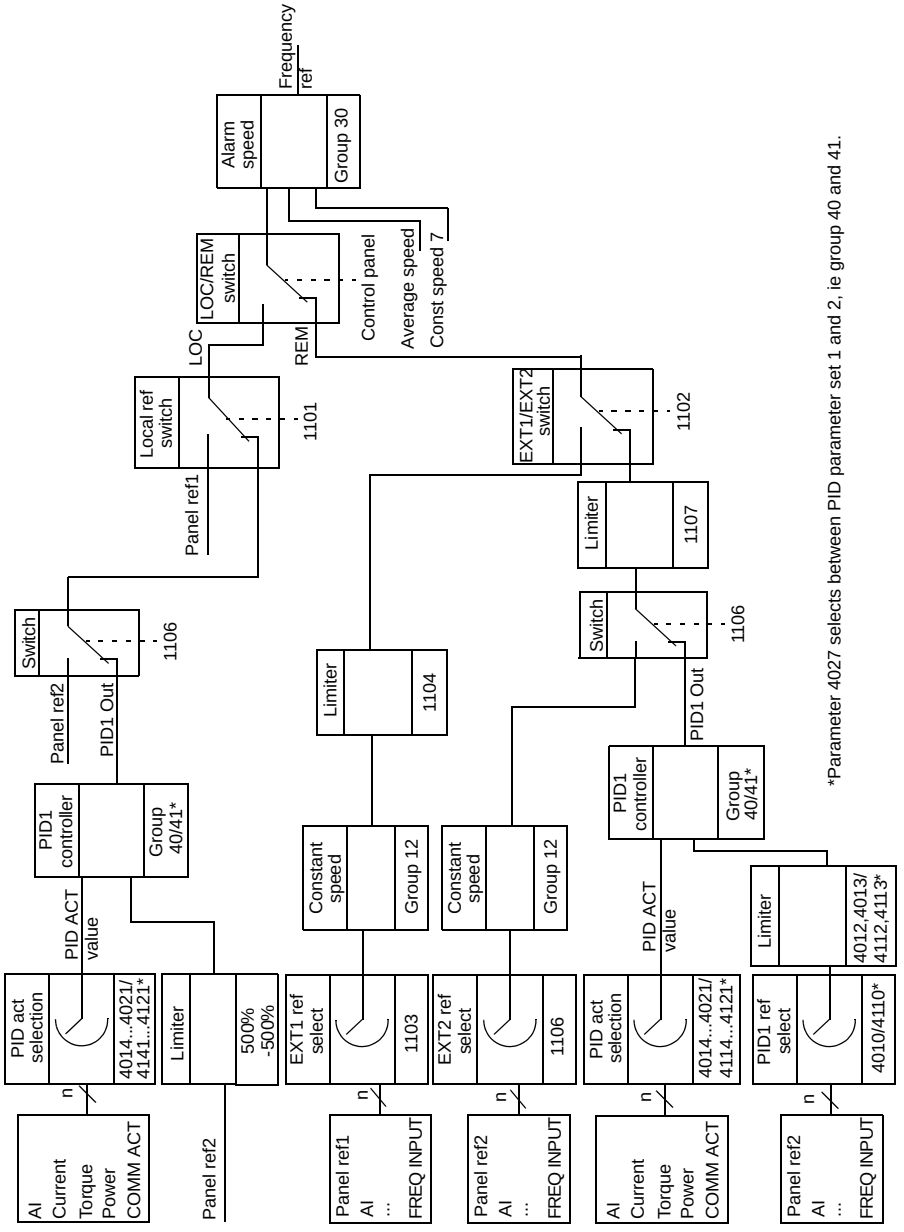

Settings

Parameter	Additional information
1101	Local control mode reference type selection
1102	EXT1/2 selection
1106	PID1 activation
1107	REF2 minimum limit
1501	PID2 output (external controller) connection to AO
9902	PID control macro selection
Group 40: Process PID Set 1…*Group 41: Process PID Set 2*	PID1 settings
Group 42: External PID	PID2 settings


Diagnostics

Actual signal	Additional information
0126/*0127*	PID 1/2 output value
0128/*0129*	PID 1/2 setpoint value
0130/*0131*	PID 1/2 feedback value
0132/*0133*	PID 1/2 deviation

Sleep function for the process PID (PID1) control

The sleep function operates on a 2 ms time level.


The block diagram below illustrates the sleep function enable/disable logic. The sleep function can be put into use only when the PID control is active.

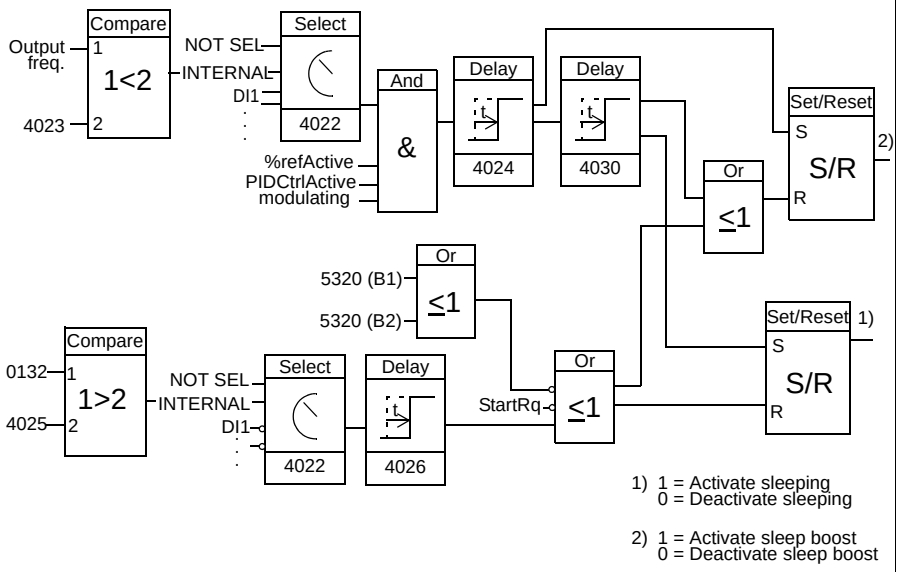

Mot. speed: Actual speed of the motor
%refActive: The % reference (EXT REF2) is in use. See parameter *1102*.
PIDCtrlActive: *9902* is PID CTRL.
modulating: The inverter IGBT control is operating.

Example

The time scheme below visualizes the operation of the sleep function.

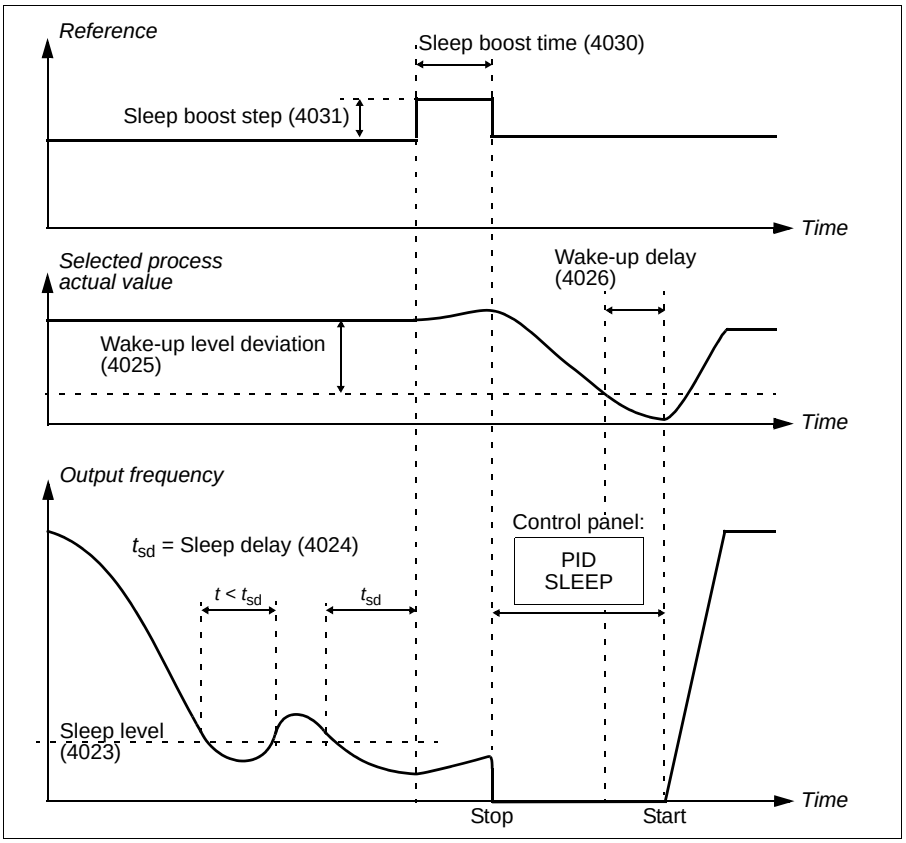

Sleep function for a PID controlled pressure boost pump (when parameter 4022 is set to INTERNAL): The water consumption falls at night. As a consequence, the PID process controller decreases the motor speed. However, due to natural losses in the pipes and the low efficiency of the centrifugal pump at low speeds, the motor does not stop but keeps rotating. The sleep function detects the slow rotation, and stops the unnecessary pumping after the sleep delay has passed. The drive shifts into sleep mode, still monitoring the pressure. The pumping restarts when the pressure falls under the allowed minimum level and the wake-up delay has passed.

Settings

Parameter	Additional information
9902	PID control activation
4022…*4026*, *4030*, *4031*, *4122*…*4126*, *4130*, *4131*	Sleep function settings


Diagnostics

Parameter	Additional information
1401	PID sleep function status through RO 1
1402/*1403*/*1410*	PID sleep function status through RO 2…4. With option MREL-01 only.
Alarm	**Additional information**
PID SLEEP	Sleep mode

Motor temperature measurement through the standard I/O

This section describes the temperature measurement of one motor when the drive I/O terminals are used as the connection interface.

Motor temperature can be measured using PT100 or PTC sensors connected to analog input and output.

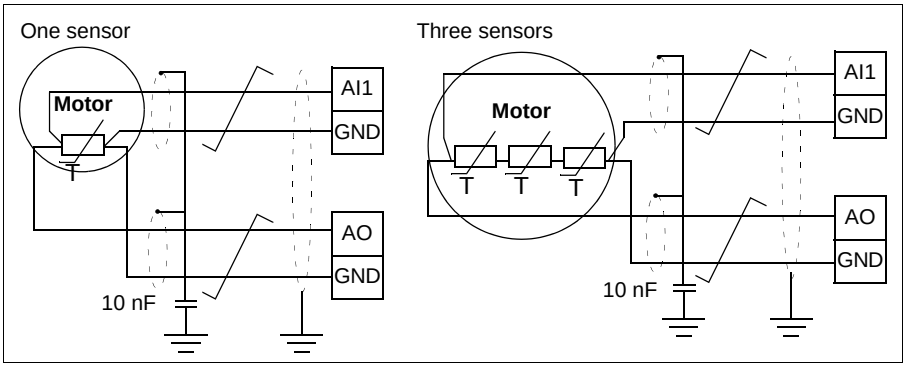


WARNING! According to IEC 664, the connection of the motor temperature sensor requires double or reinforced insulation between motor live parts and the sensor. Reinforced insulation entails a clearance and creepage distance of 8 mm (400/500 V AC equipment). If the assembly does not fulfill the requirement

- **the I/O board terminals must be protected against contact and they may not be connected to other equipment**

or

- **the temperature sensor must be isolated from the I/O terminals.**

It is also possible to monitor motor temperature by connecting a PTC sensor and a thermistor relay between the +24 V DC voltage supply offered by the drive and a digital input. The figure below displays the connection.

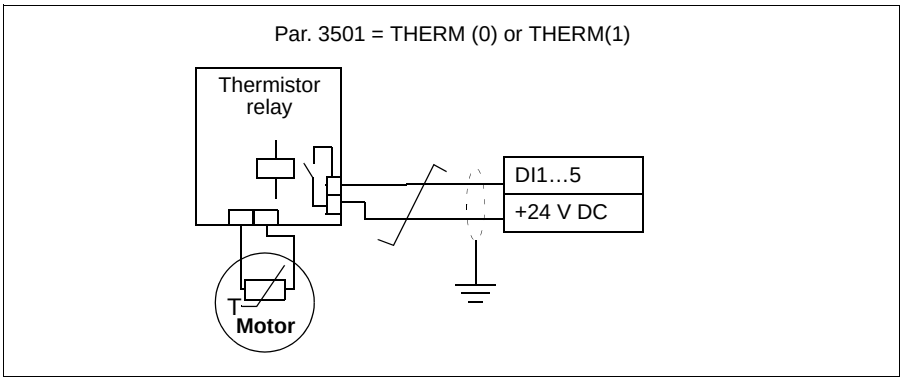

WARNING! According to IEC 664, the connection of the motor thermistor to the digital input requires double or reinforced insulation between motor live parts and the thermistor. Reinforced insulation entails a clearance and creeping distance of 8 mm (400/500 V AC equipment).

If the thermistor assembly does not fulfill the requirement, the other I/O terminals of the drive must be protected against contact, or a thermistor relay must be used to isolate the thermistor from the digital input.

Settings

Parameter	**Additional information**
Group 13: Analog Inputs	Analog input settings
Group 15: Analog Outputs	Analog output settings
Group 35: Motor Temp Meas	Motor temperature measurement settings
Other	
At the motor end the cable shield should be earthed through a 10 nF capacitor. If this is not possible, the shield is to be left unconnected.	

Diagnostics


Actual value	**Additional information**
0145	Motor temperature
Alarm/Fault	**Additional information**
MOTOR TEMP/*MOT OVERTEMP*	Excessive motor temp

Timed functions


A variety of drive functions can be time controlled, eg start/stop and EXT1/EXT2 control. The drive offers

- four start and stop times (START TIME 1…4, STOP TIME 1…4)
- four start and stop days (START DAY 1…4, STOP DAY 1…4)
- four timed functions for collecting the selected time periods 1…4 together (TIMED FUNC 1…4)
- booster time (an additional booster time connected to timed functions).

A timed function can be connected to multiple time periods:

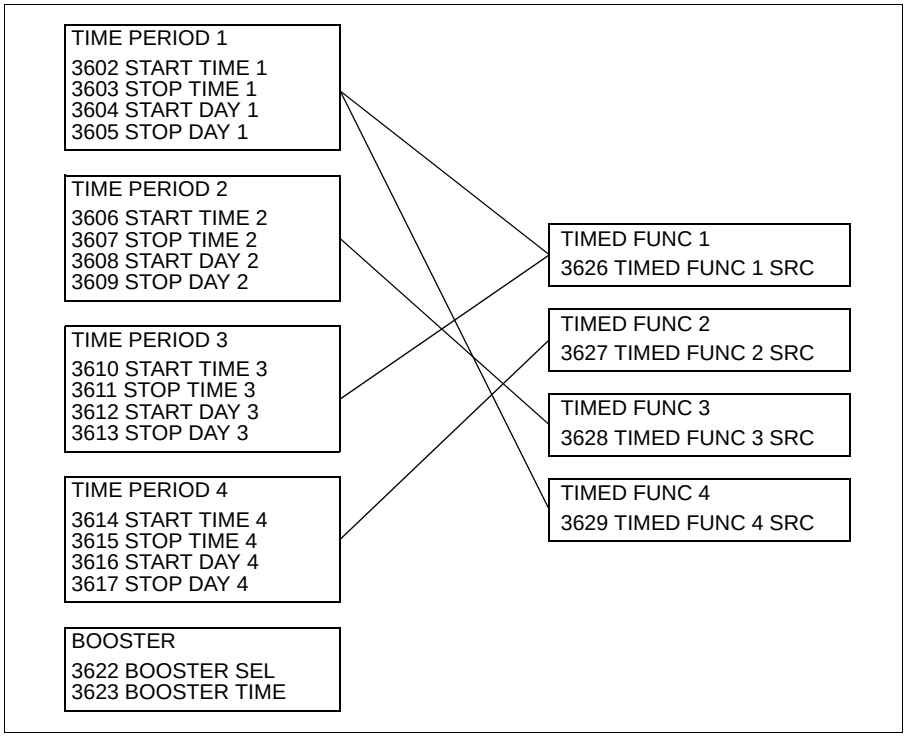

A parameter which is triggered by a timed function can be connected to only one timed function at a time.

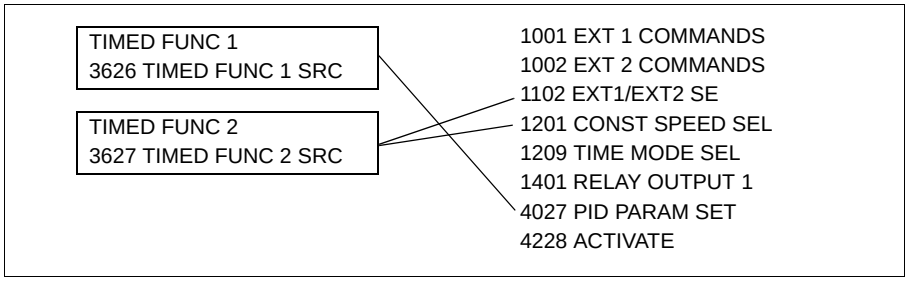

Examples

Air conditioning is active on weekdays from 8:00 to 15:30 (8 a.m to 3:30 p.m) and on Sundays from 12:00 to 15:00 (12 to 3 p.m). By pressing the extension time switch, the air-conditioning is on for an extra hour.

Parameter	Setting
3601 TIMERS ENABLE	DI1
3602 START TIME 1	08:00:00
3603 STOP TIME 1	15:30:00
3604 START DAY 1	MONDAY
3605 STOP DAY 1	FRIDAY
3606 START TIME 2	12:00:00
3607 STOP TIME 2	15:00:00
3608 START DAY 2	SUNDAY
3609 STOP DAY 2	SUNDAY
3623 BOOSTER TIME	01:00:00


Settings

Parameter	Additional information
Group 36: Timer Functions	Timed functions settings
1001, *1002*	Timed start/stop control
1102	Timed EXT1/EXT2 selection
1201	Timed constant speed 1 activation
1209	Timed speed selection
1401	Timed function status indicated through relay output RO 1
1402/*1403*/*1410*	Timed function status indicated through relay output RO 2…4. With option MREL-01 only.
1805	Timed function status indicated through digital output DO
4027	Timed PID1 parameter set 1/2 selection
4228	Timed external PID2 activation

User load curve

The user can specify a load curve (motor torque as a function of frequency) for supervision. The curve is defined by five points. Supervision can be set for the torque dropping below the underload curve, exceeding the overload curve, or both.

A fault is generated if the torque has been out of the allowed area for longer than the user-defined time limit. An alarm is generated if the torque has been out of the allowed area for longer than the half of the user-defined time limit.

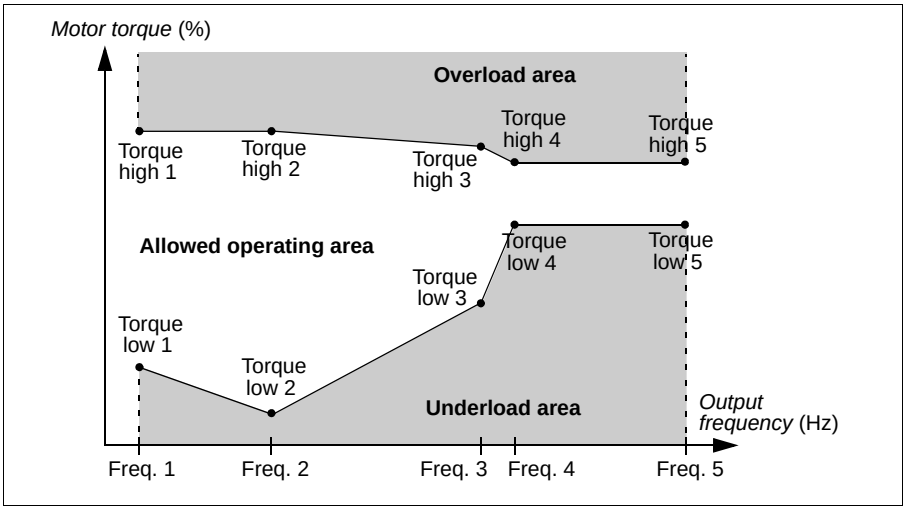

Settings

Parameter	Additional information
Group 37: User Load Curve	User load curve settings

Diagnostics

Actual signal	Additional information
0105	Motor torque
Alarm	
USER LOAD CURVE	Out of allowed area for longer than half of the defined time limit
Fault	
USER LOAD CURVE	Out of allowed area for longer than the defined time limit
PAR USER LOAD C	Incorrect user load curve parameter setting (*3704* > *3707* or *3707* > *3710* or *3710* > *3713* or *3713* > *3716* or *3705* > *3706* or *3708* > *3709* or *3711* > *3712* or *3714* > *3715* or *3717* > *3718*)

Energy optimizer

Energy optimizer optimizes the flux so that the total energy consumption and motor noise level are reduced when the drive operates below the nominal load. The total efficiency (motor and drive) can be improved by 1…10% depending on load torque and speed.

Energy saving tools calculate energy saved in kWh and MWh, energy saved in local currency as well as reduction in CO_2 emission, all compared to the situation when the pump is connected directly to the supply.

Settings


Parameter	Additional information
Group 45: Energy Savings	Energy saving settings

Diagnostics

Actual signal	Additional information
0174/*0175*	Energy saved in kWh/Mwh
0176/*0177*	Energy saved in local currency
0178	Reduction in CO_2 emission

Pump cleaning

Pump cleaning sequence consists of cyclic forward and reverse “steps”. See the figure below. The pump cleaning cycle can be activated at start-up, with a user-defined period, with a selectable digital input or by the Supervision function (for example triggered by the motor input current).

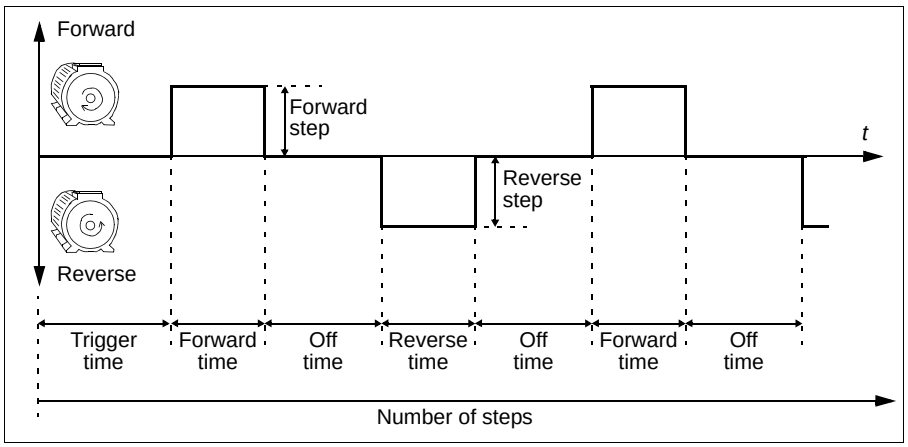

Settings

Parameter	Additional information
Group 46: Pump Cleaning	Pump cleaning settings
2205/*2206*	Acceleration time 2 / Deceleration time 2

Load analyzer

The load analyzer can be used for analyzing the customer's process and sizing the drive and the motor.

The peak value is logged at 2 ms level, and the distribution loggers are updated on 0.2 s (200 ms) time level. Three different values can be logged:

1. The measured current is logged continuously. The distribution as a percentage of the maximum current is shown in ten classes.
2. One signal in group 1 can be logged for the peak (maximum) value. The peak value of the signal, peak time (time when the peak value was detected) as well the frequency, current and DC voltage at the peak time are shown.
3. One signal in group 1 can be logged for amplitude distribution. The base value (100% value) can be set by the user.

Logger 1 cannot be reset. Loggers 2 and 3 can be reset by a user-defined method. They are also reset if either of the signals or the peak value filter time is changed.

Settings

Parameter	Additional information
Group 64: Load Analyzer, parameters *6401*…*6405*	Load analyzer settings

Diagnostics

Actual signal	Additional information
Group 64: Load Analyzer, parameters *6406*…*6433*	Load analyzer results

PFC Control
(Requires use of MREL-01 option purchased Separately)

PFC control

Pump and Fan Control (PFC) control switches auxiliary pumps on and off as required by capacity changes. Autochange function alternates between pumps to keep the duty times of the pumps equal. Interlocks function enables the drive to detect if any of the pumps are unavailable (eg switched off for maintenance), in which case the next available pump is started instead.

The drive controls the motor of pump 1, varying the motor speed to control the pump capacity. This motor is the speed regulated motor.

Direct line connections power the motor of pump 2 and pump 3, etc. The drive switches pump 2 (and then pump 3, etc.) on and off as needed. These motors are auxiliary motors.

The drive PID control uses two signals: a process reference and an actual value feedback. The PID controller adjusts the speed (frequency) of the first pump such that the actual value follows the process reference.

When demand (defined by the process reference) exceeds the first motor's capacity (user defined as a frequency limit), the PFC control automatically starts an auxiliary pump. The PFC also reduces the speed of the first pump to account for the auxiliary pump's addition to total output. Then, as before, the PID controller adjusts the speed (frequency) of the first pump such that the actual value follows the process reference. If demand continues to increase, PFC adds additional auxiliary pumps, using the same process.

When demand drops, such that the first pump speed falls below a minimum limit (user defined by a frequency limit), the PFC control automatically stops an auxiliary pump. The PFC also increases the speed of the first pump to account for the auxiliary pump's missing output.

An Interlock function (when enabled) identifies off-line (out of service) motors, and the PFC control skips to the next available motor in the sequence.

An Autochange function (when enabled and with the appropriate switchgear) equalizes duty time between the pump motors. Autochange periodically increments the position of each motor in the rotation – the speed regulated motor becomes the last auxiliary motor, the first auxiliary motor becomes the speed regulated motor, etc.

When the speed regulated motor reaches the full output, it is disconnected from the drive and switched to direct on-line connection, with a slight delay in between.

Auxiliary motor 2 is connected to drive output. After a slight delay the motor speed is increased to fulfill the pumping capacity needed.

Auxiliary motors 3 and 4 are started according to the same routine.

The motor stopping routine always follows the normal PFC routine.

Settings

Parameter	Additional information
Group 14: Relay Outputs	Selections of relay outputs for starting and stopping of motors
Group 44: Pump Protection	Pump protection (pressure monitoring) settings
Group 81: PFA	PFC control settings

Diagnostics

Actual signal	Additional information
0116	Application block output signal
0162	RO 1 status
0173	RO 2…4 status. With option MREL-01 only.
Alarm	
AUTOCHANGE	PFC Autochange function active
PFC I LOCK	PFC interlocks active
INLET LOW, *INLET VERY LOW*	Pressure at pump/fan inlet too low
OUTLET HIGH, *OUTLET VERY HIGH*	Pressure at pump/fan outlet too high
Fault	**Additional information**
PAR PFC REF NEG	*2007* < 0
PAR PFC IO 1	Not enough relays parameterized for PFC. Conflict between *Group 14: Relay Outputs*, parameter *8117* and parameter *8118*.
PAR PFC IO 2	Parameter *8127* does not match the PFC motors in *Group 14: Relay Outputs* and parameter *8118*
PAR PFC IO 3	Allocation of a digital input (interlock) for each PFC motor not possible
INLET LOW, *INLET VERY LOW*	Pressure at pump/fan inlet too low
OUTLET HIGH, *OUTLET VERY HIGH*	Pressure at pump/fan outlet too high

10

Actual signals and parameters

What this chapter contains

The chapter describes the actual signals and parameters and gives the fieldbus equivalent values for each signal/parameter. It also contains a table of the default values for the different macros.

Note: When the control panel is in the short parameter view, ie when parameter *1611* PARAMETER VIEW is set to 2 (SHORT VIEW), the control panel only shows a subset of all signals and parameters. The list of these signals and parameters starts on page *126*.

To be able to view all actual signals and parameters, set parameter *1611* PARAMETER VIEW to 3 (LONG VIEW). The descriptions of parameters start on pages *128*.

Terms and abbreviations

Term	Definition
Actual signal	Signal measured or calculated by the drive. Can be monitored by the user. No user setting possible. Groups 01…04 contain actual signals.
Def	Parameter default value
Parameter	A user-adjustable operation instruction of the drive. Groups 10…99 contain parameters. **Note:** Parameter selections are shown on the Basic Control Panel as integer values. Eg parameter *1001* EXT1 COMMANDS selection COMM is shown as value 10 (which is equal to the fieldbus equivalent FbEq).
FbEq	Fieldbus equivalent: The scaling between the value and the integer used in serial communication.

Fieldbus equivalent

Example: If *2008* MAXIMUM FREQ (see page *170*) is set from an external control system, an integer value of 1 corresponds to 0.1 Hz. All the read and sent values are limited to 16 bits (-32768…32767).

Actual signals in the short parameter view

Actual signals in the short parameter view		
No. Name/Value	**Description**	**FbEq**
04 FAULT HISTORY	Fault history (read-only). See *Group 04: Fault History* in the list of all parameters.	
0401 LAST FAULT	Code of the latest fault.	1 = 1

Parameters in the short parameter view

Parameters in the short parameter view		
No. Name/Value	**Description**	**Default**
11 REFERENCE SELECT	Panel reference type, external control location selection and external reference sources and limits. See *Group 11: Reference Select* in the list of all parameters.	
1105 REF1 MAX	Defines the maximum value for external reference REF1.	E: 50.0 Hz U: 60.0 Hz
12 CONSTANT SPEEDS	Constant speed (drive output frequency) selection and values. See *Group 12: Constant Speeds* in the list of all parameters.	
1202 CONST SPEED 1	Defines constant drive output frequency 1.	E: 5.0 Hz U: 6.0 Hz
1203 CONST SPEED 2	Defines constant drive output frequency 2.	E: 10.0 Hz U: 12.0 Hz
1204 CONST SPEED 3	Defines constant drive output frequency 3.	E: 15.0 Hz U: 18.0 Hz
13 ANALOG INPUTS	Analog input signal processing. See *Group 13: Analog Inputs* in the list of all parameters.	
1301 MINIMUM AI1	Defines the minimum %-value that corresponds to minimum mA/(V) signal for analog input AI1.	1.0%
14 RELAY OUTPUTS	Status information indicated through relay output, and relay operating delays. See *Group 14: Relay Outputs* in the list of all parameters.	
1401 RELAY OUTPUT 1	Selects a drive status indicated through relay output RO 1.	FAULT(-1)
16 SYSTEM CONTROLS	Parameter view, Run Enable, parameter lock etc. See *Group 16: System Controls* in the list of all parameters.	
1611 PARAMETER VIEW	Selects the parameter view, ie which parameters are shown on the control panel.	SHORT VIEW
20 LIMITS	Drive operation limits. See *Group 20: Limits* in the list of all parameters.	
2008 MAXIMUM FREQ	Defines the maximum limit for the drive output frequency.	E: 50.0 Hz U: 60.0 Hz

Parameters in the short parameter view			
No.	**Name/Value**	**Description**	**Default**
21	**START/STOP**	Start and stop modes of the motor. See *Group 21: Start/Stop* in the list of all parameters.	
2102	STOP FUNCTION	Selects the motor stop function.	COAST
22	**ACCEL/DECEL**	Acceleration and deceleration times. See *Group 22: Accel/Decel* in the list of all parameters.	
2202	ACCELER TIME 1	Defines the acceleration time 1.	5.0 s
2203	DECELER TIME 1	Defines the deceleration time 1.	5.0 s
99	**START-UP DATA**	Language selection. Definition of motor set-up data. See *Group 99: Start-up Data* in the list of all parameters.	
9901	LANGUAGE	Selects the display language.	ENGLISH
9902	APPLIC MACRO	Selects the application macro.	ABB STANDARD
9905	MOTOR NOM VOLT	Defines the nominal motor voltage.	230 V (200 V units) 400 V (400 V E units) 460 V (400 V U units)
9906	MOTOR NOM CURR	Defines the nominal motor current.	I_{2N}
9907	MOTOR NOM FREQ	Defines the nominal motor frequency.	E: 50.0 Hz U: 60.0 Hz
9908	MOTOR NOM SPEED	Defines the nominal motor speed.	Type dependent
9909	MOTOR NOM POWER	Defines the nominal motor power.	P_N

Parameter Descriptions

Parameter data is specific to ACS320 firmware version 4.01C.


Group 99: Start-up Data

This group defines special Start-up data required to:

- Set up the drive.
- Enter motor information

Note! Parameters checked under the heading “S” can be modified only when the drive is stopped.

Group 99: Start-up Data					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
9901	**LANGUAGE** Selects the display language. 0= ENGLISH 1= ENGLISH (AM) 2= DEUTSCH 3= ITALIANO 4= ESPAÑOL 5= PORTUGUES 6= NEDERLANDS 7= FRANCAIS 8= DANSK 9= SUOMI 10= SVENSKA 11= RUSSKI 12= POLSKI 13= TÜRKCE 14= CZECH 15= MAGYAR	**0...13**	**1**	**0**	
9902	**APPLIC MACRO** Selects an application macro. Application macros automatically edit parameters to configure the ACS320 for a particular application. See "Application Macros" for application macro descriptions. 1= HVAC DEFAULT 2= SUPPLY FAN 3= RETURN FAN 4= COOLING TOWER FAN 5= CONDENSER 6= BOOSTER PUMP 7= PUMP ALTERNATION 8= INTERNAL TIMER 9= INTERNAL TIMER WITH CONSTANT SPEEDS 10= FLOATING POINT 11= DUAL SETPOINT PID 12= DUAL SETPOINT PID WITH CONSTANT SPEEDS 13= E -BYPASS 14= HAND CONTROL 15= E-CLIPSE 31 = LOAD FD SET - FrontDrop parameter values as defined by the FlashDrop file. Parameter view is selected by parameter 1611 PARANETER VIEW. • FlashDrop is an optional device for fast copying of parameters to unpowered drives. FlashDrop allows easy customization of the parameter list, e.g. selected parametes can be hidden. For more information, see *MFDT-01 FlashDrop User’s Manual* [3AFE68591074 (English)]. -1 = USER S1 SAVE, -3 = USER S2 SAVE - With these it is possible to save two different user parameter sets into the drive permanent memory for later use. Each set contains parameter settings, including *Group 99: START-UP DATA*, and the results of the motor identification run. 0 = USER S1 LOAD, -2 = USER S2 LOAD - With these the user parameter sets can be taken back in use.	**-1...15**	**1**	**1**	✓

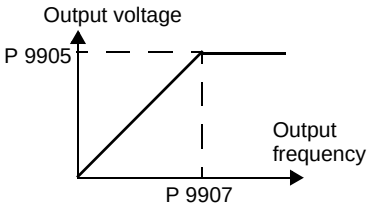Group 99: Start-up Data					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
9905	**MOTOR NORM VOLT**	**115...345V (200V, US)** **230...690V (400V, US)** **288...862V (600V, US)**	**1V** **1V** **1V**	**230V** **460V** **575V**	✓
	Defines the nominal motor voltage. • Must equal the value on the motor rating plate. • Sets the maximum drive output voltage supplied to the motor. • The ACH550 cannot supply the motor with a voltage greater than the mains voltage.  				
9906	**MOTOR NOM CURR**	**0.15*I_{2N}…1.5*I_{2N}**	**0.1 A**	**1.5*I_{2N}**	✓
	Defines the nominal motor current. • Must equal the value on the motor rating plate. • Range allowed: (0.2…2.0) · I_N (where I_N is drive current).				
9907	**MOTOR NOM FREQ**	**10.0…500 Hz**	**0.1 Hz**	**60 Hz (US)**	✓
	Defines the nominal motor frequency. • Range: 10…500 Hz (typically 50 or 60 Hz) • Sets the frequency at which output voltage equals the MOTOR NOM VOLT. • Field weakening point = Norm freq * Supply Volt / Mot Nom Volt				
9908	**MOTOR NOM SPEED**	**50…30000 rpm**	**1 rpm**	Size dependent	✓
	Defines the nominal motor speed. • Must equal the value on the motor rating plate.				
9909	**MOTOR NOM POWER**	**0.15…1.5*P_N**	**0.1 Hp**	**0.2 HP (US)**	✓
	Defines the nominal motor power. • Must equal the value on the motor rating plate.				

Group 01: Operating Data

This group contains drive operating data, including actual signals. The drive sets the values for actual signals, based on measurements or calculations. You cannot set these values.

Group 01: Operating Data					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
0101	**SPEED & DIR**	**-30000...30000**	**1 rpm**	**-**	
	The calculated speed of the motor (rpm) & motor direction.				
0102	**SPEED**	**0...30000 rpm**	**1 rpm**	**-**	
	The calculated speed of the motor (rpm).				
0103	**OUTPUT FREQ**	**0.0...500.0 Hz**	**1Hz**	**-**	
	The frequency (Hz) applied to the motor. (Also shown by default in OUTPUT display.)				
0104	**CURRENT**	**0.0...1.5*I_{2N}**	**0.1 A**	**-**	
	The motor current, as measured by the ACH550. (Also shown by default in OUTPUT display.)				
0105	**TORQUE**	**-200%…200%**	**0.1%**	**-**	
	Output torque. Calculated value of torque on motor shaft in % of motor nominal torque.				
0106	**POWER**	**-1.5…1.5*P_N**	**0.1 kW**	**-**	
	The measured motor power in kW.				
0107	**DC BUS VOLTAGE**	**0 V…2.5*V_{dN}**	**1 V**	**-**	
	The DC bus voltage in VDC, as measured by the ACH550.				
0109	**OUTPUT VOLTAGE**	**0 V…2.0*V_{dN}**	**1 V**	**-**	
	The voltage applied to the motor.				
0110	**DRIVE TEMP**	**0°C…150°C**	**1°C**	**-**	
	The temperature of the drive power transistors in Centegrade.				
0111	**EXTERNAL REF 1**	**0...30000 rpm / 0...500 Hz**	**1 rpm / 0.1 Hz**	**-**	
	External reference, REF1, rpm or Hz - units determined by parameter *9904*.				
0112	**EXTERNAL REF 2**	**0%...100% (torque: 0%...600%**	**0.1%**	**-**	
	External reference, REF2, in %				
0113	**CTRL LOCATION**	**0...2**	**1**	**-**	
	Active control location. Alternatives are: 0 = HAND 1 = EXT1 2 = EXT2				
0114	**RUN TIME (R)**	**0...65,535 h**	**1 h**	**0 h**	
	The drive's accumulated running time in hours (h). • Can be **reset** by pressing UP and DOWN buttons simultaneously when in parameter set mode.				

Group 01: Operating Data					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
0115	**KWH COUNTER (R)** The drive's accumulated power consumption in kilowatt hours. • Can be **reset** by pressing UP and DOWN buttons simultaneously when in parameter set mode.	**0...65,535 kWh**	**1 kWh**	**-**	
0116	**APPL BLK OUTPUT** Application block output signal. Value is from either: • PFA control, if PFA Control is active, or • Parameter 0112 EXTERNAL REF 2.	**0...100%** **(torque: 0...600%)**	**0.1%**	**-**	
0120	**AI1** Relative value of analog input 1 in %.	**0...100%**	**0.1%**	**-**	
0121	**AI2** Relative value of analog input 2 in %.	**0...100%**	**0.1%**	**-**	
0124	**AO1** The analog output 1 value in milliamperes.	**0...20 mA**	**0.1 mA**	**-**	
0126	**PID 1 OUTPUT** The PID Controller 1 output value in %.	**-1000...1000%**	**0.1%**	**-**	
0127	**PID 2 OUTPUT** The PID Controller 2 output value in %.	**-100...100%**	**0.1%**	**-**	
0128	**PID 1 SETPNT** The PID 1 controller setpoint signal. • Units and scale defined by PID parameters 4006/4106 & 4007/4107.	**-**	**-**	**-**	
0129	**PID 2 SETPNT** The PID 2 controller setpoint signal. • Units and scale defined by PID parameters 4206 & 4207.	**-**	**-**	**-**	
0130	**PID 1 FBK** The PID 1 controller feedback signal. • Units and scale defined by PID parameters 4006/4106 & 4007/4107.	**-**	**-**	**-**	
0131	**PID 2 FBK** The PID 2 controller feedback signal. • Units and scale defined by PID parameters 4206 & 4207.	**-**	**-**	**-**	
0132	**PID 1 DEVIATION** The difference between the PID 1 controller reference value and actual value. • Units and scale defined by PID parameters 4006/4106 & 4007/4107.	**-**	**-**	**-**	
0133	**PID 2 DEVIATION** The difference between the PID 2 controller reference value and actual value. • Units and scale defined by PID parameters 4206 & 4207.	**-**	**-**	**-**	
0134	**COMM RO WORD** Free data location that can be written from serial link. • Used for relay output control. • See parameter 1401.	**0...65535**	**1**	**0**	

Group 01: Operating Data					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
0135	**COMM VALUE 1** Free data location that can be written from serial link.	**-32768...+32767**	**1**	**0**	
0136	**COMM VALUE 2** Free data location that can be written from serial link.	**-32768...+32767**	**1**	**0**	
0137	**PROCESS VAR 1** Process variable 1 • Defined by parameters in Group 34: Panel Display / Process Variables.	**-**	**1**		
0138	**PROCESS VAR 2** Process variable 2 • Defined by parameters in Group 34: Panel Display / Process Variables.	**-**	**1**		
0139	**PROCESS VAR 3** Process variable 3 • Defined by parameters in Group 34: Panel Display / Process Variables.	**-**	**1**		
0140	**RUN TIME** The drive's accumulated running time in thousands of hours (kh).	**0...499.99 kh**	**0.01 kh**	**0 kh**	
0141	**MWH COUNTER** The drive's accumulated power consumption in megawatt hours. Cannot be reset	**0...65,535 MWh**	**1 MWh**	**-**	
0142	**REVOLUTION CNTR** The motor's accumulated revolutions in millions of revolutions.	**0...9999**	**1**	**0**	
0143	**DRIVE ON TIME (HI)** The drive's accumulated power on time in days.	**0...65535 days**	**1 day**	**0**	
0144	**DRIVE ON TIME (LO)** The drive's accumulated power on time in 2 second ticks (30 ticks = 60 seconds).	**0...43200hh:mm:ss**	**2 s**	**0**	
0145	**MOTOR TEMP** Motor temperature in degrees centigrade / PTC rdsistance in Ohms. • Applies only if motor temperature sensor is set up. See parameter 3501.	**-10...200 °C/ 0...5000 Ohm / 0...1**	**1**	**0**	
0158	**PID COMM VALUE 1** Data received from fieldbus for PID control (PID1 and PID2).				
0159	**PID COMM VALUE 2** Data received from fieldbus for PID control (PID1 and PID2).				
0160	**DI 1-5 STATUS** Status of digital inputs. **EXAMPLE:** 10000 = DI1 is on, DI2...DI5 are off.				
0161	**PULSE INPUT FREQ** Value of frequency input in Hz.		**1 = 1 Hz**		
0162	**RO STATUS** Status of relay output 1.1 = RO is energized, 0 = RO is deenergized.		**1 = 1**		

Group 01: Operating Data					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
0163	**TO STATUS**		**1 = 1**		
	Status of transistor output when transistor output is used as a digital output.				
0164	**TO FREQUENCY**		**1 = 1 Hz**		
	Transistor output frequency, when transistor output is used as a frequency output.				
0173	**RO 2-4 STATUS**				
	Status of the relays in the Relay Output Extension Module MREL-0. See *MREL-01 Relay Output Extension Module User's Manual* (3AUA0000035974 [English]). **Example:** 100 = RO 2 is on, RO3 and RO 4 are off.				
0174	**SAVED KWH**		**1 = 0.1 kWh**		
	Energy saved in kWh compared to the energy used when the pump is connected directly to the supply. Can be reset with parameter *4509* ENERGY RESET (resets all energy calculators at the same time). See group *45 ENERGY SAVING*.				
0175	**SAVED MWH**		**1 = 1 MWh**		
	Energy saved in MWh compared to the energy used when the pump is connected directly to the supply. Can be reset with parameter *4509* ENERGY RESET (resets all energy calculators at the same time). See group *45 ENERGY SAVING*.				
0176	**SAVED AMOUNT 1**		**1 = 0.1 (Currency)**		
	Energy saved in local currency. To find out the total saved energy in currency units, add the value of parameter *0177* multiplied by 1000 to the value fo parameter *0176*. **Example:** *0176* SAVED AMOUNT 1 = 123.4 *0177* SAVED AMOUNT 2 = 5 Total saved energy = 5 * 1000 + 123.4 = 5123.4 currency units. Local energy price is set with parameter *4502* ENERGY PRICE. Can be reset with parameter *4509* ENERGY RESET (resets all energy calculators at the same time). See group *45 ENERGY SAVING*.				
0177	**SAVED AMOUNT 2**		**1 = 1000 (Currency)**		
	Energy saved in local currency in thousand currency units. Eg value 5 means 5000 currency units. See parameter *0176* SAVED AMOUNT 1. Local energy price is set with parameter *4502* ENERGY PRICE. Can be reset with parameter *4509* ENERGY RESET (resets all energy calculators at the same time). See group *45 ENERGY SAVING*.				
0178	**SAVED CO2**		**1 = 0.1 tn**		
	Reduction on carbon dioxide emissions in tn. CO_2 conversion factor is set with parameter *4507* CO2 CONV FACTOR. Can be reset with parameter *4509* ENERGY RESET (resets all energy calculators at the same time). See group *45 ENERGY SAVING*.				

Group 03: Actual Signals

This group monitors fieldbus communications.

<table>
<tr><th colspan="6">Group 03: Actual Signals</th></tr>
<tr><th>Code</th><th>Description</th><th>Range</th><th>Resolution</th><th>Default</th><th>S</th></tr>
<tr><td>0301</td><td colspan="5">FB CMD WORD 1 - - -
Read-only copy of the Fieldbus Command Word 1.
• The fieldbus command is the principal means for controlling the drive from a fieldbus controller. The command consists of two Command Words. Bit-coded instructions in the Command Words switch the drive between states.
• To control the drive, using the Command Words, an external location (EXT1 or EXT2) must be active and set to COMM. (See parameters 1001 and 1002.)
• The control panel displays the word in hex. For example, all zeros and a 1 in Bit 0 displays as 0001. All zeros and a 1 in BIt 15 displays as 8000.
<table>
<tr><th>Bit #</th><th>0301, fb cmd word 1</th><th>0302, fb cmd word 2</th></tr>
<tr><td>0</td><td>STOP</td><td>FBLOCAL_CTL</td></tr>
<tr><td>1</td><td>START</td><td>FBLOCAL_REF</td></tr>
<tr><td>2</td><td>REVERSE</td><td>START_DISABLE1</td></tr>
<tr><td>3</td><td>LOCAL</td><td>START_DISABLE2</td></tr>
<tr><td>4</td><td>RESET</td><td>Reserved</td></tr>
<tr><td>5</td><td>EXT2</td><td>Reserved</td></tr>
<tr><td>6</td><td>RUN_DISABLE</td><td>Reserved</td></tr>
<tr><td>7</td><td>STPMODE_R</td><td>Reserved</td></tr>
<tr><td>8</td><td>STPMODE_EM</td><td>Reserved</td></tr>
<tr><td>9</td><td>STPMODE_C</td><td>Reserved</td></tr>
<tr><td>10</td><td>RAMP_2</td><td>Reserved</td></tr>
<tr><td>11</td><td>RAMP_OUT_0</td><td>REF_CONST</td></tr>
<tr><td>12</td><td>RAMP_HOLD</td><td>REF_AVE</td></tr>
<tr><td>13</td><td>RAMP_IN_0</td><td>LINK_ON</td></tr>
<tr><td>14</td><td>RREQ_LOCALLOC</td><td>REQ_STARTINH</td></tr>
<tr><td>15</td><td>TORQLIM2</td><td>OFF_INTERLOCK</td></tr>
</table></td></tr>
<tr><td>0302</td><td colspan="5">FB CMD WORD 2 - - -
Read-only copy of the Fieldbus Command Word 2.
• See parameter 0301.</td></tr>
</table>

Group 03: Actual Signals					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
0303	**FB STS WORD 1**	**-**	**1**	**- hex**	

Read-only copy of the Status Word 1.

- The drive sends status information to the fieldbus controller. The status consists of two Status Words.

Bit #	0303, sts cmd word 1	0304, fb sts word 2
0	READY	ALARM
1	ENABLED	REQ_MAINT
2	STARTED	DIRLOCK
3	RUNNING	LOCALLOCK
4	ZERO_SPEED	CTL_MODE
5	ACCELERATE	Reserved
6	DECELERATE	Reserved
7	AT_SETPOINT	Reserved
8	LIMIT	Reserved
9	SUPERVISION	Reserved
10	REV_REF	REQ_CTL
11	REV_ACT	REQ_REF1
12	PANEL_LOCAL	REQ_REF2
13	FIELDBUS_LOCAL	REQ_REF2EXT
14	EXT2_ACT	ACK_STARTINH
15	FAULT	ACK_OFF_ILCK

0304	**FB STS WORD 2**	**-**	**1**	**- hex**	

Read-only copy of the Status Word 2.

- See parameter 0303.

Group 03: Actual Signals					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
0305	**FAULT WORD 1**	**-**	**1**	**0000 hex**	

Read-only copy of the Fault Word 1.

- When a fault is active, the corresponding bit for the active fault is set in the Fault Words.
- Each fault has a dedicated bit allocated within Fault Words.
- See *"Fault Listing"* in section *"Diagnostics"* for a description of the faults.

The control panel displays the word in hex. For example, all zeros and a 1 in Bit 0 displays a 0001. All zeros and a 1 in Bit 15 displays as 8000.

Bit #	0305,fault word 1	0306, fault word 2	0307, fault word 3
0	OVERCURRENT	UNDERLOAD	EFB 1
1	DC OVERVOLT	THERM FAIL	EFB 2
2	DEV OVERTEMP	OPEX LINK	EFB 3
3	SHORT CIRC	OPEX PWR	Incompatible software type
4	Reserved	CURR MEAS	Reserved
5	DC UNDERVOLT	SUPPLY PHASE	Reserved
6	AI1 LOSS	ENCODER ERROR	Reserved
7	AI2 LOSS	OVERSPEED	Reserved
8	MOT OVERTEMP	Reserved	Reserved
9	PANEL LOSS	DRIVE ID	Reserved
10	ID RUN FAIL	CONFIG FILE	System Error
11	MOTOR STALL	SERIAL 1 ERR	System Error
12	Reserved	EFB CON FILE	System Error
13	EXT FLT 1	FORCE TRIP	System Error
14	EXT FLT 2	MOTOR PHASE	Hardware Error
15	EARTH FAULT	OUTPUT WIRING	Param. Setting Fault

Group 03: Actual Signals					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
0306	**FAULT WORD 2** A16-bit data word. For the possible causes and remedies and fieldbus equivalents, see chapter *Fault tracing* on page *328*.	**-**	**1**	**0000 hex**	

Bit #	
0	Reserved
1	THERM FAIL
2...3	Reserved
4	CURR MEAS
5	SUPPLY PHASE
6	Reserved
7	OVERSPEED
8	Reserved
9	DRIVE ID
10	CONFIG FILE
11	SERIAL 1 ERR
12	EFB CON FILE
13	FORCE TRIP
14	MOTOR PHASE
15	OUTP WIRING

0307	**FAULT WORD 3** A16-bit data word. For the possible causes and remedies and fieldbus equivalents, see chapter *Fault tracing* on page *328*.	**-**	**1**	**0000 hex**	

Bit #	
0	EFB 1
1	EFB 2
2	EFB 3
3	INCOMPATIBLE SW
4	USER LOAD CURVE
5	UNKNOWN EXTENSION
6	INLET VERY LOW
7	OUTLET VERY HIGH
8	INLET LOW
9	OUTLET HIGH
10...14	System error
15	Parameter setting fault

Group 03: Actual Signals					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
0308	**ALARM WORD 1**	**-**	**1**	**0000 hex**	

Read-only copy of the ALARM WORD 1.

- When a fault is active, the corresponding bit for the active fault is set in the Fault Words.
- Each fault has a dedicated bit allocated within Fault Words.
- Bits remain set until the whole alarm word is reset. (Reset by writing zero to the word).
- The control panel displays the word in hex. For example, all zeros and a 1 in Bit 0 diaplays a 0001. All zeros and a 1 in Bit 15 displays as 80000.

Bit #	0308, alarm word 1	0309, alarm word 2
0	OVERCURRENT	Reserved
1	OVERVOLTAGE	PID SLEEP
2	UNDERVOLTAGE	Reserved
3	DIRLOCK	Reserved
4	I/O COMM	START ENABLE 1 MISSING
5	AI1 LOSS	START ENABLE 2 MISSING
6	AI2 LOSS	EMERGENCY STOP
7	PANEL LOSS	Reserved
8	DEVICE OVERTEMP	FIRST START
9	MOT OVERTEMP	Reserved
10	UNDERLOAD	USER LOAD CURVE
11	MOTOR STALL	START DELAY
12	AUTORESET	Reserved
13	PFA AUTOCHANGE	INLET LOW
14	PFC INTERLOCK	INLET HIGH
15	Reserved	PIPE FILL

0309	**ALARM WORD 2**	**-**	**1**	**0000 hex**	

Read-only copy of the ALARM WORD 3.

- See parameter 0308.

0310	**ALARM WORD 3**	**0**	**1**	**0000 hex**	

A 16-bit data word. For the possible causes and remedies and fieldbus equivalents, see chapter *Fault tracing* on page *328*.

An alarm can be reset by resetting the whole alarm word: Write zero to the word.

Bit #	
0	INLET VERY LOW
1	OUTLET VERY HIGH
2...15	Reserved

Group 04: Fault History

This group stores a recent history of the faults reported by the drive.

Group 04: Fault History					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
0401	**LAST FAULT** 0 = Clear the fault history (on panel = NO RECORD). n = Fault code of the last recorded fault.	**Fault code text**	**1**	**0**	
0402	**FAULT TIME 1** The day on which the last fault occurred. Either as: • A date – if real time clock is operating. • The number of days after power on – if real time clock is not used, or was not set.	**Date dd.mm.yy / power-on days**	**1**	**0**	
0403	**FAULT TIME 2** The time at which the last fault occurred. Either as: • Real time, in format hh:mm:ss – if real time clock is operating. • The time since power on (less the whole days reported in 0402), in format hh:mm:ss – if real time clock is not used, or was not set.	**Time hh:mm:ss**	**2 s**	**0**	
0404	**SPEED AT FLT** The motor speed (rpm) at the time the last fault occurred.	**-**	**1 rpm**	**0**	
0405	**FREQ AT FLT** The frequency (Hz) at the time the last fault occurred.	**-**	**0.1 Hz**	**0.0**	
0406	**VOLTAGE AT FLT** The DC bus voltage (V) at the time the last fault occurred.	**-**	**0.1 V**	**0.0**	
0407	**CURRENT AT FLT** The motor current (A) at the time the last fault occurred.	**-**	**0.1 A**	**0.0**	
0408	**TORQUE AT FLT** The motor torque (%) at the time the last fault occurred.	**-**	**0.1%**	**0.0**	
0409	**STATUS AT FLT** The drive status (hex code word) at the time the last fault occurred.	**-**	**1**	**0000 hex**	
0412	**PREVIOUS FAULT 1** Fault code of the second last fault. Read-only	**Fault code text**	**1**	**0**	
0413	**PREVIOUS FAULT 2** Fault code of the third last fault. Read-only.	**Fault code text**	**1**	**0**	
0414	**DI 1-5 AT FLT** Status of digital inputs DI1...5 at the time the latest fault occurred (binary). **Example:** 10000 = DI1 is on, DI2...DI5 are off.				

Group 10: Start/Stop/Dir

This group:

- Defines external sources (EXT1, and EXT2) for commands that enable start, stop and direction changes.
- Locks direction or enables direction control. To select between the two external locations use the next group, parameter 1102.

Group 10: AcStart/Stop/Dir					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1001	**EXT1 COMMANDS**	**0...14**	**1**	**1**	✓
	Defines external control location 1 (EXT1) – the configuration of start, stop and direction commands. 0 = NOT SEL – No external start, stop and direction command source. 1 = DI1 – Two-wire Start/Stop. • Start/Stop is through digital input DI1 (DI1 activated = Start; DI1 de-activated = Stop). • Parameter 1003 defines the direction. Selecting 1003 = 3 (request) is the same as 1003 = 1 (fwd). 2 = DI1, 2 – Two-wire Start/Stop, Direction. • Start/Stop is through digital input DI1 (DI1 activated = Start; DI1 de-activated = Stop). • Direction control (requires parameter 1003 = 3 (request)) is through digital input DI2 (DI2 activated = Reverse; de-activated = Forward). 3 = DI1P, 2P – Three-wire Start/Stop. • Start/Stop commands are through momentary push-buttons (the P stands for “pulse”). • Start is through a normally open push-button connected to digital input DI1. In order to start the drive, the digital input DI2 must be activated prior the pulse in DI1. • Connect multiple Start push-buttons in parallel. • Stop is through a normally closed push-button connected to digital input DI2. • Connect multiple Stop push-buttons in series. • Parameter 1003 defines the direction. Selecting 1003 = 3 (REQUEST) is the same as 1003 = 1 (FWD). 4 = DI1P, 2P, 3 – Three-wire Start/Stop, Direction. • Start/Stop commands are through momentary push-buttons, as described for DI1P, 2P. • Direction control (requires parameter 1003 = 3 (REQUEST)) is through digital input DI3 (DI3 activated = Reverse; de-activated = Forward).				


Group 10: AcStart/Stop/Dir					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
	5 = DI1P, 2P, 3P – Start Forward, Start Reverse, and Stop. • Start and Direction commands are given simultaneously with two separate momentary push-buttons (the P stands for “pulse”). • Start Forward command is through a normally open push-button connected to digital input DI1. In order to start the drive, the digital input DI3 must be activated during the pulse in DI1. • Start Reverse command is through a normally open push-button connected to digital input DI2. In order to start the drive, the digital input DI3 must be activated prior the pulse in DI2. • Connect multiple Start push-buttons in parallel. • Stop is through a normally closed push-button connected to digital input DI3. • Connect multiple Stop push-buttons in series. • Requires parameter 1003 = 3 (REQUEST). 6 = DI6 – Two-wire Start/Stop. • Start/Stop is through digital input DI6 (DI6 activated = Start; DI6 de-activated = Stop). • Parameter 1003 defines the direction. Selecting 1003 = 3 (REQUEST) is the same as 1003 = 1 (FWD). 7 = DI6, 5 – Two-wire Start/Stop/Direction. • Start/Stop is through digital input DI6 (DI6 activated = Start; DI6 de-activated = Stop). • Direction control (requires parameter 1003 = 3 (REQUEST)) is through digital input DI5. (DI5 activated = Reverse; de-activated = Forward). 8 = KEYPAD – Control Panel. • Start/Stop and Direction commands are through the control panel when EXT1 is active. • Direction control requires parameter 1003 = 3 (REQUEST). 9 = DI1F, 2R – Start/Stop/Direction commands through DI1 and DI2 combinations. • Start forward = DI1 activated and DI2 de-activated. • Start reverse = DI1 de-activated and DI2 activated. • Stop = both DI1 and DI2 activated, or both de-activated. • Requires parameter 1003 = 3 (REQUEST). 10 = COMM – Assigns the fieldbus Command Word as the source for the start/stop and direction commands. • Bits 0,1, 2 of Command Word 1 (parameter 0301) activates the start/stop and direction commands. • See Fieldbus user’s manual for detailed instructions. 11 = TIMER 1. – Assigns Start/Stop control to Timer 1 (Timer activated = START; Timer de-activated = STOP). See Group 36, Timer Functions. 12…14 = TIMER 2… 4 – Assigns Start/Stop control to Timer 2…4. See Timer Function 1 above.				
1002	**EXT2 COMMANDS**	**0...14**	**1**	**1**	✓
	Defines external control location 2 (EXT2) – the configuration of start, stop and direction commands. • See parameter 1001 EXT1 COMMANDS above.				

Group 10: AcStart/Stop/Dir					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1003	**DIRECTION** Defines the control of motor rotation direction. 1 = FORWARD – Rotation is fixed in the forward direction. 2 = REVERSE – Rotation is fixed in the reverse direction. 3 = REQUEST – Rotation direction can be changed on command.	**1...3**	**1**	**1**	✓

Group 11: Reference Select

This group defines:

- How the drive selects between command sources.
- Characteristics and sources for REF1 and REF2.

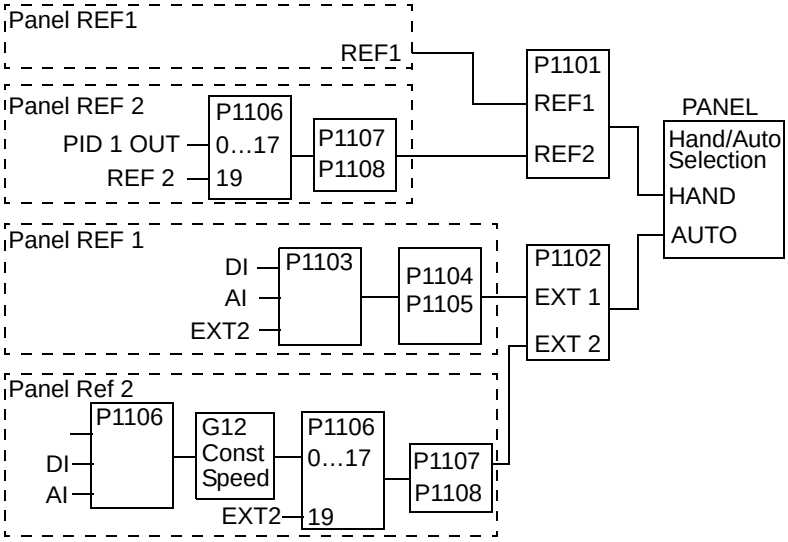

Group 11: Reference Select					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1101	**KEYPAD REF SEL** Selects the reference controlled in local control mode. 1 = REF1 (Hz/rpm) – Reference type depends on parameter 9904 MOTOR CTRL MODE. • Speed reference (rpm) if 9904 = 1 (VECTOR: SPEED). • Frequency reference (Hz) if 9904 = 3 (SCALAR; FREQ). 2 = REF2 (%)	**1,2**	**1**	**1**	

Group 11: Reference Select					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1102	**EXT1/EXT2 SEL**	**-6...12**	**1**	**0**	✓
	Defines the source for selecting between the two external control locations EXT1 or EXT2. Thus, defines the source for Start/Stop/Direction commands and reference signals. 0 = EXT1 – Selects external control location 1 (EXT1). • See parameter 1001 EXT1 COMMANDS for EXT1's Start/Stop/Dir definitions. • See parameter 1103 REF1 SELECT for EXT1's reference definitions. 1 = DI1 – Assigns control to EXT1 or EXT2 based on the state of DI1 (DI1 activated = EXT2; DI1 de-activated = EXT1). 2…6 = DI2…DI6 – Assigns control to EXT1 or EXT2 based on the state of the selected digital input. See DI1 above. 7 = EXT2 – Selects external control location 2 (EXT2). • See parameter 1002 EXT2 COMMANDS for EXT2's Start/Stop/Dir definitions. • See parameter 1106 REF2 SELECT for EXT2's reference definitions. 8 = COMM – Assigns control of the drive via external control location EXT1 or EXT2 based on the fieldbus control word. • Bit 5 of the Command Word 1 (parameter 0301) defines the active external control location (EXT1 or EXT2). • See Fieldbus user's manual for detailed instructions. 9 = TIMER 1 – Assigns control to EXT1 or EXT2 based on the state of the Timer (Timer activated = EXT2; Timer de-activated = EXT1). See Group 36, Timer Functions. 10…12 = TIMER 2… 4 – Assigns control to EXT1 or EXT2 based on the state of the Timer. See Timer 1 above. -1 = DI1(INV) – Assigns control to EXT1 or EXT2 based on the state of DI1 (DI1 activated = EXT1; DI1 de-activated = EXT2). -2…-6 = DI2(INV)…DI6(INV) – Assigns control to EXT1 or EXT2 based on the state of the selected digital input. See DI1(INV) above.				

Group 11: Reference Select					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1103	**REF1 SELECT**	**0...21**	**1**	**1**	✓

Selects the signal source for external reference REF1.


0 = KEYPAD – Defines the control panel as the reference source.

1 = AI1 – Defines analog input 1 (AI1) as the reference source.

2 = AI2 – Defines analog input 2 (AI2) as the reference source.

3 = AI1/JOYST – Defines analog input 1 (AI1), configured for joystick operation, as the reference source.

- The minimum input signal runs the drive at the maximum reference in the reverse direction. Define the minimum using parameter 1104.
- The maximum input signal runs the drive at maximum reference in the forward direction. Define the maximum using parameter 1105.
- Requires parameter 1003=3 (request).

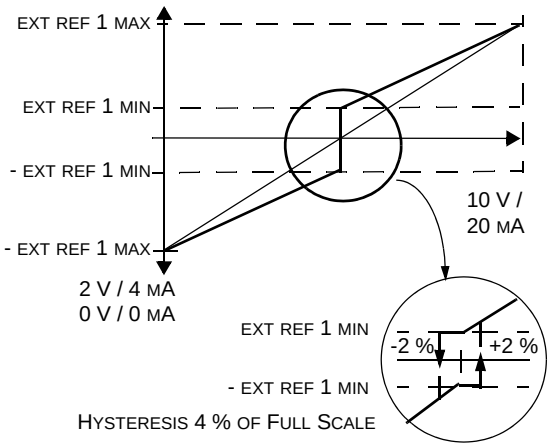
EXT REF 1 MAX
EXT REF 1 MIN
- EXT REF 1 MIN
- EXT REF 1 MAX
10 V / 20 mA
2 V / 4 mA
0 V / 0 mA
EXT REF 1 MIN
-2 %
+2 %
- EXT REF 1 MIN
HYSTERESIS 4 % OF FULL SCALE

Warning! Because the low end of the reference range commands full reverse operation, do not use 0 V as the lower end of the reference range. Doing so means that if the control signal is lost (which is a 0 V input) the result is full reverse operation. Instead, use the following set-up so that loss of the analog input triggers a fault, stopping the drive:

- **Set parameter 1301 MINIMUM AI1 (1304 MINIMUM AI2) at 20% (2 V or 4 mA).**
- **Set parameter 3021 AI1 FAULT LIMIT to a value 5% or higher.**
- **Set parameter 3001 AI<MIN FUNCTION to 1 (FAULT).**

4 = AI2/JOYST – Defines analog input 2 (AI2), configured for joystick operation, as the reference source.

- See above (AI1/JOYST) description.

5 = DI3U,4D(R) – Defines digital inputs as the speed reference source (motor potentiometer control).

- Digital input DI3 increases the speed (the U stands for “up”).
- Digital input DI4 decreases the speed (the D stands for “down”).
- A Stop command resets the reference to zero (the R stands for “reset”).
- Parameter 2205 ACCELER TIME 2 controls the reference signal’s rate of change.

6 = DI3U,4D – Same as above (DI3U,4D(R)), except:

- A Stop command does not reset the reference to zero. The reference is stored.
- When the drive restarts, the motor ramps up (at the selected acceleration rate) to the stored reference.

7 = DI5U,6D – Same as above (DI3U,4D), except that DI5 and DI6 are the digital inputs used.

8 = COMM – Defines the fieldbus as the reference source.


Group 11: Reference Select					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
	9 = COMM+AI1 – Defines a fieldbus and analog input 1 (AI1) combination as the reference source. See Analog Input Reference Correction below. 10 = COMM*AI1 – Defines a fieldbus and analog input 1 (AI1) combination as the reference source. See Analog Input Reference Correction below. 11 = DI3U, 4D(RNC) – Same as DI3U,4D(R) above, except that: • Changing the control source (EXT1 to EXT2, EXT2 to EXT1, LOC to REM) does not copy the reference. 12 = DI3U,4D(NC) – Same as DI3U,4D above, except that: • Changing the control source (EXT1 to EXT2, EXT2 to EXT1, LOC to REM) does not copy the reference. 13 = DI5U,6D(NC) – Same as DI3U,4D above, except that: • Changing the control source (EXT1 to EXT2, EXT2 to EXT1, LOC to REM) does not copy the reference. 14 = AI1+AI2 – Defines an analog input 1 (AI1) and analog input 2 (AI2) combination as the reference source. See Analog Input Reference Correction below. 15 = AI1*AI2 – Defines an analog input 1 (AI1) and analog input 2 (AI2) combination as the reference source. See Analog Input Reference Correction below. 16 = AI1-AI2 – Defines an analog input 1 (AI1) and analog input 2 (AI2) combination as the reference source. See Analog Input Reference Correction below. 17 = AI1/AI2 – Defines an analog input 1 (AI1) and analog input 2 (AI2) combination as the reference source. See Analog Input Reference Correction below.				

Group 11: Reference Select					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
	Analog Input Reference Correction Parameter values 9, 10, and 14…17 use the formula in the following table.				

Value Setting	AI reference is calculated as following:
C + B	C value + (B value - 50% of reference value)
C * B	C value * (B value / 50% of reference value)
C - B	(C value + 50% of reference value) - B value
C / B	(C value * 50% of reference value) / B value

Where:

- C = Main Reference value (= COMM for values 9, 10 and = AI1 for values 14…17).
- B = Correcting reference (= AI1 for values 9, 10 and = AI2 for values 14…17).

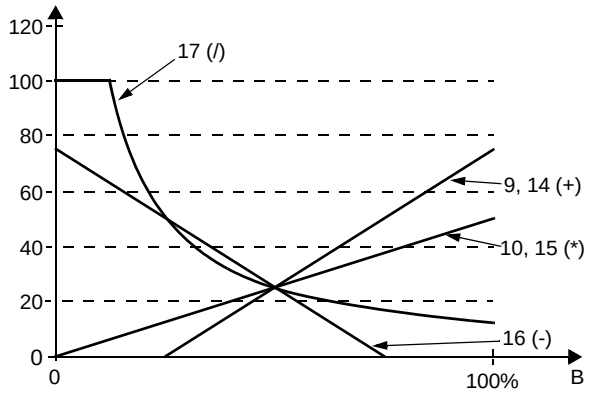

Example:

The figure shows the reference source curves for value settings 9, 10, and 14…17, where:

- C = 25%.
- P 4012 SETPOINT MIN = 0.
- P 4013 SETPOINT MAX = 0.
- B varies along the horizontal axis.

REF1 SELECT



20 = KEYPAD(RNC) – Defines the control panel as the reference source. A Stop command resets the reference to zero (R stands for reset.). Changing the control source (EXT1 to EXT2, EXT2 to EXT1) does not copy the reference.

21 = KEYPAD(NC) – Defines the control panel as the reference source. A Stop command does not reset the reference to zero. The reference is stored. Changing the control source (EXT1 to EXT2, EXT2 to EXT1) does not copy the reference

1104	**REF1 MIN**	**0.0...500.0 Hz** **0...30000 rpm**	**0.1 Hz** **1 rpm**	**0.0 Hz** **0 rpm**	

Sets the minimum for external reference 1.

- The minimum analog input signal (as a percent of the full signal in volts or amps) corresponds to REF1 MIN in Hz/rpm.
- Parameter 1301 MINIMUM AI1 or 1304 MINIMUM AI2 sets the minimum analog input signal.
- These parameters (reference and analog min. and max. settings) provide scale and offset adjustment for the reference.

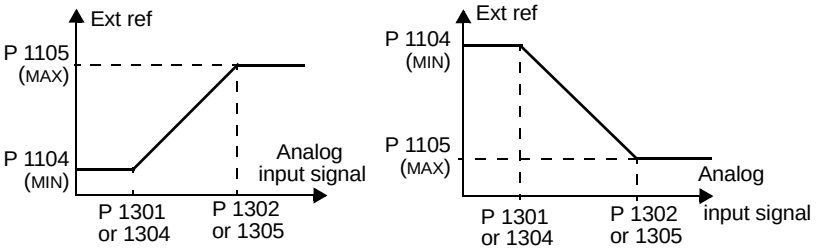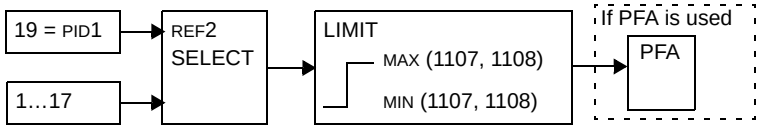Group 11: Reference Select					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1105	**REF1 MAX**	**0.0...500.0 Hz** **0...30000 rpm**	**0.1 Hz** **1 rpm**	**60.0 Hz (US)** **1800 rpm (US)**	
	Sets the maximum for external reference 1. • The maximum analog input signal (as a percent of full the signal in volts or amps) corresponds to REF1 MAX in Hz/rpm. • Parameter 1302 MAXIMUM AI1 or 1305 MAXIMUM AI2 sets the maximum analog input signal. 				
1106	**REF2 SELECT**	**0...19**	**1**	**2**	✓
	Selects the signal source for external reference REF2. 0…17 – Same as for parameter 1103 REF1 SELECT. 19 = PID1OUT – The reference is taken from the PID1 output. See Groups 40 and 41. 				
1107	**REF2 MIN**	**0.0...100.0%** **(torque: 0...600%)**	**0.1%**	**0.0%**	
	Sets the minimum for external reference 2. • The minimum analog input signal (in volts or amps) corresponds to REF2 MIN in %. • Parameter 1301 MINIMUM AI1 or 1304 MINIMUM AI2 sets the minimum analog input signal. • This parameter sets the minimum frequency reference. • The value is a percentage of the: - maximum frequency or speed - maximum process reference - nominal torque				

Group 11: Reference Select					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1108	**REF2 MAX**	**0.0...100.0%** **(torque: 0...600%)**	**0.1%**	**100.0%**	
	Sets the maximum for external reference 2. • The maximum analog input signal (in volts or amps) corresponds to REF2 MAX in %. • Parameter 1302 MAXIMUM AI1 or 1305 MAXIMUM AI2 sets the maximum analog input signal. • This parameter sets the maximum frequency reference. • The value is a percentage of the: - maximum frequency or speed - maximum process reference - nominal torque				

Group 12: Constant Speeds

This group defines a set of constant speeds. In general:

- You can program up to 7 constant speeds, ranging from 0…500 Hz or 0…30000 rpm.
- Values must be positive (No negative speed values for constant speeds).
- Constant speed selections are ignored if:
  - the torque control is active, or
  - the process PID reference is followed, or
  - the drive is in local control mode, or
  - PFA (Pump and Fan Alternation) is active

Note! Parameter 1208 CONST SPEED 7 acts also as a so-called fault speed which may be activated if the control signal is lost. For example, see parameters 3001 AI<MIN FUNCTION, 3002 PANEL COMM ERROR and 3018 COMM FAULT FUNC.

Group 12: Constant Speeds					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1201	**CONST SPEED SEL**	**-14...19**	**1**	**3**	✓

Defines the digital inputs used to select Constant Speeds. See general comments in the introduction.

0 = NOT SEL – Disables the constant speed function.

1 = DI1 – Selects Constant Speed 1 with digital input DI1.

- Digital input activated = Constant Speed 1 activated.

2…5 = DI2…DI5 – Selects Constant Speed 1 with digital input DI2…DI5. See above.

7 = DI1,2 – Selects one of three Constant Speeds (1…3) using DI1 and DI2.

- Uses two digital inputs, as defined below (0 = DI de-activated, 1 = DI activated):

DI1	DI2	Function
0	0	No constant speed
1	0	Constant speed 1 (1202)
0	1	Constant speed 2 (1203)
1	1	Constant speed 3 (1204)

- Can be set up as a so-called fault speed, which is activated if the control signal is lost. Refer to parameter 3001 AI<MIN function and parameter 3002 PANEL COMM ERR.

8 = DI2,3 – Selects one of three Constant Speeds (1…3) using DI2 and DI3.

- See above (DI1,2) for code.

9 = DI3,4 – Selects one of three Constant Speeds (1…3) using DI3 and DI4.

- See above (DI1,2) for code.

10 = DI4,5 – Selects one of three Constant Speeds (1…3) using DI4 and DI5.

- See above (DI1,2) for code.

12 = DI1,2,3 – Selects one of seven Constant Speeds (1…7) using DI1, DI2 and DI3.

- Uses three digital inputs, as defined below (0 = DI de-activated, 1 = DI activated):

DI1	DI2	DI3	Function
0	0	0	No constant speed
1	0	0	Constant speed 1 (1202)
0	1	0	Constant speed 2 (1203)
1	1	0	Constant speed 3 (1204)
0	0	1	Constant speed 4 (1205)
1	0	1	Constant speed 5 (1206)
0	1	1	Constant speed 6 (1207)
1	1	1	Constant speed 7 (1208)

13 = DI3,4,5 – Selects one of seven Constant Speeds (1…7) using DI3, DI4 and DI5.

- See above (DI1,2,3) for code.

Group 12: Constant Speeds

Code	Description	Range	Resolution	Default	S

15…18 = TIMER 1…4 – Specifies the timer used to select a Constant Speed as the reference. The reference selection depends on the state of the selected timer, and the value of 1209 TIMED MODE SEL. See table. To enable and set timers, see Group 36, Timer Functions.

1201 =	15	16	17	18	Reference	
Timer:	1	2	3	4	1209 = 1	1209 = 2
Timer State	0				External reference	Constant Speed 1
	1				Constant Speed 1	Constant Speed 2

15…18 = TIMER FUNCTION 1…4 – Selects Constant speed 1 when Timer Function is active. See Group 36, Timer Functions.

19 = TIMER 1 & 2 – Selects a constant depending on the state of Timers 1 & 2. See parameter 1209.

-1 = DI1(INV) – Selects Constant Speed 1 with digital input DI1.

- Inverse operation: Digital input de-activated = Constant Speed 1 activated.

-2…- 5 = DI2(INV)…DI5(INV) – Selects Constant Speed 1 with digital input. See above.

-7 = DI1,2(INV) – Selects one of three Constant Speeds (1…3) using DI1 and DI2.

- Inverse operation uses two digital inputs, as defined below (0 = DI de-activated, 1 = DI activated):

DI1	DI2	Function
1	1	No constant speed
0	1	Constant speed 1 (1202)
1	0	Constant speed 2 (1203)
0	0	Constant speed 3 (1204)

-8 = DI2,3(INV) – Selects one of three Constant Speeds (1…3) using DI2 and DI3.

- See above (DI1,2(INV)) for code.

-9 = DI3,4(INV) – Selects one of three Constant Speeds (1…3) using DI3 and DI4.

- See above (DI1,2(INV)) for code.

-10 = DI4,5(INV) – Selects one of three Constant Speeds (1…3) using DI4 and DI5.

- See above (DI1,2(INV)) for code.

-12 = DI1,2,3(INV) – Selects one of seven Constant Speeds (1...7) using DI1, DI2 and DI3.

- Inverse operation uses three digital inputs, as defined below (0 = DI de-activated, 1 = DI activated):

DI1	DI2	DI3	Function
1	1	1	No constant speed
0	1	1	Constant speed 1 (1202)
1	0	1	Constant speed 2 (1203)
0	0	1	Constant speed 3 (1204)
1	1	0	Constant speed 4 (1205)
0	1	0	Constant speed 5 (1206)
1	0	0	Constant speed 6 (1207)
0	0	0	Constant speed 7 (1208)

-13 = DI3,4,5(INV) – Selects one of seven Constant Speeds (1…3) using DI3, DI4 and DI5.

- See above (DI1,2,3(INV)) for code.

Group 12: Constant Speeds					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1202	**CONST SPEED 1**	**0.0...500.0 Hz**	**0.1 Hz**	**6.0 (US)**	
	Sets value for Constant Speed 1. • The range and units depend on parameter 9904 MOTOR CTRL MODE. • Range: 0…30000 rpm when 9904 = 1 (VECTOR: SPEED). • Range: 0…500 Hz when 9904 = 3 (SCALAR: FREQ).				
1203	**CONST SPEED 2**	**0.0...500.0 Hz**	**0.1 Hz**	**12.0**	
	Sets a value for a Constant Speed. (See CONST SPEED 1 above.)				
1204	**CONST SPEED 3**	**0.0...500.0 Hz**	**0.1 Hz**	**18.0**	
	Sets a value for a Constant Speed. (See CONST SPEED 1 above.)				
1205	**CONST SPEED 4**	**0.0...500.0 Hz**	**0.1 Hz**	**24.0**	
	Sets a value for a Constant Speed. (See CONST SPEED 1 above.)				
1206	**CONST SPEED 5**	**0.0...500.0 Hz**	**0.1 Hz**	**30.0**	
	Sets a value for a Constant Speed. (See CONST SPEED 1 above.)				
1207	**CONST SPEED 6**	**0.0...500.0 Hz**	**0.1 Hz**	**48.0**	
	Sets a value for a Constant Speed. (See CONST SPEED 1 above.)				
1208	**CONST SPEED 7**	**0.0...500.0 Hz**	**0.1 Hz**	**60.0**	
	Sets a value for a Constant Speed. (See CONST SPEED 1 above.)				
1209	**TIMED MODE SEL**	**1...2**	**1**	**2**	✓

Defines timer activated, constant speed mode. Timer can be used to change between external reference and a maximum of three constant speeds, or to change between a maximum of 4 selectable speeds, i.e. constant speeds 1,2,3 and 4.

1 = EXT/CS1/2/3 – Selects an external speed when no timer is active, selects Constant speed 1 when Timer 1 is active, Selects Constant speed 2 when Timer 2 is active and selects Constant speed 3 when both Timers 1 and 2 are active.


TIMER1	TIMER2	Function
0	0	External reference
1	0	Constant speed 1 (1202)
0	1	Constant speed 2 (1203)
1	1	Constant speed 3 (1204)

2 = CS1/2/3/4 – Selects Constant speed 1 when no timer is active, selects Constant speed 2 when Timer 1 is active, selects Constant speed 3 when Timer 2 is active, selects Constant speed 4 when both timers are active.

TIMER1	TIMER2	Function
0	0	Constant speed 1 (1202)
1	0	Constant speed 2 (1203)
0	1	Constant speed 3 (1204)
1	1	Constant speed 4 (1205)

Group 13: Analog Inputs

This group defines the limits and the filtering for analog inputs.

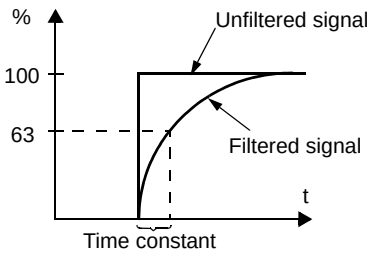Group 13: Analog Inputs					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1301	**MINIMUM AI1**	**0.0...100.0%**	**0.1%**	**20.0%**	
	Defines the minimum value of the analog input. • Define value as a percent of the full analog signal range. See example below. • The minimum analog input signal corresponds to 1104 REF1 MIN or 1107 REF2 MIN. • MINIMUM AI cannot be greater than MAXIMUM AI. • These parameters (reference and analog min. and max. settings) provide scale and offset adjustment for the reference. • See figure at parameter 1104. **Example.** To set the minimum analog input value to 4 mA: • Configure the analog input for 0…20 mA current signal. • Calculate the minimum (4 mA) as a percent of full range (20 mA) = 4 mA / 20 mA * 100% = 20%				
1302	**MAXIMUM AI1**	**0.0...100.0%**	**0.1%**	**20.0%**	
	Defines the maximum value of the analog input. • Define value as a percent of the full analog signal range. • The maximum analog input signal corresponds to 1105 REF1 MAX or 1108 REF2 MAX. • See figure at parameter 1104.				
1303	**FILTER AI1**	**0.0...10.0 s**	**0.1 s**	**0.1 s**	
	Defines the filter time constant for analog input 1 (AI1). • The filtered signal reaches 63% of a step change within the time specified. 				
1304	**MINIMUM AI2**	**0.0...100.0%**	**0.1%**	**20.0%**	
	Defines the minimum value of the analog input. • See MINIMUM AI1 above.				
1305	**MAXIMUM AI2**	**0.0...100.0%**	**0.1%**	**100.0%**	
	Defines the maximum value of the analog input. • See MAXIMUM AI1 above.				
1306	**FILTER AI2**	**0.0...10.0 s**	**0.1 s**	**0.1 s**	
	Defines the filter time constant for analog input 2 (AI2). • See FILTER AI1 above.				

Group 14: Relay Outputs

This group defines the condition that activates each of the relay outputs.

Group 14: Relay Outputs					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1401	**RELAY OUTPUT 1**	**0...45**	**1**	**1**	
	Defines the event or condition that activates relay 1 – what relay output 1 means. 0 = NOT SEL – Relay is not used and is de-energized. 1 = READY – Energize relay when drive is ready to function. Requires: • Run enable signal present. • No faults exist. • Supply voltage is within range. • Emergency Stop command is not on. 2 = RUN – Energize relay when the drive is running. 3 = FAULT (-1) – Energize relay when power is applied. De-energizes when a fault occurs. 4 = FAULT – Energize relay when a fault is active. 5 = ALARM – Energize relay when an alarm is active. 6 = REVERSED – Energize relay when motor rotates in reverse direction. 7 = STARTED – Energize relay when drive receives a start command (even if Run Enable signal is not present). De-energized relay when drive receives a stop command or a fault occurs. 8 = SUPRV1 OVER – Energize relay when first supervised parameter (3201) exceeds the limit (3203). • See "Group 32: Supervision" starting on page 186. 9 = suprv1 under – Energize relay when first supervised parameter (3201) drops below the limit (3202). • See "Group 32: Supervision" starting on page 186. 10 = suprv2 over – Energize relay when second supervised parameter (3204) exceeds the limit (3206). • See "Group 32: Supervision" starting on page 186. 11 = suprv2 under – Energize relay when second supervised parameter (3204) drops below the limit (3205). • See "Group 32: Supervision" starting on page 186. 12 = suprv3 over – Energize relay when third supervised parameter (3207) exceeds the limit (3209). • See "Group 32: Supervision" starting on page 186. 13 = suprv3 under – Energize relay when third supervised parameter (3207) drops below the limit (3208). • See "Group 32: Supervision" starting on page 186. 14 = AT SET POINT – Energize relay when the output frequency is equal to the reference frequency. 15 = FAULT (RST) – Energize relay when the drive is in a fault condition and will reset after the programmed auto-reset delay. • See parameter 3103 delay time. 16 = FLT/ALARM – Energize relay when fault or alarm occurs. 17 = EXT CTRL – Energize relay when external control is selected. 18 = REF 2 SEL – Energize relay when EXT2 is selected. 19 = CONST FREQ – Energize relay when a constant speed is selected.				

Group 14: Relay Outputs

Code	Description	Range	Resolution	Default	S

20 = REF LOSS – Energize relay when reference or active control place is lost.
21 = OVERCURRENT – Energize relay when an overcurrent alarm or fault occurs.
22 = OVERVOLTAGE – Energize relay when an overvoltage alarm or fault occurs.
23 = DRIVE TEMP – Energize relay when a drive overtemperature alarm or fault occurs.
24 = UNDERVOLTAGE – Energize relay when an undervoltage alarm or fault occurs.
25 = AI1 LOSS – Energize relay when AI1 signal is lost.
26 = AI2 LOSS – Energize relay when AI2 signal is lost.
27 = MOTOR TEMP – Energize relay when a motor overtemperature alarm or fault occurs.
28 = STALL – Energize relay when a stall alarm or fault exists.
30 = PID SLEEP – Energize relay when the PID sleep function is active.
31 = PFA – Use relay to start/stop motor in PFA control (See Group 81: PFA Control).
- Use this option only when PFA control is used.
- Selection activated / deactivated when drive is not running.

32 = AUTOCHANGE – Energize relay when PFA autochange operation is performed.
- Use this option only when PFA control is used.

33 = FLUX READY – Energize relay when the motor is magnetized and able to supply nominal torque (motor has reached nominal magnetizing).
34 = USER S2 – Energize relay when User Parameter Set 2 is active.
35 = COMM – Energize relay based on input from fieldbus communication.
- Fieldbus writes binary code in parameter 0134 that can energizes relay 1…relay 4 according to the following:


Par. 0134	Binary	RO4	RO3	RO2	RO1
0	000000	0	0	0	0
1	000001	0	0	0	1
2	000010	0	0	1	0
3	000011	0	0	1	1
4	000100	0	1	0	0
5…62	…	…	…	…	…
63	111111	1	1	1	1

- 0 = De-energize relay, 1 = Energize relay.

36 = COMM(-1) – Energize relay based on input from fieldbus communication.
- Fieldbus writes binary code in parameter 0134 that can energizes relay 1…relay 4 according to the following:

Par. 0134	Binary	RO4	RO3	RO2	RO1
0	000000	1	1	1	1
1	000001	1	1	1	0
2	000010	1	1	0	1
3	000011	1	1	0	0
4	000100	1	0	1	1
5…62	…	…	…	…	…
63	111111	0	0	0	0

- 0 = De-energize relay, 1 = Energize relay.

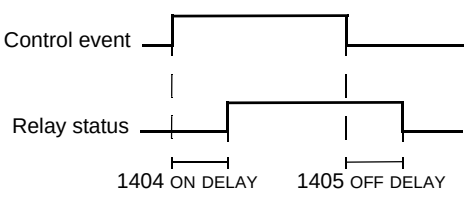Group 14: Relay Outputs					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
	37 = TIMER 1 – Energize relay when timer 1 is activated. See Group 36, Timer Functions. 38…40 = TIMER 2…4 – Energize relay when Timer 2…4 is active. See Timer 1 above. 41 = M.TRIG FAN – Energize relay when cooling fan counter is triggered. See group 29, Maintenance Trig. 42 = M.TRIG REV – Energize relay when revolutions counter is triggered. See group 29, Maintenance Trig. 43 = M. TRIG RUN – Energize relay when run time counter is triggered. See group 29, Maintenance Trig. 44 = M.TRIG MWH – Energize relay when power consumption counter is triggered. See group 29, Maintenance Trig. 45 = OVERRIDE – Energize relay when override is activated. 47 = USER LOAD C – Energize relay when a user load curve fault or alarm occurs..				
1402	**RELAY OUTPUT 2**	**0...45**	**1**	**2**	
	Defines the event or condition that activates relay 2 – what relay output 2 means. • See 1401 RELAY OUTPUT 1 (Relay Output 2 only with MREL-01).				
1403	**RELAY OUTPUT 3**	**0...45**	**1**	**2**	
	Defines the event or condition that activates relay 3 – what relay output 3 means. • See 1401 RELAY OUTPUT 1 (Relay Output 3 only with MREL-01).				
1404	**RO 1 ON DELAY**	**0.0...3600.0 s**	**0.1 s**	**0.0 s**	
	Defines the switch-on delay for relay 1. • On / off delays are ignored when relay output 1401 is set to PFA.				
1405	**RO 1 OFF DELAY**	**0.0…3600.0 s**	**0.1 s**	**0.0 s**	
	Defines the switch-off delay for relay 1. • On / off delays are ignored when relay output 1401 is set to PFA.				
1406	**RO 2 ON DELAY**	**0.0…3600.0 s**	**0.1 s**	**0.0 s**	
	Defines the switch-on delay for relay 2. • See RO 1 ON DELAY.				
1407	**RO 2 OFF DELAY**	**0.0…3600.0 s**	**0.1 s**	**0.0 s**	
	Defines the switch-on delay for relay 2. • See RO 1 OFF DELAY.				
1408	**RO 3 ON DELAY**	**0.0…3600.0 s**	**0.1 s**	**0.0 s**	
	Defines the switch-on delay for relay 3. • See RO 1 ON DELAY.				
1409	**RO 3 OFF DELAY**	**0.0…3600.0 s**	**0.1 s**	**0.0 s**	
	Switch-off delay for relay 3. • See RO 1 OFF DELAY.				


Group 14: Relay Outputs					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1410	**RELAY OUTPUT 4**	**0...45**	**1**	**0**	
	Defines the event or condition that activates relay 4 – what relay output 4 means. • See 1401 RELAY OUTPUT 1.				
1413	**RO 4 ON DELAY**	**0.0…3600.0 s**	**0.1 s**	**0.0 s**	
	Defines the switch-on delay for relay 4. • See RO 1 ON DELAY.				
1414	**RO 4 OFF DELAY**	**0.0…3600.0 s**	**0.1 s**	**0.0 s**	
	Defines the switch-off delay for relay 4. • See RO 1 OFF DELAY.				


Group 15: Analog Outputs

This group defines the drive's analog (current signal) outputs. The drive's analog outputs can be:

- Any parameter of the Operating Data group (Group 01).
- Limited to programmable minimum and maximum values of output current.
- Scaled (and/or inverted) by defining the minimum and maximum values of the source parameter (or content). Defining an maximum value (parameter 1503 or 1509) that is less than the content minimum value (parameter 1502 or 1508) results in an inverted output.
- Filtered

Group 15: Analog Outputs					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1501	**AO1 CONTENT SEL**	**99…199**	**1**	**103**	
	Defines the content for analog output AO1. 99 = EXCITE PTC – Provides a current source for sensor type PTC. Output = 1.6 mA. See Group 35. 100 = EXCITE PT100 – Provides a current source for sensor type Pt100. Output = 9.1 mA. See Group 35. 101…145 – Output corresponds to a parameter in the Operating Data group (Group 01). • Parameter defined by value (value 102 = parameter 0102) 146…199 – Not assigned.				

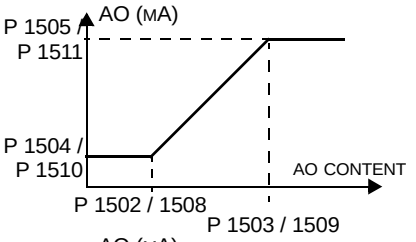

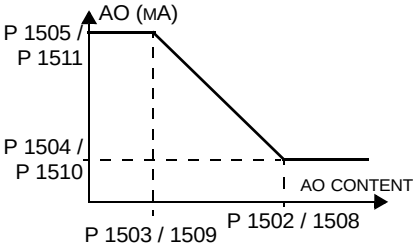

Group 15: Analog Outputs					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1502	**AO1 CONTENT MIN** Sets the minimum content value. • Content is the parameter selected by parameter 1501. • Minimum value refers to the minimum content value that will be converted to an analog output. • These parameters (content and current min. and max. settings) provide scale and offset adjustment for the output. See figure.	**Depends on selection**	**-**	**0.0 Hz**	
1503	**AO1 CONTENT MAX** Sets the maximum content value • Content is the parameter selected by parameter 1501. • Maximum value refers to the maximum content value that will be converted to an analog output.	**Depends on selection**	**-**	**60.0 Hz**	
1504	**MINIMUM AO1** Sets the minimum output current.	**0.0…20.0 mA**	**0.1 mA**	**4.0 mA**	
1505	**MAXIMUM AO1** Sets the maximum output current.	**0.0…20.0 mA**	**0.1 mA**	**2.0 mA**	
1506	**FILTER AO1** Defines the filter time constant for AO1. • The filtered signal reaches 63% of a step change within the time specified. • See figure in parameter 1303.	**0…10 s**	**0.1 s**	**0.1 s**	

Group 16: System Controls

This group defines a variety of system level locks, resets and enables.

Group 16: System Controls					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1601	**RUN ENABLE**	**-6…7**	**1**	**0**	✓
	Selects the source of the run enable signal. 0 = NOT SEL – Allows the drive to start without an external run enable signal. 1 = DI1 – Defines digital input DI1 as the run enable signal. • This digital input must be activated for run enable. • If the voltage drops and de-activates this digital input, the drive will coast to stop and not start until the run enable signal resumes. 2…6 = DI2…DI6 – Defines digital input DI2…DI6 as the run enable signal. • See DI1 above. 7 = COMM – Assigns the fieldbus Command Word as the source for the run enable signal. • Bit 6 of the Command Word 1 (parameter 0301) activates the run disable signal. • See fieldbus user's manual for detailed instructions. -1 = DI1(INV) – Defines an inverted digital input DI1 as the run enable signal. • This digital input must be de-activated for run enable. • If this digital input activates, the drive will coast to stop and not start until the run enable signal resumes. -2…-6 = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as the run enable signal. • See DI1(INV) above.				
1602	**PARAMETER LOCK**	**0…2**	**1**	**1**	
	Determines if the control panel can change parameter values. • This lock does not limit parameter changes made by macros. • This lock does not limit parameter changes written by fieldbus inputs. • This parameter value can be changed only if the correct pass code is entered. See parameter 1603, PASS CODE. 0 = LOCKED – You cannot use the control panel to change parameter values. • The lock can be opened by entering the valid pass code to parameter 1603. 1 = OPEN – You can use the control panel to change parameter values. 2 = NOT SAVED – You can use the control panel to change parameter values, but they are not stored in permanent memory. • Set parameter 1607 PARAM SAVE to 1 (SAVE) to store changed parameter values to memory.				
1603	**PASS CODE**	**0…65535**	**1**	**0**	
	Entering the correct pass code allows you to change the parameter lock. • See parameter 1602 above. • The code 358 allows you to change the value of the parameter 1602 once. • This entry reverts back to 0 automatically.				

Group 16: System Controls					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1604	**FAULT RESET SEL**	**-6…8**	**1**	**0**	
	Selects the source for the fault reset signal. The signal resets the drive after a fault trip if the cause of the fault no longer exists. 0 = KEYPAD – Defines the control panel as the only fault reset source. • Fault reset is always possible with control panel. 1 = DI1 – Defines digital input DI1 as a fault reset source. • Activating the digital input resets the drive. 2…6 = DI2…DI6 – Defines digital input DI2…DI6 as a fault reset source. • See DI1 above. 7 = START/STOP – Defines the Stop command as a fault reset source. • Do not use this option when fielbus communication provides the start, stop and direction commands. 8 = COMM – Defines the fieldbus as a fault reset source. • The Command Word is supplied through fieldbus communication. • The bit 4 of the Command Word 1 (parameter 0301) resets the drive. -1 = DI1(INV) – Defines an inverted digital input DI1 as a fault reset source. • De-activating the digital input resets the drive. -2…-6 = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as a fault reset source. • See DI1(INV) above.				

Group 16: System Controls					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1605	**USER PAR SET CHG**	**-6…6**	**1**	**0**	
	Defines control for changing the user parameter set. • See parameter 9902 (APPLIC MACRO). • The drive must be stopped to change User Parameter Sets. • During a change, the drive will not start. **Note:** Always save the User Parameter Set after changing any parameter settings, or performing a motor identification. • Whenever the power is cycled, or parameter 9902 (APPLIC MACRO) is changed, the drive loads the last settings saved. Any unsaved changes to a user parameter set are lost. **Note:** The value of this parameter (1605) is not included in the User Parameter Sets, and does not change if User Parameter Sets change. **Note:** You can use a relay output to supervise the selection of User Parameter Set 2. • See parameter 1401. 0 = NOT SEL – Defines the control panel (using parameter 9902) as the only control for changing User Parameter Sets. 1 = DI1 – Defines digital input DI1 as a control for changing User Parameter Sets. • The drive loads User Parameter Set 1 on the falling edge of the digital input. • The drive loads User Parameter Set 2 on the rising edge of the digital input. • The User Parameter Set changes only when the drive is stopped. 2…6 = DI2…DI6 – Defines digital input DI2…DI6 as a control for changing User Parameter Sets. • See DI1 above. -1 = DI1(INV) – Defines an inverted digital input DI1 as a control for changing User Parameter Sets. • The drive loads User Parameter Set 1 on the rising edge of the digital input. • The drive loads User Parameter Set 2 on the falling edge of the digital input. • The User Parameter Set changes only when the drive is stopped. -2…-6 = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as a control for changing User Parameter Sets. • See DI1(INV) above.				

Group 16: System Controls					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1606	**LOCAL LOCK**	**-6…8**	**1**	**0**	
	Defines control for the use of the HAND mode. The HAND mode allows drive control from the control panel. • When LOCAL LOCK is active, the control panel cannot change to HAND mode. 0 = NOT SEL – Disables the lock. The control panel can select HAND and control the drive. 1 = DI1 – Defines digital input DI1 as the control for setting the local lock. • Activating the digital input locks out local control. • De-activating the digital input enable the HAND selection. 2…6 = DI2…DI6 – Defines digital input DI2…DI6 as the control for setting the local lock. • See DI1 above. 7 = ON – Sets the lock. The control panel cannot select HAND, and cannot control the drive. 8 = COMM – Defines bit 14 of the Command Word 1 as the control for setting the local lock. • The Command Word is supplied through fieldbus communication. • The Command Word is 0301. -1 = DI1(INV) – Defines an inverted digital input DI1 as the control for setting the local lock. • De-activating the digital input locks out local control. • Activating the digital input enable the HAND selection. -2…-6 = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as the control for setting the local lock. • See DI1(INV) above.			
1607	**PARAM. SAVE**	**0, 1**	**1**	**0**	
	Saves all altered parameters to permanent memory. • Parameters altered through a fieldbus are not automatically saved to permanent memory. To save, you must use this parameter. • If 1602 PARAMETER LOCK = 2 (NOT SAVED), parameters altered from the control panel are not saved. To save, you must use this parameter. • If 1602 PARAMETER LOCK = 1 (OPEN), parameters altered from the control panel are stored immediately to permanent memory. 0 = DONE – Value changes automatically when all parameters are saved. 1 = SAVE – Saves altered parameters to permanent memory.				

Group 16: System Controls					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1608	**START ENABLE 1**	**-6…7**	**1**	**4**	

Selects the source of the start enable 1 signal.

Note: Start enable functionality **differs** from the run enable functionality.

0 = NOT SEL – Allows the drive to start without an external start enable signal.

1 = DI1 – Defines digital input DI1 as the start enable 1 signal.

- This digital input must be activated for start enable 1 signal.
- If the voltage drops and de-activates this digital input, the drive will coast to stop and show alarm 2021 on panel display. The drive will not start until start enable 1 signal resumes.

2…6 = DI2…DI6 – Defines digital input DI2…DI6 as the start enable 1 signal.

- See DI1 above.


7 = COMM – Assigns the fieldbus Command Word as the source for the start enable 1 signal.

- Bit 2 of the Command word 2 (parameter 0302) activates the start disable 1 signal.
- See fieldbus user's manual for detailed instructions.

(-1) = DI1(INV) – Defines an inverted digital input DI1 as the start enable 1 signal.

(-2)…(-6) = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as the start enable 1 signal.

- See DI1(INV) above.

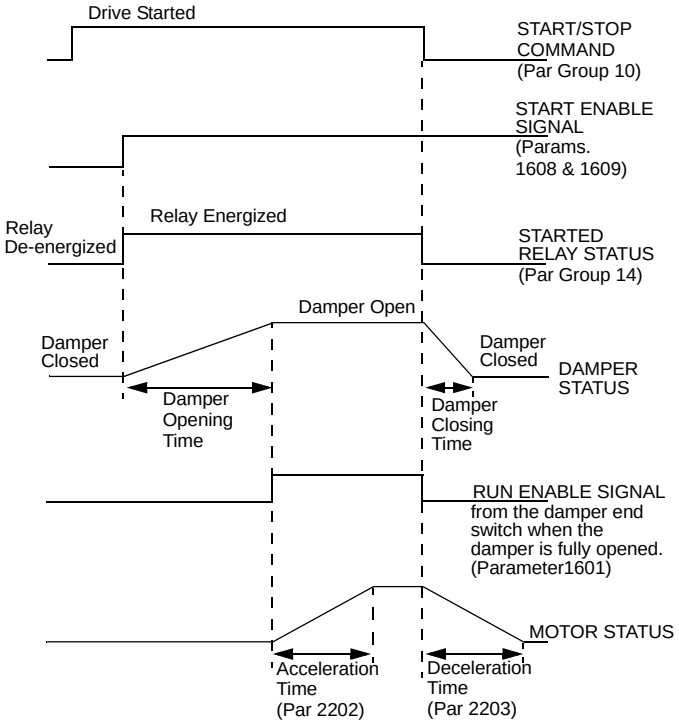

Group 16: System Controls					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1609	**START ENABLE 2**	**-6…7**	**1**	**0**	
	Selects the source of the start enable 2 signal. Note: Start enable functionality differs from the run enable functionality. 0 = NOT SEL – Allows the drive to start without an external start enable signal. 1 = DI1 – Defines digital input DI1 as the start enable 2 signal. This digital input must be activated for start enable 2 signal. If the voltage drops and de-activates this digital input, the drive will coast to stop and show alarm 2022 on panel display. The drive will not start until start enable 2 signal resumes. 2…6 = DI2…DI6 – Defines digital input DI2…DI6 as the start enable 2 signal. See DI1 above. 7 = COMM – Assigns the fieldbus Command Word as the source for the start enable 2 signal. Bit 3 of the Command word 2 (parameter 0302) activates the start disable 2 signal. See fieldbus user's manual for detailed instructions. (-1) = DI1(INV) – Defines an inverted digital input DI1 as the start enable 2 signal. (-2)…(-6) = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as the start enable 2 signal. • See DI1(INV) above.				
1610	**DISPLAY ALARMS**	**0, 1**	**1**	**1**	
	Controls the visibility of the following alarms: • 2001, Overcurrent alarm • 2002, Overvoltage alarm • 2003, Undervoltage alarm • 2009, Device overtemperature alarm. For more information, see section *Alarm listing*. 0 = NO – The above alarms are suppressed. 1 = YES – All of the above alarms are enabled.				
1611	**PARAMETER VIEW**	**1...3**	**1**	**2**	
	Selects the parameter view, i.e. which parameters are shown. **Note:** This parameter is visible only when it is activated by the optional FlashDrop device. FlashDrop allows fast customization of the parameter list, e.g. selected parameters can be hidden. For more information, see *MFDT-01 FlashDrop User's Manual* [3AFE68591074 (English)]. FlashDrop parameter values are activated by setting parameter 9902 to 31 (LOAD FD SET). 1 = FLASHDROP – FlashDrop parameter list is shown. Does not include short parameter list. Parameters that are hidden by the FlashDrop device are not visible. 2 = SHORT VIEW – Shows only a subset of all signals and parameters 3 = LONG VIEW – Shows all signals and parameters.				

Group 17: Override

This group defines the source for the override activation signal, the override speed/ frequency and pass code and how the override is enabled and disabled.

When override DI is activated, the drive stops and then accelerates to the preset speed or frequency. When the DI is deactivated the drive stops and reboots. If the start command, run enable and start enables are active in the AUTO mode the drive starts automatically and continues normally after override mode. In the HAND mode the drive returns to OFF mode.

When override is active:

- Drive runs at preset speed
- Drive ignores all keypad commands
- Drive ignores all commands from communication links
- Drive ignores all digital inputs except override activation/deactivation, RUN ENABLE and START ENABLE
- Drive displays alarm message “2020 OVERRIDE MODE”

The following faults are ignored:

3	DEVICE OVERTEMP
5	OVERLOAD
6	DC UNDERVOLT
7	AI1 LOSS
8	AI2 LOSS
9	MOTOR TEMP
10	PANEL LOSS
12	MOTOR STALL
14	EXTERNAL FLT 1
15	EXTERNAL FLT 2
17	UNDERLOAD
18	THERM FAIL
21	CURR MEAS
22	SUPPLY PHASE
24	OVERSPEED
28	SERIAL 1 ERR
29	EFB CONFIG FILE
30	FORCE TRIP
31	EFB 1

32	EFB 2
33	EFB 3
34	MOTOR PHASE
1001	PAR PFC REFNEG
1002	PAR PFC IOCONF
1003	PAR AI SCALE
1004	PAR AO SCALE
1006	PAR EXTROMISSING
1007	PAR FBUSMISSING
1008	PAR PFCWOSCALAR

Commissioning the Override Mode:

1. Enter the parameters in all groups as needed, except group 17.
2. Select the digital input that will activate override mode P1701.
3. Enter the frequency or speed reference for override mode, P1702 and P1703, according to the motor control mode P9904.
4. Enter the pass code P1704 (358).
5. Enable the override mode P1705.

Changing the Override Parameters:

1. If override mode is already enabled, disable it:

- Enter the pass code P1704.
- Disable the override mode P1705.

2. If needed, load the override parameter set P9902.
3. Change the parameters as needed, except group 17.
4. Change the parameters in group 17 as needed:

- Digital input for override mode P1701.
- Frequency or speed reference, P1702 or P1703.

5. Enter the pass code P1704.
6. Enable the override mode P1705. The drive replaces the override parameter set with new values of all parameters.


Group 17: Override					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1701	**OVERRIDE SEL**	**-6…6**	**1**	**0**	
	Selects the source of the override activation signal. 0 = NOT SEL – Override activation signal not selected. 1 = DI1 – Defines digital input DI1 as the override activation signal. • This digital input must be activated for override activation signal. 2…6 = DI2…DI6 – Defines digital input DI2…DI6 as the override activation signal. • See DI1 above. (-1) = DI1(INV) – Defines an inverted digital input DI1 as the override activation signal. (-2)…(-6) = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as the override activation signal. • See DI1(INV) above.				
1702	**OVERRIDE FREQ**	**-500…500 Hz**	**0.1**	**0.0**	
	Defines a preset frequency for the override. **Note!** Set this value if motor control mode (Par. 9904) is SCALAR: FREQ (3).				
1703	**OVERRIDE SPEED**	**-30.000…30.000 rpm**	**1**	**0**	
	Defines a preset speed for the override. **Note!** Set this value if motor control mode (Par.9904) is VECTOR: SPEED (1).				
1704	**OVERR PASS CODE**	**0…65535**	**1**	**0**	
	Entering the correct override pass code unlocks parameter 1705 for one change. • Enter the pass code always before changing the value of the parameter 1705. • See parameter 1705 below. • The pass code is 358. • The entry reverts back to zero automatically.				
1705	**OVERRIDE ENABLE**	**0…1**	**1**	**0**	
	Selects whether the override is enabled or disabled. 0 = OFF – Override disabled. 1 = ON – Override enabled. • When enabled, the drive stores the values of all parameters into an override parameter set (see parameter 9902) and the parameters in Group 17 will be write protected (except parameter 1704). To change the other parameters in the Group 17, override has to be disabled.				

Group 17: Override					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1706	**OVERRIDE DIR** Selects the source of the override direction signal. 0 = FORWARD – Assigns forward as the override direction. 1 = DI1 – Defines digital input DI1 as the override direction signal. • Activating the digital input selects the forward direction. • De-activating the digital input selects the reverse direction. 2…6 = DI2…DI6 – Defines digital input DI2…DI6 as the override direction signal. See DI1 above. 7 = REVERSE – Assigns reverse as the override direction. -1 = DI1(INV) – Defines an inverted digital input DI1 as the override direction signal. • De-activating the digital input selects the forward direction. • Activating the digital input selects the reverse direction. -2…-6 = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as the override direction signal. • See DI1(INV) above.				
1707	**OVERRIDE REF** Selects the source of the override reference. 1 = CONSTANT – Selects a preset frequency or speed for the override. The frequency value is defined by parameter 1702 OVERRIDE FREQ and the speed value by parameter 1703 OVERRIDE SPEED. 2 = PID – The reference is taken from the PID output, see group 40 PROCESS PID SET 1. **Note:** The following conditions must be met when using PID in the override mode: • PID1 set point (parameter 4010 SET POINT SEL) can be either A1, A2 or INTERNAL. • PID1 parameter set 1 must be active (parameter 4027 pid 1 param set = set 1). • Override direction (parameter 1706 override dir) can be either 0 = forward or 7 = reverse.				

Group 18: Freq In & Tran Out

This group defines the frequency input and transistor output signal processing.

Group 18: FREQ IN & TRAN OUT					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1801	**FREQ INPUT MIN** Defines the minimum input value when DI5 is used as a frequency input. See section *Frequency input* on page *100*.	**0...16000 Hz**	**1 =1 Hz**	**0 Hz**	
1802	**FREQ INPUT MAX** Defines the maximum input value when DI5 is used as a frequency input. See section *Frequency input* on page *100*.	**0...16000 Hz**	**1 =1 Hz**	**1000 Hz**	
1803	**FILTER FREQ IN** Defines the filter time constant for frequency input, ie the time within 63% of a step change is reached. See section *Frequency input* on page *100*.	**0.0…10.0 s**	**1 = 0.1 s**	**0.1 s**	

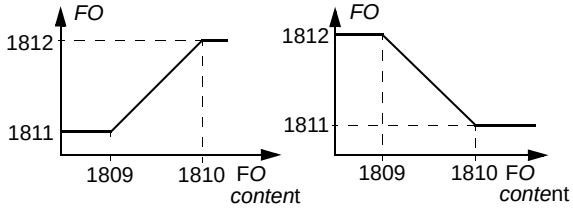
Group 18: FREQ IN & TRAN OUT					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1804	**TO MODE** Selects the operation mode for the transistor output TO. See section *Transistor output* on page *101*.			**DIGITAL**	
	DIGITAL Transistor output is used as a digital output DO.			**0**	
	FREQUENCY Transistor output is used as a frequency output FO.			**1**	
1805	**DO SIGNAL** Selects a drive status indicated through digital output DO. See parameter *1401* RELAY OUTPUT 1.			**FAULT (-1)**	
1806	**DO ON DELAY** Defines the operation delay for digital output DO.	**0.0…3600.0 s**	**1 = 0.1 s**	**0.0 s**	
1807	**DO OFF DELAY** Defines the release delay for digital output DO.	**0.0…3600.0 s**	**1 = 0.1 s**	**0.0 s**	
1808	**FO CONTENT SEL** Selects a drive signal to be connected to frequency output FO. Parameter index in *Group 01: Operating Data*. Eg 102 = 0102 SPEED.	**x…x**		**104**	
1809	**FO CONTENT MIN** Defines the minimum frequency output FO signal value. Signal is selected with parameter *1808* FO CONTENT SEL. FO minimum and maximum correspond to *1811* MINIMUM FO and *1812* MAXIMUM FO settings as follows:  Setting range depends on parameter *1808* FO CONTENT SEL setting.	**x…x**	**-**	**-**	
1810	**FO CONTENT MAX** Defines the maximum frequency output FO signal value. Signal is selected with parameter *1808* FO CONTENT SEL. See parameter *1809* FO CONTENT MIN. Setting range depends on parameter *1808* FO CONTENT SEL setting.	**x…x**	**-**	**-**	
1811	**MINIMUM FO** Defines the minimum value for frequency output FO. See parameter *1809* FO CONTENT MIN.	**10…16000 Hz**	**1 = 1 Hz**	**10 Hz**	
1812	**MAXIMUM FO** Defines the maximum value for frequency output FO. See parameter *1809* FO CONTENT MIN.	**10…16000 Hz**	**1 = 1 Hz**	**1000 Hz**	

Group 18: FREQ IN & TRAN OUT					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
1813	**FILTER FO**	**0.0…10.0 s**	**1 = 0.1 s**	**0.1 s**	
	Defines the filter time constant for frequency output FO, ie the time within 63% of a step change is reached.				
1814	**DI1 ON DELAY**	**0.0…3600.0 s**	**1 = 0.1 s**	**0.0 s**	
	Defines the delay from the signal change to the change of the digital input DI to the ON state.				
1815	**DI1 OFF DELAY**	**0.0…3600.0 s**	**1 = 0.1 s**	**0.0 s**	
	Defines the delay from the signal change to the change of the digital input DI to the OFF state.				
1816	**DI2 ON DELAY**			**0.0 s**	
	See parameter *1814* DI1 ON DELAY.				
1817	**DI2 OFF DELAY**			**0.0 s**	
	See parameter *1815* DI1 OFF DELAY.				
1818	**DI3 ON DELAY**			**0.0 s**	
	See parameter *1814* DI1 ON DELAY.				
1819	**DI3 OFF DELAY**			**0.0 s**	
	See parameter *1815* DI1 OFF DELAY.				
1820	**DI4 ON DELAY**			**0.0 s**	
	See parameter *1814* DI1 ON DELAY.				
1821	**DI4 OFF DELAY**			**0.0 s**	
	See parameter *1815* DI1 OFF DELAY.				
1822	**DI5 ON DELAY**			**0.0 s**	
	See parameter *1814* DI1 ON DELAY.				
1823	**DI5 OFF DELAY**			**0.0 s**	
	See parameter *1815* DI1 OFF DELAY.				

Group 20: Limits

This group defines minimum and maximum limits to follow in driving the motor – speed, frequency, current, torque, etc.

Group 20: Limits					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
2003	**MAX CURRENT**	**0.0… 1.1 * I_{2N}**	**0.1 A**	**1.1 * I_{2N}**	✓
	Defines the maximum output current (A) supplied by the drive to the motor.				

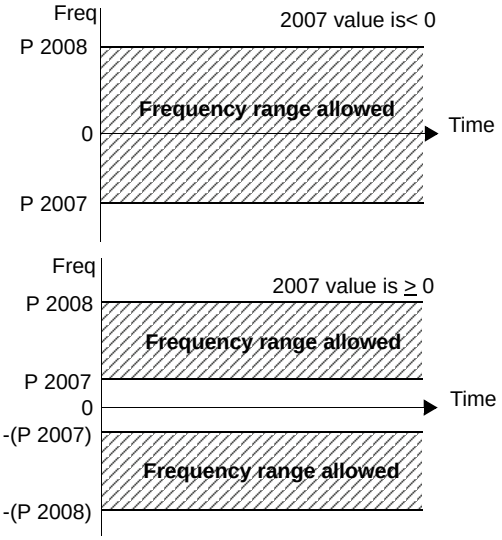Group 20: Limits					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
2006	**UNDERVOLT CTRL**	**0…2**	**1**	**1**	
	Sets the DC undervoltage controller on or off. When on: • If the DC bus voltage drops due to loss of input power, the undervoltage controller decreases the motor speed in order to keep the DC bus voltage above the lower limit. • When the motor speed decreases, the inertia of the load causes regeneration back into the drive, keeping the DC bus charged, and preventing an undervoltage trip. • The DC undervoltage controller increases power loss ride-through on systems with a high inertia, such as a centrifuge or a fan. 0 = DISABLE – Disables controller. 1 = ENABLE (TIME) – Enables controller with 500 ms time limit for operation. 2 = ENABLE – Enables controlled without maximum time limit for operation.				
2007	**MINIMUM FREQ**	**-500.0…500.0 Hz**	**0.1 Hz**	**0.0 Hz**	✓
	Defines the minimum limit for the drive output frequency. • A positive or zero minimum speed frequency defines two ranges, one positive and one negative. • A negative minimum speed frequency defines one speed range. See figure. **Note!** Keep MINIMUM FREQ ≤ MAXIMUM FREQ.				
2008	**MAXIMUM FREQ**	**0.0…500.0 Hz**	**0.1 Hz**	**60.0 Hz (US)**	✓
	Defines the maximum limit for the drive output frequency.				

Group 21: Start/Stop

This group defines how the motor starts and stops. The ACH550 supports several start and stop modes.


Group 21: Start/Stop					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
2101	**START FUNCTION** Selects the motor start method. 1 = AUTO – The drive starts the motor instantly from zero frequency. If flying start is required, use selection SCAN START. 2 = DC MAGN – The drive pre-magnetizes the motor with DC current before the start. The pre-magnetizing time is defined by parameter *2103* DC MAGN TIME. **Note:** Starting to a rotating machine is not possible when DC MAGN is selected. **WARNING! The drive will start after the set pre-magnetizing time has passed even if the motor magnetization is not completed. Ensure always in applications where a full break-away torque is essential, that the constant magnetizing time is long enough to allow generation of full magnetization and torque.** 4 = TORQ BOOST – Torque boost should be selected if a high break-away torque is required. The drive pre-magnetizes the motor with DC current before the start. The pre-magnetizing time is defined by parameter *2103* DC MAGN TIME. Torque boost is applied at start. Torque boost is stopped when output frequency exceeds 20 Hz or when it is equal to the reference value. See parameter *2110* TORQ BOOST CURR. **Note:** Starting to a rotating machine is not possible when TORQ BOOST is selected. **WARNING! The drive will start after the set pre-magnetizing time has passed although the motor magnetization is not completed. Ensure always in applications where a full break-away torque is essential, that the constant magnetizing time is long enough to allow generation of full magnetization and torque.** 6 = SCAN START – Frequency scanning flying start (starting to a rotating machine). Based on frequency scanning (interval *2008* MAXIMUM FREQ…*2007* MINIMUM FREQ) to identify the frequency. If frequency identification fails, DC magnetization is used (see selection DC MAGN). 7 = SCAN + BOOST – Combines scanning start (starting to a rotating machine) and torque boost. See selections SCANSTART and TORQ BOOST. If frequency identification fails, torque boost is used.	**1...8**	**1**	**1**	
2102	**STOP FUNCTION** Selects the motor stop method. 1 = COAST – Selects cutting off the motor power as the stop method. The motor coasts to stop. 2 = RAMP – Selects using a deceleration ramp • Deceleration ramp is defined by 2203 DECELER TIME 1 or 2206 DECELER TIME 2 (whichever is active).	**1, 2**	**1**	**1**	
2103	**DC MAGN TIME** Defines the pre-magnetizing time for the DC Magnetizing start mode. • Use parameter 2101 to select the start mode. • After the start command, the drive pre-magnetizes the motor for the time defined here, and then starts the motor. • Set the pre-magnetizing time just long enough to allow full motor magnetization. Too long a time heats the motor excessively.	**0.00…10.00 s**	**0.01 s**	**0.30 s**	

Group 21: Start/Stop					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
2106	**DC CURR REF** Defines the DC current control reference as a percentage of parameter 9906 (MOTOR NOM CURR).	**0…100%**	**1%**	**30%**	
2107	**DC BRAKE TIME** Defines the DC brake time after modulation has stopped, if parameter 2104 is 2 (DC BRAKING).	**0…250 s**	**0.1 s**	**0 s**	
2108	**START INHIBIT** Sets the Start inhibit function on or off. The Start inhibit function ignores a pending start command in any of the following situations (a new start command is required): • A fault is reset. • Run Enable (parameter 1601) activates while start command is active. • Mode changes from local to remote. • Mode changes from remote to local. • Control switches from EXT1 to EXT2. • Control switches from EXT2 to EXT1. 0 = OFF – Disables the Start inhibit function. 1 = ON – Enables the Start inhibit function.	**0, 1**	**1**	**0**	✓
2109	**EM STOP SEL** Defines control of the Emergency stop command. When activated: • Emergency stop decelerates the motor using the emergency stop ramp (parameter 2208 EM DEC TIME). • Requires an external stop command and removal of the emergency stop command before drive can restart. 0 = NOT SEL – Disables the Emergency stop function through digital inputs. 1 = DI1 – Defines digital input DI1 as the control for Emergency stop command. • Activating the digital input issues an Emergency stop command. • De-activating the digital input removes the Emergency stop command. 2…6 = DI2…DI6 – Defines digital input DI2…DI6 as the control for Emergency stop command. • See DI1 above. -1 = DI1(INV) – Defines an inverted digital input DI1 as the control for Emergency stop command. • De-activating the digital input issues an Emergency stop command. • Activating the digital input removes the Emergency stop command. -2…-6 = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as the control for Emergency stop command. • See DI1(INV) above.	**-6…6**	**1**	**0**	
2110	**TORQ BOOST CURR** Sets the maximum supplied current during torque boost. • See parameter 2101 START FUNCTION.	**15…300%**	**1**	**100%**	
2113	**START DELAY** Defines the Start delay. After the conditions for start have been fulfilled, the drive waits until the delay has elapsed and then starts the motor. Start delay can be used with all start modes. • If START DELAY = zero, the delay is disabled.				

Group 22: Accel/Decel

This group defines ramps that control the rate of acceleration and deceleration. You define these ramps as a pair, one for acceleration and one for deceleration. You can define two pairs of ramps and use a digital input to select one or the other pair.


Group 22: Accel/Decel					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
2201	**ACC/DEC 1/2 SEL**	**-6…7**	**1**	**0**	
	Defines control for selection of acceleration/deceleration ramps. • Ramps are defined in pairs, one each for acceleration and deceleration. • See below for the ramp definition parameters. 0 = NOT SEL – Disables selection, the first ramp pair is used. 1 = DI1 – Defines digital input DI1 as the control for ramp pair selection. • Activating the digital input selects ramp pair 2. • De-activating the digital input selects ramp pair 1. 2…6 = DI2…DI6 – Defines digital input DI2…DI6 as the control for ramp pair selection. • See DI1 above. 7 = COMM – Defines serial communication as the control for ramp pair selection. -1 = DI1(INV) – Defines an inverted digital input DI1 as the control for ramp pair selection. • De-activating the digital input selects ramp pair 2 • Activating the digital input selects ramp pair 1. -2…-6 = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as the control for ramp pair selection. • See DI1(INV) above.				
2202	**ACCELER TIME 1**	**0.0…1800.0 s**	**0.1 s**	**30.0 s**	
	Sets the acceleration time for zero to maximum frequency for ramp pair 1. See A in figure. • Actual acceleration time also depends on 2204 RAMP SHAPE. • See 2008 MAXIMUM FREQUENCY.				
2203	**DECELER TIME 1**	**0.0…1800.0 s**	**0.1 s**	**30.0 s**	
	Sets the deceleration time for maximum frequency to zero for ramp pair 1. • Actual deceleration time also depends on 2204 RAMP SHAPE. • See 2008 MAXIMUM FREQUENCY.				

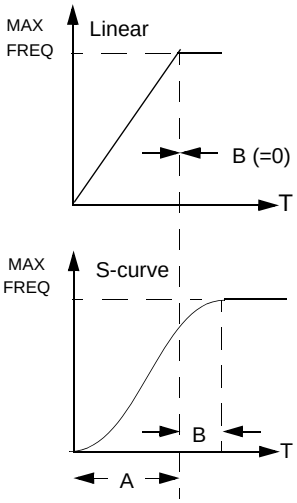Group 22: Accel/Decel					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
2204	**RAMP SHAPE 1** Selects the shape of the acceleration/deceleration ramp for ramp pair 1. See B in figure. • Shape is defined as a ramp, unless additional time is specified here to reach the maximum frequency. A longer time provides a softer transition at each end of the slope. The shape becomes an s-curve. • Rule of thumb: 1/5 is a suitable relation between the ramp shape time and the acceleration ramp time. 0.0 = LINEAR – Specifies linear acceleration/deceleration ramps for ramp pair 1. 0.1…1000.0 = S-CURVE – Specifies s-curve acceleration/deceleration ramps for ramp pair 1.  A = 2202 ACCELERATION TIME B = 2204 RAMP SHAPE	**0...1000.0 s**	**0.1 s**	**0.0**	
2205	**ACCELER TIME 2** Sets the acceleration time (s) for zero to maximum frequency for ramp pair 2. See 2002 ACCELER TIME 1.	**0.0…1800.0 s**	**0.1 s**	**60.0 s**	
2206	**DECELER TIME 2** Sets the deceleration time for maximum frequency to zero for ramp pair 2. See 2003 DECELER TIME 1.	**0.0…1800.0 s**	**0.1 s**	**60.0 s**	
2207	**RAMP SHAPE 2** Selects the shape of the acceleration/deceleration ramp for ramp pair 2. See 2004 RAMP SHAPE 1.	**0…1000.0 s**	**0.1 s**	**0.0**	
2208	**EM DEC TIME** Sets the deceleration time for maximum frequency to zero for an emergency. • See parameter 2109 EM STOP SEL. • Ramp is linear.	**0.0…1800 s**	**0.1 s**	**1.0 s**	

Group 22: Accel/Decel					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
2209	**RAMP INPUT 0**	**-6…6**	**1**	**0**	
	Defines control for forcing the ramp input to 0. 0 = NOT SEL – 1 = DI1 – Defines digital input DI1 as the control for forcing the ramp input to 0. • Activating the digital input forces ramp input to 0. Ramp output will ramp to 0 according to the currently used ramp time, after which it will stay at 0. • De-activating the digital input: ramp resumes normal operation. 2…6 = DI2…DI6 – Defines digital input DI2…DI6 as the control for forcing the ramp input to 0. • See DI1 above. -1 = DI1(INV) – Defines an inverted digital input DI1 as the control for forcing the ramp input to 0. • De-activating the digital input forces ramp input to 0. • Activating the digital input: ramp resumes normal operation. -2…-6 = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as the control for forcing the ramp function generator input to 0. • See DI1(INV) above.				

Group 25: Critical Speeds

This group defines up to three critical speeds or ranges of speeds that are to be avoided due, for example, to mechanical resonance problems at certain speeds.

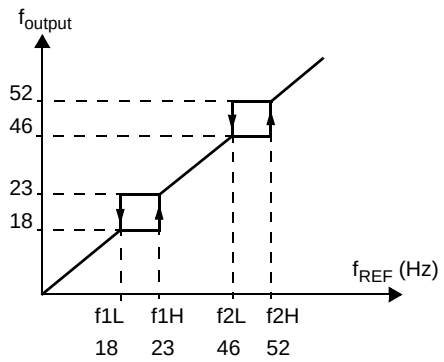Group 25: Critical Speeds					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
2501	**CRIT SPEED SEL**	**0, 1**	**1**	**0**	
	Sets the critical speeds function on or off. The critical speed function avoids specific speed ranges. 0 = OFF – Disables the critical speeds function. 1 = ON – Enables the critical speeds function. Example: To avoid speeds at which a fan system vibrates badly: • Determine problem speed ranges. Assume they are found to be: 18…23 Hz and 46…52 Hz. • Set 2501 CRIT SPEED SEL = 1. • Set 2502 CRIT SPEED 1 LO = 18 Hz. • Set 2503 CRIT SPEED 1 HI = 23 Hz. • Set 2504 CRIT SPEED 2 LO = 46 Hz. • Set 2505 CRIT SPEED 2 HI = 52 Hz.				
2502	**CRIT SPEED 1 LO**	**0.0…500.0 Hz**	**0.1 Hz**	**0.0 Hz**	
	Sets the minimum limit for critical speed range 1. • The value must be less than or equal to 2503 CRIT SPEED 1 HI. • Units are rpm, unless 9904 MOTOR CTRL MODE = 3 (SCALAR SPEED), then units are Hz.				


Group 25: Critical Speeds					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
2503	**CRIT SPEED 1 HI**	**0.0…500.0 Hz**	**0.1 Hz**	**0.0 Hz**	
	Sets the maximum limit for critical speed range 1. • The value must be greater than or equal to 2502 CRIT SPEED 1 LO. • Units are rpm, unless 9904 MOTOR CTRL MODE = 3 (SCALAR SPEED), then units are Hz.				
2504	**CRIT SPEED 2 LO**	**0.0…500.0 Hz**	**0.1 Hz**	**0.0 Hz**	
	Sets the minimum limit for critical speed range 2. • See parameter 2502.				
2505	**CRIT SPEED 2 HI**	**0.0…500.0 Hz**	**0.1 Hz**	**0.0 Hz**	
	Sets the maximum limit for critical speed range 2. • See parameter 2503.				
2506	**CRIT SPEED 3 LO**	**0.0…500.0 Hz**	**0.1 Hz**	**0.0 Hz**	
	Sets the minimum limit for critical speed range 3. • See parameter 2502.				
2507	**CRIT SPEED 3 HI**	**0.0…500.0 Hz**	**0.1 Hz**	**0.0 Hz**	
	Sets the maximum limit for critical speed range 3. • See parameter 2503.				

Group 26: Motor Control

This group provides controls for fine-tuning the motor control.


Group 26: Motor Control					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
2603	**IR COMP VOLT**	**0…100 V**	**1 V**	**size dependent**	

Sets the IR compensation voltage used for 0 Hz.
- Requires parameter 9904 MOTOR CTRL MODE = 3 (SCALAR SPEED).
- Keep IR compensation as low as possible to prevent overheating.
- Typical IR compensation values are:

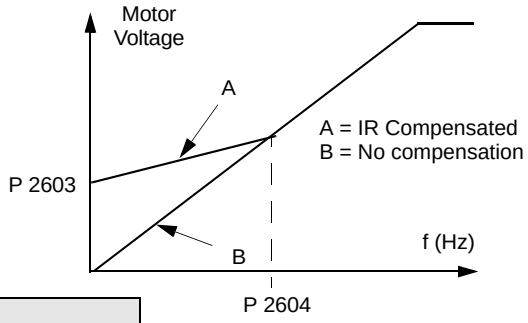

380…480 V Units					
P_N (kW)	3	7.5	15	37	132
IR comp (V)	18	15	12	8	3

IR Compensation
- When enabled, IR Compensation provides an extra voltage boost to the motor at low speeds. Use IR Compensation, for example, in applications that require a high breakaway torque.

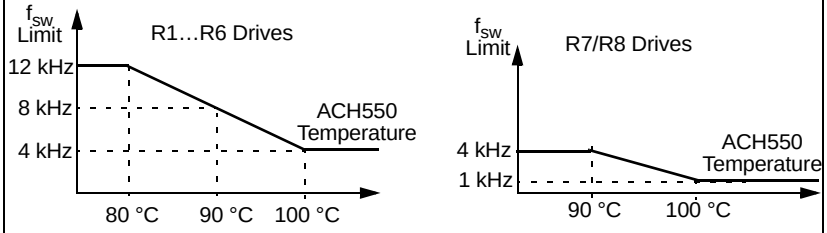Group 26: Motor Control					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
2604	**IR COMP FREQ**	**0…100%**	**1**	**80%**	
	Sets the frequency at which IR compensation is 0 V (in % of motor frequency).				
2605	**U/f RATIO**	**1, 2**	**1**	**2**	
	Selects the form for the U/f (voltage to frequency) ratio below field weakening point. 1 = LINEAR – Preferred for constant torque applications. 2 = SQUARED – Preferred for centrifugal pump and fan applications. (Square is more silent for most operating frequencies.)				
2606	**SWITCHING FREQ**	**1, 4, 8, 12, 16 kHz**	**-**	**4 kHz**	
	Sets the switching frequency for the drive. Also see parameter 2607 SWITCH FREQ CTRL and section *Switching frequency derating* on page *350*. • Higher switching frequencies mean less noise. • The 1, 4 and 8 kHz switching frequencies are available for all frame sizes R1-R6. • The 12 kHz switching frequency is available only if parameter 9904 MOTOR CTRL MODE = 3 (SCALAR:FREQ). **NOTE:** Selecting 12 kHz switching frequency automatically limits parameter 9906 to 0.80 of drive nameplate FLA.				
2607	**SW FREQ CTRL**	**0, 1**	**-**	**1**	
	The switching frequency may be reduced if the ACH550 internal temperature rises above a limit. See Figure. This function allows the highest possible switching frequency to be used based on operating conditions. Higher switching frequency results in lower acoustic noise. 0 = OFF – The function is disabled. 1 = ON – The switching frequency is limited according to the figure. 				
2608	**SLIP COMP RATIO**	**0…200%**	**1**	**0**	
	Sets gain for slip compensation (in %). • A squirrel-cage motor slips under load. Increasing the frequency as the motor torque increases compensates for the slip. • Requires parameter 9904 MOTOR CTRL MODE = SCALAR SPEED. 0 = No slip compensation. 1…200 = Increasing slip compensation. 100% means full slip compensation.				
2609	**NOISE SMOOTHING**	**0, 1**	**1**	**0**	
	This parameter introduces a random component to the switching frequency. Noise smoothing distributes the acoustic motor noise over a range of frequencies instead of a single tonal frequency resulting in lower peak noise intensity. The random component has an average of 0Hz and is added to the switching frequency set by parameter 2606 (SWITCHING FREQ). This parameter has no effect if parameter 2606 = 12kHz. 0 = DISABLE 1 = ENABLE				

Group 26: Motor Control					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
2610	**USER DEFINED U1**	**0…120% of U_N V**	**1 = 1 V**	**19% of U_N**	
	Defines the first voltage point of the custom U/f curve at the frequency defined by parameter *2611* USER DEFINED F1. See section *Custom U/f ratio* on page *105*.				
2611	**USER DEFINED F1**	**0.0…500.0 Hz**	**1 = 0.1 Hz**	**10.0 Hz**	
	Defines the first frequency point of the custom U/f curve.				
2612	**USER DEFINED U2**	**0…120% of U_N V**	**1 = 1 V**	**38% of U_N**	
	Defines the second voltage point of the custom U/f curve at the frequency defined by parameter *2613* USER DEFINED F2. See section *Custom U/f ratio* on page *105*.				
2613	**USER DEFINED F2**	**0.0…500.0 Hz**	**1 = 0.1 Hz**	**20.0 Hz**	
	Defines the second frequency point of the custom U/f curve.				
2614	**USER DEFINED U3**	**0…120% of U_N V**	**1 = 1 V**	**47.5% of U_N**	
	Defines the third voltage point of the custom U/f curve at the frequency defined by parameter *2615* USER DEFINED F3. See section *Custom U/f ratio* on page *105*.				
2615	**USER DEFINED F3**	**0.0…500.0 Hz**	**1 = 0.1 Hz**	**25.0 Hz**	
	Defines the third frequency point of the custom U/f curve.				
2616	**USER DEFINED U4**	**0…120% of U_N V**	**1 = 1 V**	**76% of U_N**	
	Defines the fourth voltage point of the custom U/f curve at the frequency defined by parameter *2617* USER DEFINED F4. See section *Custom U/f ratio* on page *105*.				
2617	**USER DEFINED F4**	**0.0…500.0 Hz**	**1 = 0.1 Hz**	**40.0 Hz**	
	Defines the fourth frequency point of the custom U/f curve.				
2618	**FW VOLTAGE**	**0…120% of U_N V**	**1 = 1 V**	**95% of U_N**	
	Defines the voltage of the U/f curve when frequency is equal to or exceeds the motor nominal frequency (*9907* MOTOR NOM FREQ). See section *Custom U/f ratio* on page *105*.				
2619	**DC STABILIZER**				
	Enables or disables the DC voltage stabilizer. The DC stabilizer is used in scalar control mode to prevent possible voltage oscillations in the drive DC bus caused by motor load or weak supply network. In case of voltage variation the drive tunes the frequency reference to stabilize the DC bus voltage and therefore the load torque oscillation. 0 = DISABLE – Disables DC stabilizer. 1 = ENABLE – Enables DC stabilizer.				

Group 29: Maintenance Trig

This group contains usage levels and trigger points. When usage reaches the set trigger point, a notice displayed on the control panel signals that maintenance is due.


Group 29: Maintenance Trig					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
2901	**COOLING FAN TRIG** **0.0…6553.5 kh** **0.1 kh** **0.0** Sets the trigger point for the drive's cooling fan counter. 0.0 = NOT SEL				
2902	**COOLING FAN ACT** **0.0…6553.5 kh** **0.1 kh** **0.0** Defines the actual value of the drive's cooling fan counter. • The parameter is reset by writing 0.0 to it.				
2903	**REVOLUTION TRIG** **0…65535 MRev** **1 MRev** **0** Sets the trigger point for the motor's accumulated revolutions counter. 0.0 = NOT SEL				
2904	**REVOLUTION ACT** **0…65535 MRev** **1 MRev** **0** Defines the actual value of the motor's accumulated revolutions counter. • The parameter is reset by writing 0 to it.				
2905	**RUN TIME TRIG** **0.0…6553.5 kh** **0.1 kh** **0.0** Sets the trigger point for the drive's run time counter. 0.0 = NOT SEL				
2906	**RUN TIME ACT** **0.0…6553.5 kh** **0.1 kh** **0.0** Defines the actual value of the drive's run time counter. • The parameter is reset by writing 0.0 to it.				
2907	**USER MWh TRIG** **0.0…6553.5 MWh** **0.1 MWh** **0.0** Sets the trigger point for the drive's accumulated power consumption (in megawatt hours) counter. 0.0 = NOT SEL				
2908	**USER MWh ACT** **0.0…6553.5 MWh** **0.1 MWh** **0.0** Defines the actual value of the drive's accumulated power consumption (in megawatt hours) counter. • The parameter is reset by writing 0.0 to it.				


Group 30: Fault Functions



This group defines situations that the drive should recognize as potential faults and defines how the drive should respond if the fault is detected.

Group 30: Fault Functions					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3001	**AI<MIN FUNCTION**	**0…3**	**1**	**0**	
	Defines the drive response if the analog input (AI) signal drops below the fault limits and AI is used in reference chain. • 3021 AI1 FAULT LIMIT and 3022 AI2 FAULT LIMIT set the fault limits 0 = NOT SEL – No response. 1 = FAULT – Displays a fault (7, AI1 LOSS or 8, AI2 LOSS) and the drive coasts to stop. 2 = CONST SP7 – Displays a warning (2006, AI1 LOSS or 2007, AI2 LOSS) and sets speed using 1208 CONST SPEED 7. 3 = LAST SPEED – Displays a warning (2006, AI1 LOSS or 2007, AI2 LOSS) and sets speed using the last operating level. This value is the average speed over the last 10 seconds. **Warning! If you select CONST SP7 or LAST SPEED, make sure that continued operation is safe when the analog input signal is lost.**			
3002	**PANEL COMM ERR**	**1…3**	**1**	**1**	
	Defines the drive response to a control panel communication error. 1 = FAULT – Displays a fault (10, PANEL LOSS) and the drive coasts to stop. 2 = CONST SP7 – Displays a warning (2008, PANEL LOSS) and sets speed using 1208 CONST SPEED 7. 3 = LAST SPEED – Displays a warning (2008, PANEL LOSS) and sets speed using the last operating level. This value is the average speed over the last 10 seconds. **Warning! If you select CONST SP7 or LAST SPEED, make sure that continued operation is safe when the control panel communication is lost.**				
3003	**EXTERNAL FAULT 1**	**-6…6**	**1**	**0**	
	Defines the External Fault 1 signal input and the drive response to an external fault. 0 = NOT SEL – External fault signal is not used. 1 = DI1 – Defines digital input DI1 as the external fault input. • Activating the digital input indicates a fault. The drive displays a fault (14, EXTERNAL FAULT 1) and the drive coasts to stop. 2…6 = DI2…DI6 – Defines digital input DI2…DI6 as the external fault input. • See DI1 above. -1 = DI1(INV) – Defines an inverted digital input DI1 as the external fault input. • De-activating the digital input indicates a fault. The drive displays a fault (14, EXTERNAL FAULT 1) and the drive coasts to stop. -2…-6 = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as the external fault input. See DI1(INV) above.				
3004	**EXTERNAL FAULT 2**	**-6…6**	**1**	**0**	
	Defines the External Fault 2 signal input and the drive response to an external fault. • See parameter 3003 above.				

Group 30: Fault Functions					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3005	**MOT THERM PROT**	**0, 2**	**1**	**1**	
	Defines the drive response to motor overheating. 0 = NOT SEL – No response and/or motor thermal protection not set up. 1 = FAULT – When the calculated motor temperature exceeds 90 C, displays a warning (2010, MOT OVERTEMP). When the calculated motor temperature exceeds 110 C displays a fault (9, MOT OVERTEMP) and the drive coasts to stop. 2 = WARNING – When the calculated motor temperature exceeds 90 C, displays a warning (2010, MOT OVERTEMP).				
3006	**MOT THERM TIME**	**256…9999 s**	**1**	**1050 s**	
	Sets the motor thermal time constant for the motor temperature model. • This is the time required for the motor to reach 63% of the final temperature with steady load. • For thermal protection according to UL requirements for NEMA class motors, use the rule of thumb: MOTOR THERM TIME equals 35 times t6, where t6 (in seconds) is specified by the motor manufacturer as the time that the motor can safely operate at six times its rated current. • The thermal time for a Class 10 trip curve is 350 s, for a Class 20 trip curve 700 s, and for a Class 30 trip curve 1050 s.				
3007	**MOT LOAD CURVE**	**50…150%**	**1**	**100%**	
	Sets the maximum allowable operating load of the motor. • With the default value 100%, motor overload protection is functioning when the constant current exceeds 127% of the parameter 9906 MOTOR NOM CURR value. • The default overloadability is at the same level as what motor manufacturer's typically allow in the 86°F (30°C) ambient temperature and 3300 ft (1000m) altitude. When the ambient temperature exceeds 86°F (30°C) or the installation altitude is over 3300 ft (1000m), decrease the parameter 3007 value according to the motor manufacturer's recommendation. **Example:** If the constant protection level needs to be 115% of the motor nominal current, set parameter 3007 value to 91% (=115/127*100%).				
3008	**ZERO SPEED LOAD**	**25…150%**	**1**	**70%**	
	Sets the maximum allowable current at zero speed. • Value is relative to 9906 MOTOR NOM CURR.				

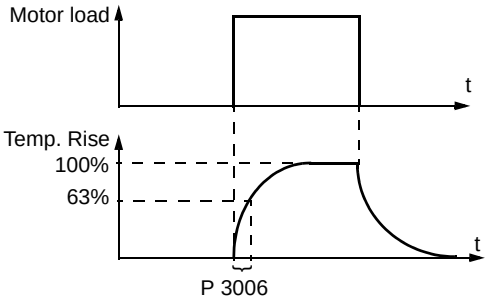

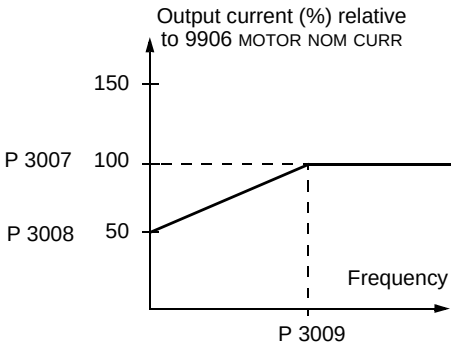


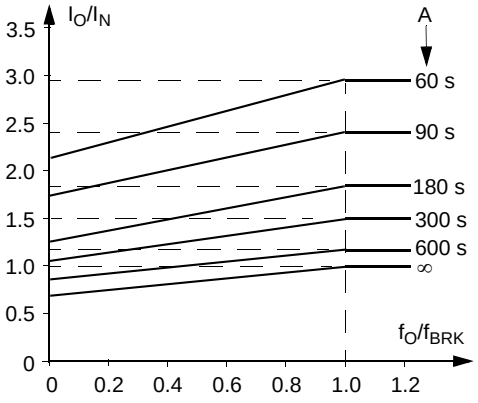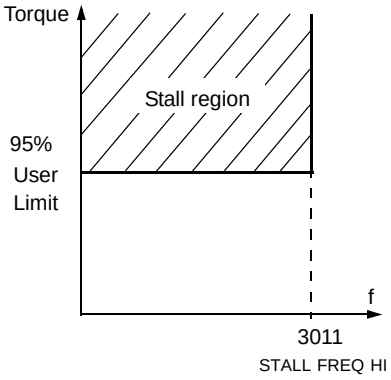Group 30: Fault Functions					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3009	**BREAK POINT FREQ**	**1…250 Hz**	**1**	**35 Hz**	
	Sets the break point frequency for the motor load curve. **Example:** Thermal protection trip times when parameters 3006 MOT THERM TIME, 3007 MOT LOAD CURVE and 3008 ZERO SPEED LOAD have default values.  I_O = Output current I_N = Nominal motor current f_O = Output frequency f_{BRK} = Break point frequency A = Trip time			
3010	**STALL FUNCTION**	**0…2**	**1**	**35 Hz**	
	This parameter defines the operation of the Stall function. This protection is active if the drive operates in the stall region (see figure) for the time defined by 3012 STALL TIME. The "User Limit" is defined in Group 20 by 2017 MAX TORQUE 1, 2018 MAX TORQUE 2, or the limit on the COMM input. 0 = NOT SEL – Stall protection is not used. 1 = FAULT – When the drive operates in the stall region for the time set by 3012 STALL TIME: • The drive coasts to stop. • A fault indication is displayed. 2 = WARNING – When the drive operates in the stall region for the time set by 3012 STALL TIME: • A warning indication is displayed. • The warning disappears when the drive is out of the stall region for half the time set by parameter 3012 STALL TIME.  				
3011	**STALL FREQUENCY**	**0.5…50.0 Hz**	**0.1 Hz**	**20.0 Hz**	
	This parameter sets the frequency value for the Stall function. Refer to Figure.				
3012	**STALL TIME**	**10…400 s**	**1 s**	**20 s**	
	This parameter sets the time value for the Stall function.				

Group 30: Fault Functions					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3017	**EARTH FAULT**	**0…1**	**1**	**1**	
	Defines the drive response if the drive detects a ground fault in the motor or motor cables. The drive monitors for ground faults while the drive is running, and while the drive is not running. Also see parameter 3023 WIRING FAULT. 0 = DISABLE – No drive response to ground faults. 1 = ENABLE – Ground faults display fault 16 (EARTH FAULT), and (if running) the drive coasts to stop.				
3018	**COMM FAULT FUNC**	**0…3**	**1**	**0**	
	Defines the drive response if the fieldbus communication is lost. 0 = NOT SEL – No response. 1 = FAULT – Displays a fault (28, SERIAL 1 ERR) and the drive coasts to stop. 2 = CONST SP7 – Displays a warning (2005, IO COMM) and sets speed using 1208 CONST SPEED 7. This “alarm speed” remains active until the fieldbus writes a new reference value. 3 = LAST SPEED – Displays a warning (2005, IO COMM) and sets speed using the last operating level. This value is the average speed over the last 10 seconds. This “alarm speed” remains active until the fieldbus writes a new reference value. Caution: If you select CONST SP7, or LAST SPEED, make sure that continued operation is safe when fieldbus communication is lost.				
3019	**COMM FAULT TIME**	**0.0…60.0 s**	**0.1 s**	**10.0 s**	
	Sets the communication fault time used with 3018 COMM FAULT FUNC. • Brief interruptions in the fieldbus communication are not treated as faults if they are less than the COMM FAULT TIME value.				
3021	**AI1 FAULT LIMIT**	**0.0…100.0%**	**0.1%**	**0.0%**	
	Sets a fault level for analog input 1. See 3001 AI<MIN FUNCTION.				
3022	**AI2 FAULT LIMIT**	**0.0…100.0%**	**0.1%**	**0.0%**	
	Sets a fault level for analog input 2. See 3001 AI<MIN FUNCTION.				
3023	**WIRING FAULT**	**0, 1**	**1**	**1**	
	Defines the drive response to cross wiring faults and to ground faults detected when the drive is NOT running. When the drive is not running it monitors for: • Improper connections of input power to the drive output (the drive can display fault 35, OUTPUT WIRING if improper connections are detected). • Ground faults (the drive can display fault 16, EARTH FAULT if a ground fault is detected). Also, see parameter 3017 EARTH FAULT. 0 = DISABLE – No drive response to either of the above monitoring results. 1 = ENABLE – The drive displays faults when this monitoring detects problems.				

Group 31: Automatic Reset

This group defines conditions for automatic resets. An automatic reset occurs after a particular fault is detected. The drive holds for a set delay time, then automatically restarts. You can limit the number of resets in a specified time period, and you can set up automatic resets for a variety of faults.

Group 31: Automatic Reset					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3101	**NR OF TRIALS** Sets the number of allowed automatic resets within a trial period defined by 3102 TRIAL TIME. • If the number of automatic resets exceeds this limit (within the trial time), the drive prevents additional automatic resets and remains stopped. • Starting then requires a successful reset performed from the control panel or from a source selected by 1604 FAULT RESET SEL.  **Example:** Three faults have occurred in the trial time. The last is reset only if the value for 3101 NR OF TRIALS is 3 or more.	**0…5**	**1**	**5**	
3102	**TRIAL TIME** Sets the time period used for counting and limiting the number of resets. • See 3101 NR OF TRIALS.	**1.0…600.0 s**	**0.1 s**	**30.0 s**	
3103	**DELAY TIME** Sets the delay time between a fault detection and attempted drive restart. • If DELAY TIME = zero, the drive resets immediately.	**0.0…120.0 s**	**0.1 s**	**0.5 s**	
3104	**AR OVERCURRENT** Sets the automatic reset for the overcurrent function on or off. 0 = DISABLE – Disables automatic reset. 1 = ENABLE – Enables automatic reset. • Automatically resets the fault (OVERCURRENT) after the delay set by 3103 DELAY TIME, and the drive resumes normal operation.	**0, 1**	**1**	**0**	
3105	**AR OVERVOLTAGE** Sets the automatic reset for the overvoltage function on or off. 0 = DISABLE – Disables automatic reset. 1 = ENABLE – Enables automatic reset. • Automatically resets the fault (DC OVERVOLT) after the delay set by 3103 DELAY TIME, and the drive resumes normal operation.	**0, 1**	**1**	**1**	
3106	**AR UNDERVOLTAGE** Sets the automatic reset for the undervoltage function on or off. 0 = DISABLE – Disables automatic reset. 1 = ENABLE – Enables automatic reset. • Automatically resets the fault (DC UNDERVOLTAGE) after the delay set by 3103 DELAY TIME, and the drive resumes normal operation.	**0, 1**	**1**	**1**	

Group 31: Automatic Reset					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3107	**AR AI<MIN**	**0, 1**	**1**	**1**	
	Sets the automatic reset for the analog input less than minimum value function on or off. 0 = DISABLE – Disables automatic reset. 1 = ENABLE – Enables automatic reset. • Automatically resets the fault (AI<MIN) after the delay set by 3103 DELAY TIME, and the drive resumes normal operation. **Warning! When the analog input signal is restored, the drive may restart, even after a long stop. Make sure that automatic, long delayed starts will not cause physical injury and/or damage equipment.**				
3108	**AR EXTERNAL FLT**	**0, 1**	**1**	**1**	
	Sets the automatic reset for external faults function on or off. 0 = DISABLE – Disables automatic reset. 1 = ENABLE – Enables automatic reset. • Automatically resets the fault (EXTERNAL FAULT 1 or EXTERNAL FAULT 2) after the delay set by 3103 DELAY TIME, and the drive resumes normal operation.				

Group 32: Supervision

This group defines supervision for up to three signals from Group 01, Operating Data. Supervision monitors a specified parameter and energizes a relay output if the parameter passes a defined limit. Use Group 14, Relay Outputs, to define the relay and whether the relay activates when the signal is too low or too high.

Group 32: Supervision					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3201	**SUPERV 1 PARAM**	**101…199**	**1**	**103**	


Selects the first supervised parameter.

- Must be a parameter number from Group 01 Operating Data.
- If the supervised parameter passes a limit, a relay output is energized.
- The supervision limits are defined in this group.
- The relay outputs are defined in Group 14 Relay Outputs (definition also specifies which supervision limit is monitored).


LO ≤ HI

Operating data supervision using relay outputs, when LO≤HI.

- Case A = Parameter 1401 RELAY OUTPUT 1 (or 1402 RELAY OUTPUT 2, etc.) value is SUPRV1 OVER or SUPRV 2 OVER. Use for monitoring when/if the supervised signal exceeds a given limit. The relay remains active until the supervised value drops below the low limit.
- Case B = Parameter 1401 RELAY OUTPUT 1 (or 1402 RELAY OUTPUT 2, etc.) value is SUPRV 1 UNDER or SUPRV 2 UNDER. Use for monitoring when/if the supervised signal falls below a given limit. The relay remains active until the supervised value rises above the high limit.

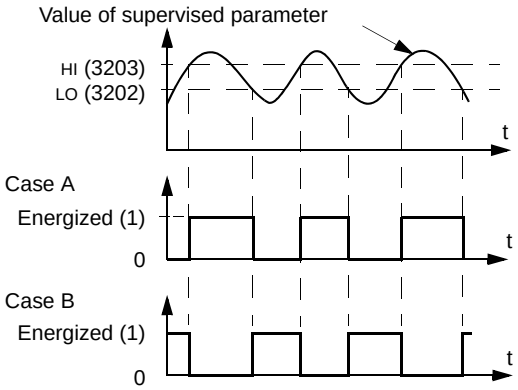

Note! Case LO ≤ HI represents a normal hysteresis.

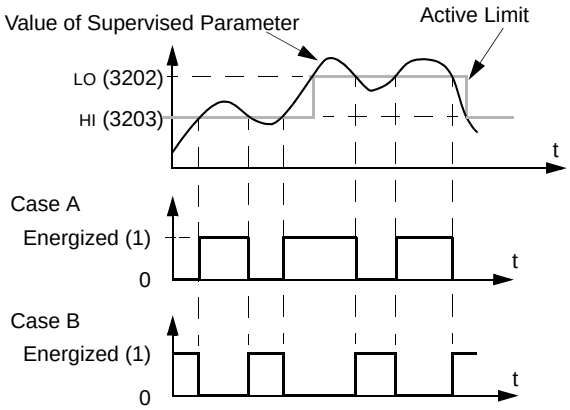Group 32: Supervision					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
	LO > HI Operating data supervision using relay outputs, when LO>HI. The lowest limit (HI 3203) is active initially, and remains active until the supervised parameter goes above the highest limit (LO 3202), making that limit the active limit. That limit remains active until the supervised parameter goes below the lowest limit (HI 3203), making that limit active.  • Case A = Parameter 1401 RELAY OUTPUT 1 (or 1402 RELAY OUTPUT 2, etc.) value is SUPRV1 OVER or SUPRV2 OVER. Initially the relay is de-energized. It is energized whenever the supervised parameter goes above the active limit. • Case B = Parameter 1401 RELAY OUTPUT 1 (or 1402 RELAY OUTPUT 2, etc.) value is SUPRV1 UNDER or SUPRV2 UNDER. Initially the relay is energized. It is de-energized whenever the supervised parameter goes below the active limit. **Note!** Case LO>HI represents a special hysteresis with two separate supervision limits.				
3202	**SUPERV 1 LIM LO**	**Depends on selection**	**-**	**60.0 Hz**	
	Sets the low limit for the first supervised parameter. See 3201 SUPERV 1 PARAM above.				
3203	**SUPERV 1 LIM HI**	**Depends on selection**	**-**	**60.0 Hz**	
	Sets the high limit for the first supervised parameter. See 3201 SUPERV 1 PARAM above.				
3204	**SUPERV 2 PARAM**	**101…199**	**1**	**104**	
	Selects the second supervised parameter. See 3201 SUPERV 1 PARAM above.				
3205	**SUPERV 2 LIM LO**	**Depends on selection**		**4.5 A**	
	Sets the low limit for the second supervised parameter. See 3204 SUPERV 2 PARAM above.				
3206	**SUPERV 2 LIM HI**	**Depends on selection**		**4.5 A**	
	Sets the high limit for the second supervised parameter. See 3204 SUPERV 2 PARAM above.				
3207	**SUPERV 3 PARAM**	**101…199**	**1**	**105**	
	Selects the third supervised parameter. See 3201 SUPERV 1 PARAM above.				

Group 32: Supervision					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3208	**SUPERV 3 LIM LO** Sets the low limit for the third supervised parameter. See 3207 SUPERV 3 PARAM above.	**Depends on selection**		**100.0%**	
3209	**SUPERV 3 LIM HI** Sets the high limit for the third supervised parameter. See 3207 SUPERV 3 PARAM above.	**Depends on selection**		**100.0%**	

Group 33: Information


This group provides access to information about the drive's current programs: versions and test date.


Group 33: Information					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3301	**FW VERSION** Contains the version of the drive's firmware.	**10000…FFFF hex**	**1**	**Firmware ver.**	
3302	**LP VERSION** Contains the version of the loading package.	**0000…FFFF hex**	**1**	**0**	
3303	**TEST DATE** Contains the test date (yy.ww).	**yy.ww**	**1**	**0**	
3204	**DRIVE RATING** Indicates the drive's current and voltage rating. The format is XXXY, where: • XXX =The nominal current rating of the drive in amps. If present, an "A" indicates a decimal point in the rating for the current. For example XXX = 8A8 indicates a nominal current rating of 8.8 Amps. • Y = The voltage rating of the drive, where Y = : • 2 indicates a 208…240 Volt rating. • 4 indicates a 380…480 Volt rating. • 6 indicates a 500…600 Volt rating.	**-**	**-**	**-**	
3305	**PARAMETER TABLE** Contains the parameter table version of the drive's firmware				

Group 34: Panel Display Process Variables

This group defines the content for control panel display (middle area), when the control panel is in the output mode.

Group 34: Panel Display Process Variables					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3401	**SIGNAL1 PARAM** Selects the first parameter (by number) displayed on the control panel. • Definitions in this group define display content when the control panel is in the control mode. • Any Group 01 parameter number can be selected. • Using the following parameters, the display value can be scaled, converted to convenient units, and/or displayed as a bar graph. • The figure identifies selections made by parameters in this group. 100 = not selected – First parameter not displayed. 101…199 = Displays parameter 0101…0199. If parameter does not exist, the display shows “n.a.”.	**100…199**	**1**	**103**	
3402	**SIGNAL1 MIN** Defines the minimum expected value for the first display parameter. Use parameters 3402, 3403, 3406, and 3407, for example to convert a Group 01 parameter, such as 0102 SPEED (in rpm) to the speed of a conveyor driven by the motor (in ft/min). For such a conversion, the source values in the figure are the min. and max. motor speed, and the display values are the corresponding min. and max. conveyor speed. Use parameter 3405 to select the proper units for the display. **Note!** Selecting units does not convert values.	**Depends on selection**		**0.0 Hz**	
3403	**SIGNAL1 MAX** Defines the maximum expected value for the first display parameter.	**Depends on selection**	**-**	**600.0 Hz**	

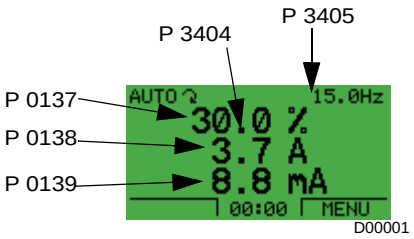

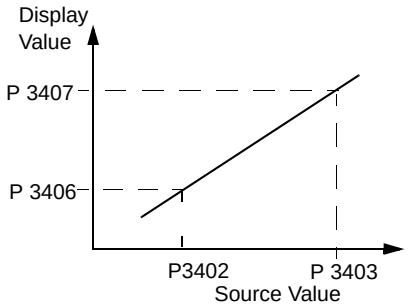

Group 34: Panel Display Process Variables					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3404	**OUTPUT1 DSP FORM**	**0…9**	**1**	**9**	

Defines the decimal point location for the first display parameter.

1…7 – Defines the decimal point location.
- Enter the number of digits desired to the right of the decimal point.
- See table for example using pi (3.14159).

8 = BAR METER – Specifies a bar meter display.

9 = DIRECT – Decimal point location and units of measure are identical to the source signal. See Group 01 parameter listing in “Complete Parameter List” for resolution (which indicates the decimal point location) and the units of measure.

3404 Value	Display	Range
0	± 3	-32768…+32767 (Signed)
1	± 3.1	
2	± 3.14	
3	± 3.142	
4	3	0…65535 (Unsigned)
5	3.1	
6	3.14	
7	3.142	

3405	**OUTPUT1 DSP UNIT**	**0…127**		**1**	**4**	

Selects the units used with the first display parameter.

0 = NOT SEL	12 = mV	24 = GPM	36 = l/s	48 = gal/m	60 = ft wg
1 = A	13 = kW	25 = PSI	37 = l/min	49 = gal/h	61 = lbsi
2 = V	14 = W	26 = CFM	38 = l/h	50 = ft^3/s	62 = ms
3 = Hz	15 = kWh	27 = ft	39 = m^3/s	51 = ft^3/m	63 = Mrev
4 = %	16 = °F	28 = MGD	40 = m^3/m	52 = ft^3/h	64 = d
5 = s	17 = hp	29 = inHg	41 = kg/s	53 = lb/s	65 = inWC
6 = h	18 = MWh	30 = FPM	42 = kg/m	54 = lb/m	66 = m/min
7 = rpm	19 = m/s	31 = kb/s	43 = kg/h	55 = lb/h	67 = Nm
8 = kh	20 = m^3/h	32 = kHz	44 = mbar	56 = FPS	68 = Km^3/h
9 = °C	21 = dm^3/s	33 = Ohm	45 = Pa	57 = ft/s	
10 = lb ft	22 = bar	34 = ppm	46 = GPS	58 = inH_2O	
11 = mA	23 = kPa	35 = pps	47 = gal/s	59 = in wg	
117 = %ref	119 = %dev	121 = % SP	123 = Iout	125 = Fout	127 = Vdc
118 = %act	120 = % LD	122 = %FBK	124 = Vout	126 = Tout	

3406	**OUTPUT1 MIN**	**Depends on selection**		**1**	**-**

Sets the minimum value displayed for the first display parameter.

3407	**OUTPUT1 MAX**	**Depends on selection**		**1**	**-**

Sets the maximum value displayed for the first display parameter.

3408	**SIGNAL 2 PARAM**	**100…199**		**1**	**104**

Selects the second parameter (by number) displayed on the control panel. See parameter 3401.


Group 34: Panel Display Process Variables					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3409	**SIGNAL 2 MIN** Defines the minimum expected value for the second display parameter. See parameter 3402.	**Depends on selection**	**1**	**-**	
3410	**SIGNAL 2 MAX** Defines the maximum expected value for the second display parameter. See parameter 3403.	**Depends on selection**	**1**	**-**	
3411	**OUTPUT 2 DSP FORM** Defines the decimal point location for the second display parameter. See parameter 3404.	**0…8**	**1**	**-**	
3412	**OUTPUT 2 DSP UNIT** Selects the units used with the second display parameter. See parameter 3405.	**0…127**	**1**	**1**	
3413	**OUTPUT 2 MIN** Sets the minimum value displayed for the second display parameter. See parameter 3406.	**Depends on selection**	**1**	**-**	
3414	**OUTPUT 2 MAX** Sets the maximum value displayed for the second display parameter. See parameter 3407.	**Depends on selection**	**1**	**-**	
3415	**SIGNAL 3 PARAM** Selects the third parameter (by number) displayed on the control panel. See parameter 3401.	**100…199**	**1**	**120**	
3416	**SIGNAL 3 MIN** Defines the minimum expected value for the third display parameter. See parameter 3402.	**Depends on selection**	**1**	**-**	
3417	**SIGNAL 3 MAX** Defines the maximum expected value for the third display parameter. See parameter 3403.	**Depends on selection**	**1**	**-**	
3418	**OUTPUT 3 DSP FORM** Defines the decimal point location for the third display parameter. See parameter 3404.	**0…8**	**1**	**1**	
3419	**OUTPUT 3 DSP UNIT** Selects the units used with the third display parameter. See parameter 3405.	**-128…127**	**1**	**11**	
3420	**OUTPUT 3 MIN** Sets the minimum value displayed for the third display parameter. See parameter 3406.	**Depends on selection**	**1**	**-**	

Group 34: Panel Display Process Variables					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3421	**OUTPUT 3 MAX**	**Depends on selection**	**1**	**-**	
	Sets the maximum value displayed for the third display parameter. See parameter 3407.				


Group 35: Motor Temp Meas

This group defines the detection and reporting for a particular potential fault – motor overheating, as detected by a temperature sensor. Typical connections are defined below.

One Sensor

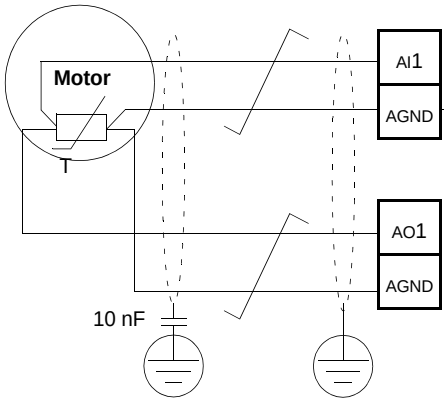

Three Sensors

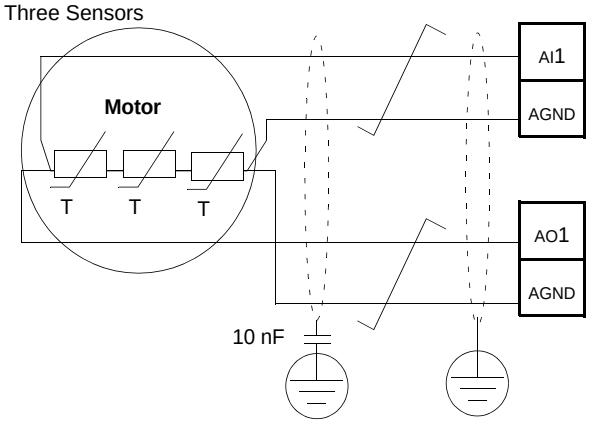


⚠ Warning! IEC 60664 requires double or reinforced insulation between live parts and the surface of accessible parts of electrical equipment which are either non-conductive or conductive but not connected to the protective earth.

To fulfill the insulation requirement, connect a thermistor (and other similar components) to the drive's control terminals using any of these alternatives:

- Separate the thermistor from live parts of the motor with double reinforced insulation.
- Protect all circuits connected to the drive's digital and analog inputs. Protect against contact, and insulate from other low voltage circuits with basic insulation (rated for the same voltage level as the drive's main circuit).
- Use an external thermistor relay. The relay insulation must be rated for the same voltage level as the drive's main circuit.

The figure below shows alternate thermistor connections. At the motor end the cable shield should be earthed through a 10 nF capacitor. If this is not possible, leave the shield unconnected.

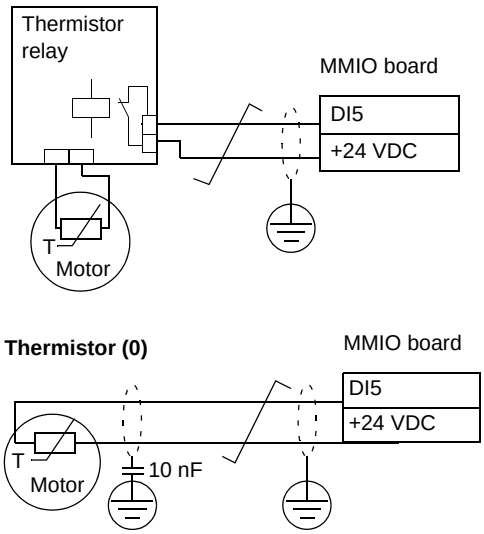

For other faults, or for anticipating motor overheating using a model, see Group 30: Fault Functions.


Group 35: Motor Temp Meas					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3501	**SENSOR TYPE**	**0…6**	**1**	**0**	

Identifies the type of motor temperature sensor used, PT100 (°C) or PTC (ohms).
See parameters 1501 and 1507.
0 = NONE
1 = 1 x PT100 – Sensor configuration uses one PT 100 sensor.
- Analog output AO1 or AO2 feeds constant current through the sensor.
- The sensor resistance increases as the motor temperature rises, as does the voltage over the sensor.
- The temperature measurement function reads the voltage through analog input AI1 or AI2 and converts it to degrees centigrade.

2 = 2 x PT100 – Sensor configuration uses two PT 100 sensors.
- Operation is the same as for above 1 x PT100.

3 = 3 x PT100 – Sensor configuration uses three PT 100 sensors.
- Operation is the same as for above 1 x PT100.

4 = PTC – Sensor configuration uses one PTC.
- The analog output feeds a constant current through the sensor.
- The resistance of the sensor increases sharply as the motor temperature rises over the PTC reference temperature (T_{ref}), as does the voltage over the resistor. The temperature measurement function reads the voltage through analog input AI1 and converts it into ohms.
- The figure shows typical PTC sensor resistance values as a function of the motor operating temperature.

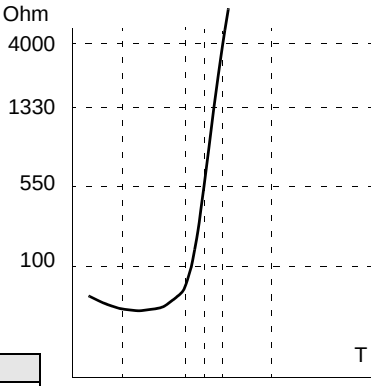

Temperature	Resistance
Normal	0 … 1.5 kohm
Excessive	≥ 4 kohm

5 = THERMISTOR (0) – Sensor configuration uses a thermistor.
- Motor thermal protection is activated through a digital input. Connect either a PTC sensor or a normally closed thermistor relay to a digital input. The drive reads the digital input states as shown in the above table.
- When the digital input is ‘0’ the motor is overheated.
- See the figures in the introduction to this Group.

6 = THERMISTOR (1) – Sensor configuration uses a thermistor.
- Motor thermal protection is activated through a digital input. Connect a normally open thermistor relay to a digital input. The drive reads the digital input states as shown in the above table.
- When the digital input is ‘1’ the motor is overheated.

See the figures in the introduction to this Group.


Group 35: Motor Temp Meas					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3502	**INPUT SELECTION** Defines the input used for the temperature sensor. 1 = AI1 – PT100 and PTC. 2 = AI2 – PT100 and PTC. 3…8 = DI1…DI6 – Thermistor	**1…8**	**1**	**1**	
3503	**ALARM LIMIT** Defines the alarm limit for motor temperature measurement. • At motor temperatures above this limit, the drive displays an alarm (2010, MOTOR OVERTEMP) For thermistors: 0 = de-activated 1 = activated	**-10...200°C/ 0...5000 Ohm/ 0…1**	**1**	**-110°C/ 1500 Ohm/ 0**	
3504	**FAULT LIMIT** Defines the fault limit for motor temperature measurement. • At motor temperatures above this limit, the drive displays a fault (9, MOTOR OVERTEMP) and stops the drive. For thermistors: 0 = de-activated 1 = activated	**-10...200°C/ 0...5000 Ohm/ 0…1**	**1**	**-130°C/ 4000 Ohm/ 0**	
3505	**AO EXCITATION** Enables current feed from analog output AO. Parameter setting overrides parameter group *15 ANALOG OUTPUTS* settings. With PTC the output current is 1.6 mA. With Pt 100 the output current is 9.1 mA. 0 = disabled 1 = enabled			**0**	

Group 36: Timer Functions


This group defines the timer functions. The timer functions include:

- Four daily start and stop times.
- Four weekly start, stop and boost times.
- Four timers for collecting selected periods together.


A timer can be connected to multiple time periods and a time period can be in multiple timers.

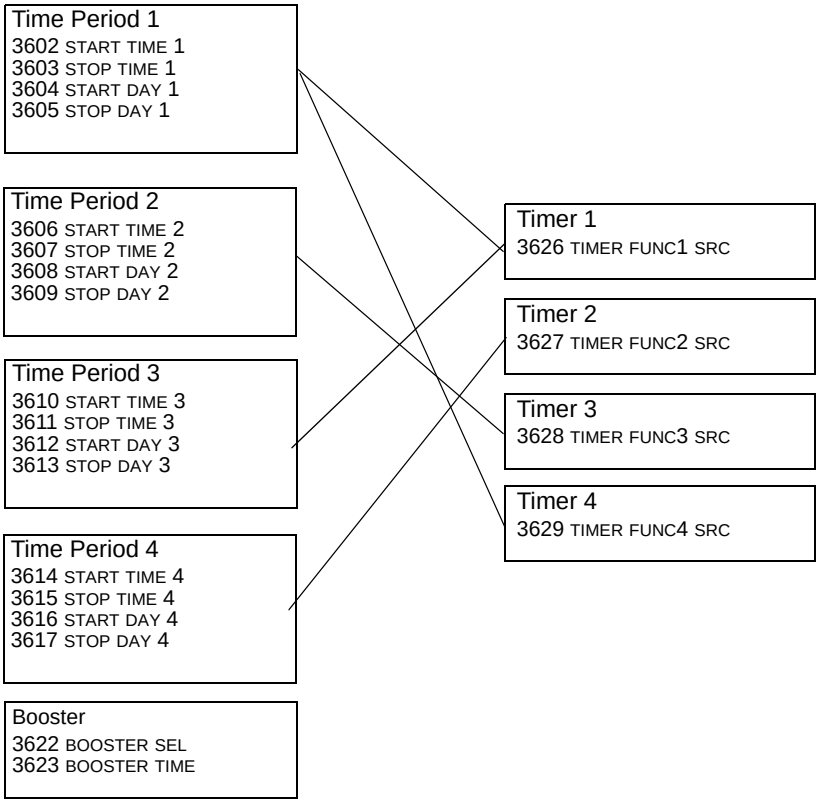


A parameter can be connected to only one time.

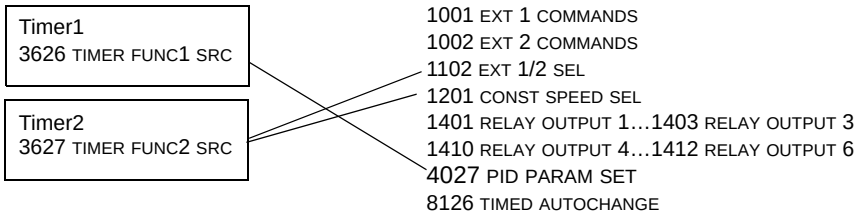

Group 36: Timer Functions					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3601	**TIMERS ENABLE** Selects the source for the timer enable signal. 0 = NOT SEL – Timed functions are disabled. 1 = DI1- Defines digital input DI1 as the timed function enable signal. • The digital input must be activated for timed functions enable. 2…6 = DI2…DI6 – Defines digital input DI2…DI6 as the timed function enable signal. 7 = ENABLED – Timed functions are enabled. -1 = DI1(INV) – Defines an inverted digital input DI1 as the timed function enable signal. • This digital input must be de-activated for timed function enable. -2…-6 = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as the timed function enable signal.	**-6…7**	**1**	**0**	
3602	**START TIME 1** Defines the daily start time. • The time can be changed in steps of 2 seconds. • If parameter value is 07:00:00, then the period will be activated at 7 a.m. • The figure shows multiple periods on different weekdays. When editing parameters to set times: • Use arrow keys to select desired hour setting. • Press NEXT to advance to minutes. • Use arrow keys to select desired minutes setting. • Press NEXT to advance to minutes. • Use arrow keys to select desired seconds setting. • Press SAVE.	**00:00:00…23:59:58**	**2 s**	**12:00:00**	
3603	**STOP TIME 1** Defines the daily stop time. • The time can be changed in steps of 2 seconds. • If the parameter value is 09:00:00, then the period will be deactivated at 9 a.m.	**00:00:00…23:59:58**	**2 s**	**12:00:00**	

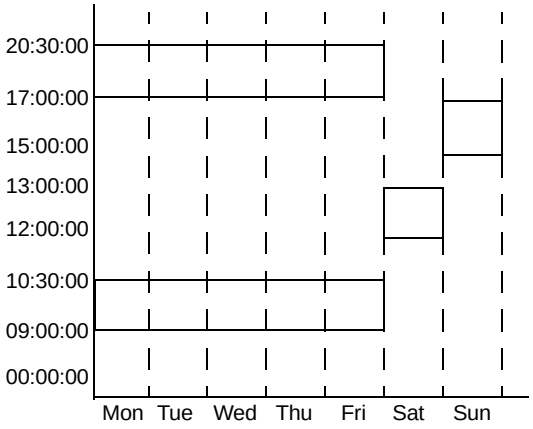

Group 36: Timer Functions					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3604	**START DAY 1** Defines the weekly start day. 1 = Monday…7 = Sunday. • If parameter value is 1, then period 1 weekly is active from Monday midnight (00:00:00).	**1…7**	**1**	**1**	
3605	**STOP DAY 1** Defines weekly stop day. 1 = Monday…7 = Sunday. • If parameter value is 5, then timer 1 weekly will be deactivated on Friday midnight (23:59:58).	**1…7**	**1**	**1**	
3606	**START TIME 2** Defines timer2 daily start time. • See parameter 3602	**00:00:00…23:59:58**	**2 s**	**12:00:00**	
3607	**STOP TIME 2** Defines timer2 daily stop time. • See parameter 3603	**00:00:00…23:59:58**	**2 s**	**12:00:00**	
3608	**START DAY 2** Defines timer 2 weekly start day. • See parameter 3604	**1…7**	**1**	**1**	
3609	**STOP DAY 2** Defines timer 2 weekly stop day. • See parameter 3605	**1…7**	**1**	**1**	
3610	**START TIME 3** Defines timer 3 daily start time. • See parameter 3602	**00:00:00…23:59:58**	**2 s**	**12:00:00**	
3611	**STOP TIME 3** Defines timer 3 daily stop time. • See parameter 3603	**00:00:00…23:59:58**	**2 s**	**12:00:00**	
3612	**START DAY 3** Defines timer 3 weekly start day. • See parameter 3604	**1…7**	**1**	**1**	
3613	**STOP DAY 3** Defines timer 3 weekly stop day. • See parameter 3605	**1…7**	**1**	**1**	
3614	**START TIME 4** Defines timer 4 daily start time. • See parameter 3602	**00:00:00…23:59:58**	**2 s**	**12:00:00**	
3615	**STOP TIME 4** Defines timer 4 daily stop time. • See parameter 3603	**00:00:00…23:59:58**	**2 s**	**12:00:00**	

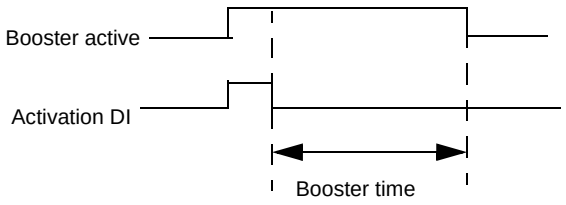
Group 36: Timer Functions					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3616	**START DAY 4** Defines timer 4 weekly start day. • See parameter 3604	**1…7**	**1**	**1**	
3617	**STOP DAY 4** Defines timer 4 weekly stop day. • See parameter 3605	**1…7**	**1**	**1**	
3622	**BOOSTER SEL** Selects the source for the booster signal. 0 = NOT SEL – Booster signal is disabled. 1 = DI1 – Defines DI1 as the booster signal. 2…6 = DI2…DI6 – Defines DI2…DI6 as the booster signal. -1 = DI1(INV) – Defines an inverted digital input DI1 as the booster signal. -2…-6 = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as the booster signal.	**-6…6**	**1**	**0**	
3623	**BOOSTER TIME** Defines the booster ON time. Time is started when booster sel signal is released. If parameter range is 01:30:00, then booster is active for 1 hour and 30 minutes after activation DI is released.  	**00:00:00-23:59:58**	**2 s**	**00:00:00**	

Group 36: Timer Functions					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3626	**TIMER 1 SRC** Defines the time periods used by the timer. 0 = NOT SEL- No timers have been selected. 1 = P1 – Time Period 1 selected in the timer. 2 = P2 – Time Period 2 selected in the timer. 3 = P2 + P1 – Time Periods 1 and 2 selected in the timer. 4 = P3 – Time Period 3 selected in the timer. 5 = P3 + P1 – Time Periods 1 and 3 selected in the timer. 6 = P3 + P2 – Time Periods 2 and 3 selected in the timer. 7 = P3 + P2 + P1 – Time Periods 1, 2 and 3 selected in the timer. 8 = P4 – Time Period 4 selected in the timer. 9 = P4 + P1 – Time Periods 4 and 1 selected in the timer. 10 = P4 + P2 – Time Periods 4 and 2 selected in the timer. 11 = P4 + P2 + P1 – Time Periods 4, 2 and 1 selected in the timer. 12 = P4 + P3 – Time Periods 4 and 3 selected in the timer. 13 = P4 + P3 + P1 – Time Periods 4, 3 and 1 selected in the timer. 14 = P4 + P3 + P2 – Time Periods 4, 3 and 2 selected in the timer. 15 = P4 + P3 + P2 + P1 – Time Periods 4, 3, 2 and 1 selected in the timer. 16 = BOOSTER (B) – Booster selected in the timer. 17 = B + P1 – Booster and Time Period 1 selected in the timer. 18 = B + P2 – Booster and Time Period 2 selected in the timer. 19 = B + P2 + P1 – Booster and Time Periods 1 and 2 selected in the timer. 20 = B + P3 – Booster and Time Period 3 selected in the timer function. 21 = B + P3 + P1 – Booster and Time Period 3 and 1 selected in the timer. 22 = B + P3 + P2 – Booster and Time Periods 3 and 2 selected in the timer. 23 = B + P3 + P2 + P1 – Booster and Time Periods 3, 2 and 1 selected in the timer. 24 = B + P4 – Booster and Time Periods 4 selected in the timer. 25 = B + P4 + P1 – Booster and Time Period 4 and Timer 1 selected in the timer. 26 = B + P4 + P2 – Booster and Time Period 4 and 2 selected in the timer. 27 = B + P4 + P2 + P1 – Booster and Time Periods 4, 2 and 1 selected in the timer. 28 = B + P4 + P3 – Booster and Time Periods 4 and 3. 29 = B + P4 + P3 + P1 – Booster and Time Periods 4, 3 and 1 selected in the timer. 30 = B + P4 + P3 + P2 – Booster and Time Periods 4, 3 and 2 selected. 31 = B + P4 + P3 + P2 + P1 – Booster and Time Periods 4, 3, 2 and 1 selected.	**0...31**	**1**	**0**	
3627	**TIMER 2 SRC** • See parameter 3626.	**0...31**	**1**	**0**	
3628	**TIMER 3 SRC** See parameter 3626.	**0...31**	**1**	**0**	
3629	**TIMER 4 SRC** See parameter 3626.	**0...31**	**1**	**0**	

Group 37: User Load Curve

This new group defines supervision of user adjustable load curves (motor torque as a function of frequency). The curve is defined by five points. - The function replaces deleted underload parameters 3013…3015

Group 37: User Load Curve					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3701	**USER LOAD C MODE** Supervision mode for the user adjustable load curves. This functionality replaces the former underload supervision in *Group 30: FAULT FUNCTIONS*. 0 = NOT SEL – Supervision is not active. 1 = UNDERLOAD – Supervision for the torque dropping below the underload curve. 2 = OVERLOAD – Supervision for the torque exceeding the overload curve. 3 = BOTH – Supervision for the torque dropping below the underload curve or exceeding the overload curve.	**0...3**	**1**	**0**	
3702	**USER LOAD C FUNC** Action wanted during load supervision. 1 = FAULT – A fault is generated when the condition defined by 3701 USER LOAD C MODE has been valid longer than the time set by 3703 USER LOAD C TIME. 2 = ALARM – An alarm is generated when the condition defined by 3701 USER LOAD C MODE has been valid longer than half of the time defined by 3703 USER LOAD C TIME.	**1, 2**	**1**	**1**	
3703	**USER LOAD C TIME** Defines the time limit for generating a fault. Half of this time is used as the limit for generating an alarm.			**20 s**	
3704	**LOAD FREQ 1** Defines the frequency value of the first curve definition point. Must be smaller than 3707 LOAD FREQ 2.			**5 Hz**	
3705	**LOAD TORQ LOW 1** Defines the torque value of the first underload curve definition point. Must be smaller than 3706 LOAD TORQ HIGH 1.			**10%**	
3706	**LOAD TORQ HIGH 1** Defines the torque value of the first overload curve definition point.			**300%**	

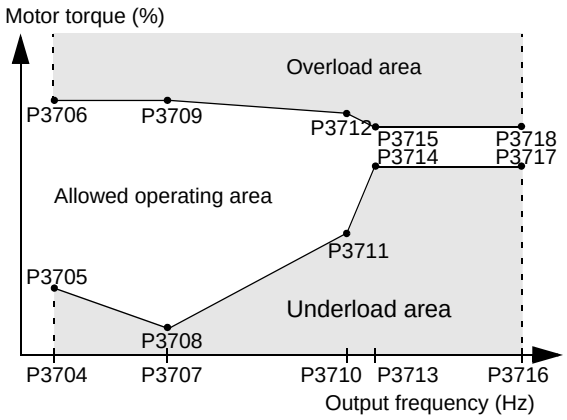

Group 37: User Load Curve					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
3707	**LOAD FREQ 2** Defines the frequency value of the second curve definition point. Must be smaller than 3710 LOAD FREQ 3.			**25%**	
3708	**LOAD TORQ LOW 2** Defines the torque value of the second underload curve definition point. Must be smaller than 3709 LOAD TORQ HIGH 2.			**15%**	
3709	**LOAD TORQ HIGH 2** Defines the torque value of the second overload curve definition point.			**300%**	
3710	**LOAD FREQ 3** Defines the frequency value of the third load curve definition point.			**43 Hz**	
3711	**LOAD TORQ LOW 3** Defines the torque value of the third underload curve definition point. Must be smaller than 3712 LOAD TORQ HIGH 3.			**25%**	
3712	**LOAD TORQ HIGH 3** Defines the torque value of the third overload curve definition point.			**300%**	
3713	**LOAD FREQ 4** Defines the frequency value of the fourth load curve definition point.			**50 Hz**	
3714	**LOAD TORQ LOW 4** Defines the torque value of the fourth underload curve definition point. Must be smaller than 3715 LOAD TORQ HIGH 4.			**30%**	
3715	**LOAD TORQ HIGH 4** Defines the torque overvalue of the fourth load curve definition point.			**300%**	
3716	**LOAD FREQ 5** Defines the frequency value of fifth load curve definition point.			**500 Hz**	
3717	**LOAD TORQ LOW 5** Defines the torque value of the fifth underload curve definition point. Must be smaller than 3718 LOAD TORQ HIGH 5.			**30%**	
3718	**LOAD TORQ HIGH 5** Defines the torque value of the fifth overload curve definition point.			**300%**	

Group 40: Process PID Set 1

This group defines a set of parameters used with the Process PID (PID1) controller.


Typically only parameters in this group are needed.

PID Controller – Basic Set-up

In PID control mode, the drive compares a reference signal (setpoint) to an actual signal (feedback), and automatically adjusts the speed of the drive to match the two signals. The difference between the two signals is the error value.

Typically PID control mode is used, when the speed of a fan or pump needs to be controlled based on pressure, flow or temperature. In most cases – when there is only 1 transducer signal wired to the ACS320 – only parameter group 40 is needed.

A Schematic of setpoint/feedback signal flow using parameter group 40 is presented.

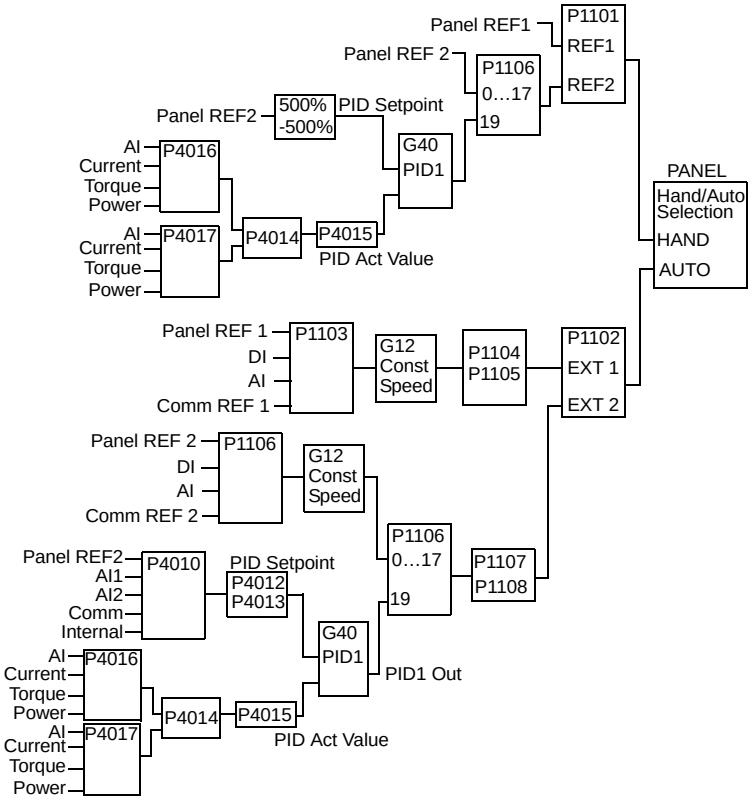

Note! In order to activate and use the PID controller Parameter 1106 must be set to value 19.

PID Controller – Advanced

ACS320 has 2 separate PID Controllers:

- Process PID (PID1) and
- External PID (PID2)

Process PID (PID1) has 2 separate sets of parameters:

- Process PID (PID1) SET1, defined in Group 40 and
- Process PID (PID1) SET2, defined in Group 41

You can select between the 2 different sets by using parameter 4027.

Typically two different PID-Controller sets are used when the load of the motor changes considerably from one situation to another.

You can use External PID (PID2), defined in Group 42, in 2 different ways:

- Instead of using additional PID-controller hardware, you can set outputs of the ACS320 to control a field instrument like a damper or a valve. In this case, set Parameter 4230 to value 0. (0 is the default value.)
- You can use External PID (PID2) as an additional PID-controller to Process PID (PID1) to trim or fine-tune the speed of the ACS320.

An example of the trimming is a return fan that follows the speed of the supply fan. As the return fan needs to run faster or slower then the supply fan in order to create under- or overpressure, correction factors to the supply fan speed are needed. Use External PID (PID2) in the return fan drive to provide these corrections.

Group 40: Process PID Set 1					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4001	**GAIN**	**0.1…100.0**	**0.1**	**2.5**	

Defines the PID Controller's gain.

- The setting range is 0.1… 100.
- At 0.1, the PID Controller output changes one-tenth as much as the error value.
- At 100, the PID Controller output changes one hundred times as much as the error value.

Use the proportional gain and integration time values to adjust the responsiveness of the system.


- A low value for proportional gain and a high value for integral time ensures stable operation, but provides sluggish response.

If the proportional gain value is too large or the integral time too short, the system can become unstable.


Procedure:


- Initially, set:
  - 4001 GAIN = 0.1.
  - 4002 INTEGRATION TIME = 20 seconds.
- Start the system and see if it reaches the set point quickly while maintaining stable operation. If not, increase GAIN (4001) until the actual signal (or drive speed) oscillates constantly. It may be necessary to start and stop the drive to induce this oscillation.
- Reduce GAIN (4001) until the oscillation stops.
- Set GAIN (4001) to 0.4 to 0.6 times the above value.
- Decrease the INTEGRATION TIME (4002) until the feedback signal (or drive speed) oscillates constantly. It may be necessary to start and stop the drive to induce this oscillation.
- Increase INTEGRATION TIME (4002) until the oscillation stops.
- Set INTEGRATION TIME (4002) to 1.15 to 1.5 times the above value.
- If the feedback signal contains high frequency noise, increase the value of Parameter 1303 FILTER AI1 or 1306 FILTER AI2 until the noise is filtered from the signal.

Group 40: Process PID Set 1					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4002	**INTEGRATION TIME** Defines the PID Controller's integration time. Integration time is, by definition, is the time required to increase the output by the error value: • Error value is constant and 100%. • Gain = 1. • Integration time of 1 second denotes that a 100% change is achieved in 1 second. 0.0 = NOT SEL – Disables integration (I-part of controller). 0.1…3600.0 = Integration time (seconds). See 4001 for adjustment procedure.	**0.0…3600.0 s**	**0.1 s**	**3.0 s**	
4003	**DERIVATION TIME** Defines the PID Controller's derivation time. • You can add the derivative of the error to the PID controller output. The derivative is the error value's rate of change. For example, if the process error value changes linearly, the derivative is a constant added to the PID controller output. • The error-derivative is filtered with a 1-pole filter. The time constant of the filter is defined by parameter 4004 PID DERIV FILTER. 0.0 = NOT SEL – Disables the error-derivative part of the PID controller output 0.1…10.0 = Derivation time (seconds)	**0.0…10.0 s**	**0.1 s**	**0.0 s**	
4004	**PID DERIV FILTER** Defines the filter time constant for the error-derivative part of the PID controller output. • Before being added to the PID controller output, the error-derivative is filtered with a 1-pole filter. • Increasing the filter time smooths the error-derivative, reducing noise. 0.0 = NOT SEL – Disables the error-derivative filter. 0.1…10.0 = Filter time constant (seconds).	**0.0…10.0 s**	**0.1 s**	**0.1 s**	

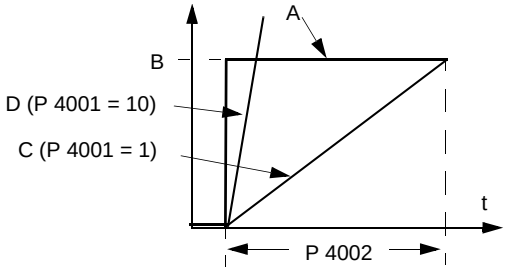

A = Error
B = Error value step
C = Controller output with Gain = 1
D = Controller output with Gain = 10

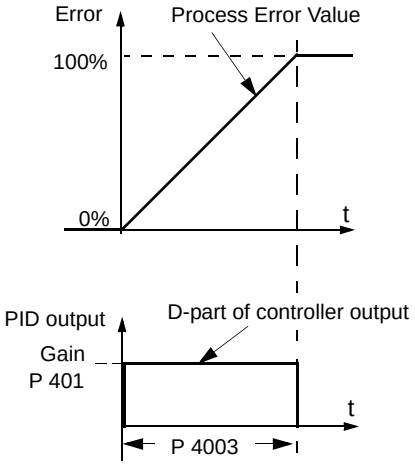
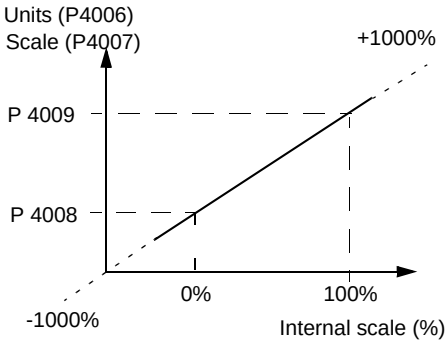
<table>
<tr><th colspan="6">Group 40: Process PID Set 1</th></tr>
<tr><th>Code</th><th>Description</th><th>Range</th><th>Resolution</th><th>Default</th><th>S</th></tr>
<tr><td>4005</td><td colspan="5">ERROR VALUE INV 0, 1 - 0
Selects either a normal or inverted relationship between the feedback signal and the drive speed.
0 = NO – Normal, a decrease in feedback signal increases drive speed. Error = Ref - Fbk
1 = YES – Inverted, a decrease in feedback signal decreases drive speed. Error = Fbk - Ref</td></tr>
<tr><td>4006</td><td colspan="5">UNITS 0…31 - 4
Selects the unit for the PID controller actual values. (PID1 parameters 0128, 0130, and 0132).
• See parameter 3405 for list of available units.</td></tr>
<tr><td>4007</td><td colspan="5">UNIT SCALE 0…4 1 1
Defines the decimal point location in PID controller actual values.
• Enter the decimal point location counting in from the right of the entry.
• See table for example using pi (3.14159).
<table><tr><th>4007 Value</th><th>Entry</th><th>Display</th></tr><tr><td>0</td><td>0003</td><td>3</td></tr><tr><td>1</td><td>0031</td><td>3.1</td></tr><tr><td>2</td><td>0314</td><td>3.14</td></tr><tr><td>3</td><td>3142</td><td>3.142</td></tr></table></td></tr>
<tr><td>4008</td><td colspan="5">0 % VALUE -1000.0…1000.0% 0.1% 0.0%
Defines (together with the next parameter) the scaling applied to the PID controller’s actual values (PID1 parameters 0128, 0130, and 0132).
• Units and scale are defined by parameters 4006 and 4007.
 
</td></tr>
<tr><td>4009</td><td colspan="5">100 % VALUE -1000.0…1000.0% 0.1% 100%
Defines (together with the previous parameter) the scaling applied to the PID controller’s actual values.
• Units and scale are defined by parameters 4006 and 4007.</td></tr>
</table>

Group 40: Process PID Set 1					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4010	**SET POINT SEL**	**0...19**	**1**	**0**	✓
	Defines the reference signal source for the PID controller. • Parameter has no significance when the PID regulator is by-passed (see 8121 REG BYPASS CTRL). 0 = KEYPAD – Control panel provides reference. 1 = AI1 – Analog input 1 provides reference. 2 = AI2 – Analog input 2 provides reference. 8 = COMM – Fieldbus provides reference. 9 = COMM + AI1 – Defines a fieldbus and analog input 1 (AI1) combination as the reference source. See Analog Input Reference Correction below. 10 = COMM * AI1 – Defines a fieldbus and analog input 1 (AI1) combination as the reference source. See Analog Input Reference Correction below. 11 = DI3U, 4D(RNC) – Digital inputs, acting as a motor potentiometer control, provide reference. • DI3 increases the speed (the U stands for “up”) • DI4 decreases the reference (the D stands for “down”). • Parameter 2205 ACCELER TIME 2 controls the reference signal’s rate of change. • R = Stop command resets the reference to zero. • NC = Reference value is not copied. 12 = DI3U, 4D(NC) – Same as DI3U, 4D(RNC) above, except: • Stop command does not reset reference to zero. At restart the motor ramps up, at the selected acceleration rate, to the stored reference. 13 = DI5U, 6D(NC) – Same as DI3U, 4D(NC) above, except: • Uses digital inputs DI5 and DI6. 14 = AI1 + AI2 – Defines an analog input 1 (AI1) and analog input 2 (AI2) combination as the reference source. See Analog Input Reference Correction below. 15 = AI1 * AI2 – Defines an analog input 1 (AI1) and analog input 2 (AI2) combination as the reference source. See Analog Input Reference Correction below. 16 = AI1 - AI2 – Defines an analog input 1 (AI1) and analog input 2 (AI2) combination as the reference source. See Analog Input Reference Correction below. 17 = AI1/AI2 – Defines an analog input 1 (AI1) and analog input 2 (AI2) combination as the reference source. See Analog Input Reference Correction below. 19 = INTERNAL – A constant value set using parameter 4011 provides reference.				

Group 40: Process PID Set 1					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
	Analog Input Reference Correction Parameter values 9, 10, and 14…17 use the formula in the following table.				

Value Setting	AI reference is calculated as following:
C + B	C value + (B value - 50% of reference value)
C * B	C value * (B value / 50% of reference value)
C - B	(C value + 50% of reference value) - B value
C / B	(C value * 50% of reference value) / B value

Where:


- C = Main Reference value (= COMM for values 9, 10 and = AI1 for values 14…17).
- B = Correcting reference (= AI1 for values 9, 10 and = AI2 for values 14…17).

Example:

The figure shows the reference source curves for value settings 9, 10, and 14…17, where:


- C = 25%.
- P 4012 SETPOINT MIN = 0.
- P 4013 SETPOINT MAX = 0.
- B varies along the horizontal axis.


20 = PID2OUT – Defines PID controller 2 output (parameter 0127 PID 2 OUTPUT) as the reference source.

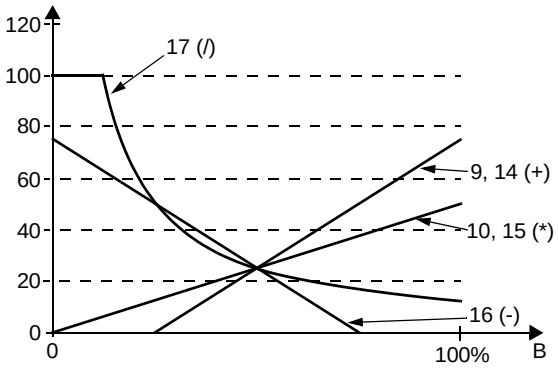


4011	**INTERNAL SETPNT**	**-1000.0…1000.0%**	**0.1%**	**40.0%**	
	Sets a constant value used for the process reference. • Units and scale are defined by parameters 4006 and 4007.				
4012	**SETPOINT MIN**	**-500.0%…500.0%**	**0.1%**	**0.0%**	
	Sets the minimum value for the reference signal source. See parameter 4010.				
4013	**SETPOINT MAX**	**-500.0%…500.0%**	**0.1%**	**100.0%**	
	Sets the maximum value for the reference signal source. See parameter 4010.				

Group 40: Process PID Set 1					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4014	**FBK SEL**	**1…10**	**1**	**1**	
	Defines the PID controller feedback (actual signal). • You can define a combination of two actual values (ACT1 and ACT2) as the feedback signal. • Use parameter 4016 to define the source for actual value 1 (ACT1). • Use parameter 4017 to define the source for actual value 2 (ACT2). 1 = ACT1 – Actual value 1 (ACT1) provides the feedback signal. 2 = ACT1-ACT2 – ACT1 minus ACT2 provides the feedback signal. 3 = ACT1+ACT2 – ACT1 plus ACT2 provides the feedback signal. 4 = ACT1*ACT2 – ACT1 times ACT2 provides the feedback signal. 5 = ACT1/ACT2 – ACT1 divided by ACT2 provides the feedback signal. 6 = MIN (A1, A2) – The smaller of ACT1 or ACT2 provides the feedback signal. 7 = MAX (A1, A2) – The greater of ACT1 or ACT2 provides the feedback signal. 8 = SQRT (A1-A2) – Square root of the value for ACT1 minus ACT2 provides the feedback signal. 9 = SQA1 + SQA2 – Square root of ACT1 plus the square root of ACT2 provides the feedback signal. 10 = SQRT (ACT1) – Square root of ACT1 provides the feedback signal. 11 = COMM FBK 1 – Signal 0158 PID COMM VALUE 1 provides the feedback signal. 12 = COMM FBK 2 – Signal 0159 PID COMM VALUE 2 provides the feedback signal. 13 = AVE(ACT1,2) – The average of ACT1 and ACT2 provides the feedback signal.			
4015	**FBK MULTIPLIER**	**-32.768…32.767**	**0.001**	**0**	
	Defines an extra multiplier for the PID FBK value defined by parameter 4014. • Used mainly in applications where the flow is calculated from the pressure difference. 0 = NOT SELECTED. -32.768…32.767 = Multiplier applied to the signal defined by parameter 4014 FBK SEL. Example: $FBK = Multiplier \times \sqrt{A1 - A2}$				
4016	**ACT1 INPUT**	**1…5**	**1**	**2**	✓
	Defines the source for actual value 1 (ACT1). 1 = AI 1 – Uses analog input 1 for ACT1. 2 = AI 2 – Uses analog input 2 for ACT1. 3 = Current – Uses current for ACT1, scaled so: • Min ACT1 = 0 current • Max ACT1 = 2 x nominal current 4 = Torque – Uses torque for ACT1, scaled so: • Min ACT1 = -2 x nominal torque • Max ACT1 = 2 x nominal torque 5 = Power – Uses power for ACT1, scaled so: • Min ACT1 = -2 x nominal power • Max ACT1 = 2 x nominal power 6 = COMM ACT 1 – Uses value of signal 0158 PID COMM VALUE 1 for ACT1. 7 = COMM ACT 2 – Uses value of signal 0159 PID COMM VALUE 2 for ACT1.				

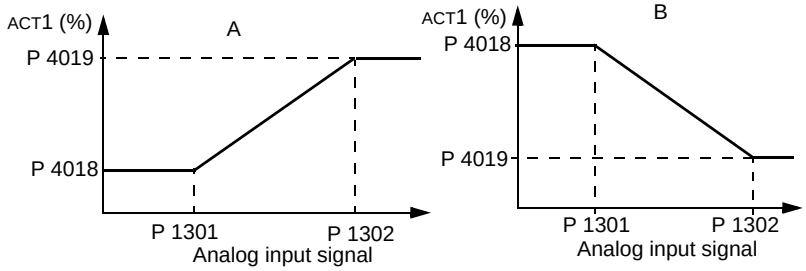
Group 40: Process PID Set 1					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4017	**ACT2 INPUT** Defines the source for actual value 2 (ACT2). 1 = AI 1 – Uses analog input 1 for ACT2. 2 = AI 2 – Uses analog input 2 for ACT2. 3 = Current – Uses current for ACT2, scaled so: • Min ACT2 = 0 current • Max ACT2 = 2 x nominal current 4 = Torque – Uses torque for ACT2, scaled so: • Min ACT2 = -2 x nominal torque • Max ACT2 = 2 x nominal torque 5 = Power – Uses power for ACT2, scaled so: • Min ACT2 = -2 x nominal power • Max ACT2 = 2 x nominal power 6 = COMM ACT 1 – Uses value of signal 0158 PID COMM VALUE 1 for ACT2. 7 = COMM ACT 2 – Uses value of signal 0159 PID COMM VALUE 2 for ACT2.	**1…5**	**1**	**2**	✓
4018	**ACT1 MINIMUM** • Sets the minimum value for ACT1. • Used with analog input min/max settings (e.g. 1301 MINIMUM AI1, 1302 MAXIMUM AI1). • Scales analog inputs used as actual values. • See figure: A= Normal; B = Inversion (ACT1 MINIMUM > ACT1 MAXIMUM) 	**-1000…1000%**	**1%**	**0%**	
4019	**ACT1 MAXIMUM** Sets the maximum value for ACT1. • See 4018 ACT1 MINIMUM.	**-1000…1000%**	**1%**	**100%**	
4020	**ACT2 MINIMUM** Sets the minimum value for ACT2. • See 4018 ACT1 MINIMUM.	**-1000…1000%**	**1%**	**0%**	
4021	**ACT2 MAXIMUM** Sets the maximum value for ACT2. • See 4018 ACT1 MINIMUM.	**-1000…1000%**	**1%**	**100%**	

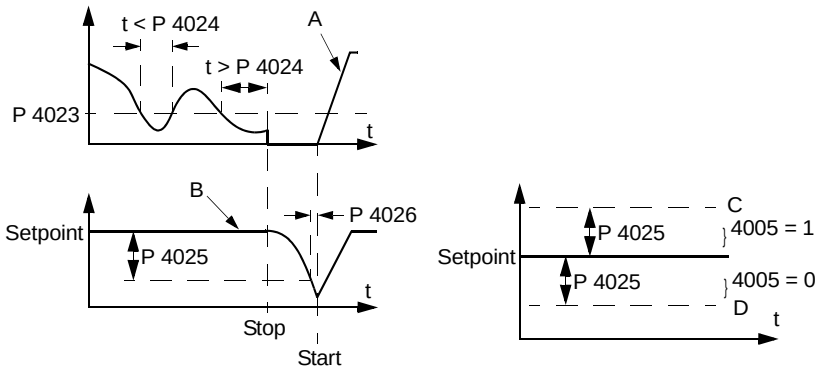Group 40: Process PID Set 1					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4022	**SLEEP SELECTION**	**-6…7**	**-**	**0**	
	Defines the control for the PID sleep function. 0 = NOT SEL– Disables the PID sleep control function. 1 = DI1 – Defines digital input DI1 as the control for the PID sleep function. • Activating the digital input activates the sleep function. • De-activating the digital input restores PID control. 2…6 = DI2…DI6 – Defines digital input DI2…DI6 as the control for the PID sleep function. • See DI1 above. 7 = INTERNAL – Defines the output rpm/frequency, process reference, and process actual value as the control for the PID sleep function. Refer to parameters 4025 WAKE-UP DEV and 4023 PID SLEEP LEVEL. -1 = DI1(INV) – Defines an inverted digital input DI1 as the control for the PID sleep function. • De-activating the digital input activates the sleep function. • Activating the digital input restores PID control. -2…-6 = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as the control for the PID sleep function. • See DI1(INV) above.				
4023	**PID SLEEP LEVEL**	**0.0…120.0 Hz / 0…7200 rpm**	**0.1 Hz / 1 rpm**	**0.0 Hz**	
	Sets the motor speed / frequency that enables the PID sleep function – a motor speed / frequency below this level, for at least the time period 4024 PID SLEEP DELAY enables the PID sleep function (stopping the drive). • Requires 4022 = 7 INTERNAL. • See figure: A = PID output level; B = PID process feedback. 				
4024	**PID SLEEP DELAY**	**0.0…3600.0 s**	**0.1 s**	**60.0 s**	
	Sets the time delay for the PID sleep function – a motor speed / frequency below 4023 PID SLEEP LEVEL for at least this time period enables the PID sleep function (stopping the drive). • See 4023 PID SLEEP LEVEL above.				

Group 40: Process PID Set 1					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4025	**WAKE-UP DEVIATION**	**0.0…1000%**	**0.1**	**0.0**	
	Defines the wake-up deviation – a deviation from the setpoint greater than this value, for at least the time period 4026 WAKE-UP DELAY, re-starts the PID controller. • Parameters 4006 and 4007 define the units and scale. • Parameter 4005 = 0, Wake-up level = Setpoint – Wake-up deviation. • Parameter 4005 = 1, Wake-up level = Setpoint + Wake-up deviation. • Wake-up level can be above or below setpoint. See figures: • C = Wake-up level when parameter 4005 = 1 • D = Wake-up level when parameter 4005 = 0 • E = Feedback is above wake-up level and lasts longer than 4026 WAKE-UP DELAY – PID function wakes up. • F = Feedback is below wake-up level and lasts longer than 4026 WAKE-UP DELAY – PID function wakes up.				
4026	**WAKE-UP DELAY**	**0.00…60.00 s**	**0.01 s**	**0.50 s**	
	Defines the wake-up delay – a deviation from the setpoint greater than 4025 WAKE-UP DEVIATION, for at least this time period, re-starts the PID controller. • See 4023 PID SLEEP LEVEL above.				

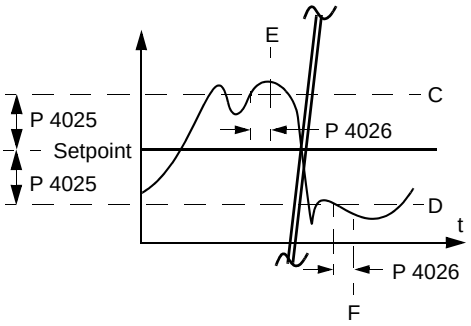

Group 40: Process PID Set 1					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4027	**PID 1 PARAM SET** Defines how selections are made between PID Set 1 and PID Set 2. PID parameter set selection. When set 1 is selected, parameters 4001…4026 are used. When set 2 is selected, parameters 4101…4126 are used. 0 = SET 1 – PID Set 1 (parameters 4001…4026) is active. 1 = DI1 – Defines digital input DI1 as the control for PID Set selection. • Activating the digital input selects PID Set 2. • De-activating the digital input selects PID Set 1. 2…6 = DI2…DI6 – Defines digital input DI2…DI6 as the control for PID Set selection. • See DI1 above. 7 = SET 2 – PID Set 2 (parameters 4101…4126) is active. 8…11 = TIMER 1…4 – Defines the Timer as the control for the PID Set selection (Timer de-activated = PID Set 1; Timer activated = PID Set 2) See parameter Group 36: Timer Functions. 12 = 2-ZONE MIN – The drive calculates the difference between setpoint 1 and feedback 1 as well as setpoint 2 and feedback 2. The drive will control the zone (and select the set) which has a larger difference. • A positive difference (a setpoint higher than the feedback) is always larger than a negative difference. This keeps feedback values at or above the setpoint. • Controller does not react to the situation of feedback above setpoint if another zone's feedback is closer to its setpoint. 13 = 2-ZONE MAX – The drive calculates the difference between setpoint 1 and feedback 1 as well as setpoint 2 and feedback 2. The drive will control the zone (and select the set) which has a smaller difference. • A negative difference (a setpoint lower than the feedback) is always smaller than a positive difference. This keeps feedback values at or below the setpoint. • Controller does not react to the situation of feedback below setpoint if another zone's feedback is closer to its setpoint. 14 = 2-ZONE AVE – The drive calculates the difference between setpoint 1 and feedback 1 as well as setpoint 2 and feedback 2. In addition, it calculates the average of the deviations, and uses it to control zone 1. Therefore one feedback is kept above its setpoint and another is kept as much below its setpoint. -1 = DI1(INV) – Defines an inverted digital input DI1 as the control for PID Set selection. • Activating the digital input selects PID Set 1. • De-activating the digital input selects PID Set 2. -2…-6 = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as the control for PID Set selection. • See DI1(INV) above.	**-6…11**	**1**	**0**	
4028	**PID OUT MIN** Defines the minimum value of PID output.	**-500.0…500.0%**	**1 = 0.1%**	**-100.0%**	
4029	**PID OUT MAX** Defines the maximum value of PID output.	**-500.0…500.0%**	**1 = 0.1%**	**100.0%**	

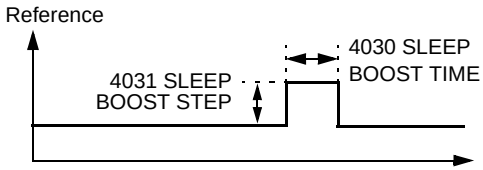Group 40: Process PID Set 1					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4030	**SLEEP BOOST TIME**	**0.0…3600.0 s**	**1 = 0.1 s**	**0.0 s**	
	Defines the boost time for the sleep boost step. See parameter *4031* SLEEP BOOST STEP.  				
4031	**SLEEP BOOST STEP**	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
	When the drive is entering sleep mode, the reference (PID setpoint) is increased by this percentage for the time defined by parameter *4030* SLEEP BOOST TIME.				
4032	**PID REF ACC TIME**	**0.0…1800.0 s**	**1 = 0.1 s**	**0.0 s**	
	Defines the time for the reference (PID setpoint) increase from 0 to 100%. **Note:** Parameters 4032…4036 are active even if the process PID set 2 (*Group 41: Process PID Set 2*) is used. Acceleration time				
4033	**PID REF DEC TIME**	**0.0…1800.0 s**	**1 = 0.1 s**	**0.0 s**	
	Defines the time for the reference (PID setpoint) decrease from 100 to 0%.				

Group 40: Process PID Set 1					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4034	**PID REF FREEZE** Freezes the input (reference, PID setpoint) of the process PID controller			**NOT SEL**	
	NOT SEL Not selected			**0**	
	DI1 Reference is frozen on the rising edge of digital input DI1.			**1**	
	DI2 See selection DI1.			**2**	
	DI3 See selection DI1.			**3**	
	DI4 See selection DI1.			**4**	
	DI5 See selection DI1.			**5**	
	DI1(INV) Reference is frozen on the falling edge of digital input DI1.			**-1**	
	DI2(INV) See selection DI1(INV).			**-2**	
	DI3(INV) See selection DI1(INV).			**-3**	
	DI4(INV) See selection DI1(INV).			**-4**	
	DI5(INV) See selection DI1(INV).			**-5**	

Group 40: Process PID Set 1					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4035	**PID OUT FREEZE** Freezes the output of the process PID controller.			**NOT SEL**	
	NOT SEL Not selected			**0**	
	DI1 Output is frozen on the rising edge of digital input DI1.			**1**	
	DI2 See selection DI1.			**2**	
	DI3 See selection DI1.			**3**	
	DI4 See selection DI1.			**4**	
	DI5 See selection DI1.			**5**	
	DI1(INV) Output is frozen on the falling edge of digital input DI1.			**-1**	
	DI2(INV) See selection DI1(INV).			**-2**	
	DI3(INV) See selection DI1(INV).			**-3**	
	DI4(INV) See selection DI1(INV).			**-4**	
	DI5(INV) See selection DI1(INV).			**-5**	
4036	**INTERNAL SETPNT2** Selects a constant value as the process PID controller reference, which becomes active when parameter *4010* SET POINT SEL value is set to INTERNAL and setpoint 2 is selected with the input defined by parameter *4039* INT SETPNT SEL. Value in percent.	**-100.0…100.0%**	**1 = 0.1%**	**40.0%**	
4037	**INTERNAL SETPNT3** Selects a constant value as the process PID controller reference, which becomes active when parameter *4010* SET POINT SEL value is set to INTERNAL and setpoint 3 is selected with the input defined by parameter *4039* INT SETPNT SEL. Value in percent.	**-100.0…100.0%**	**1 = 0.1%**	**40.0%**	
4038	**INTERNAL SETPNT4** Selects a constant value as the process PID controller reference, which becomes active when parameter *4010* SET POINT SEL value is set to INTERNAL and setpoint 4 is selected with the input defined by parameter *4039* INT SETPNT SEL. Value in percent.	**-100.0…100.0%**	**1 = 0.1%**	**40.0%**	

Group 40: Process PID Set 1					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4039	**INT SETPNT SEL** Selects the source for the selection of the internal setpoint used as the process PID controller reference when parameter *4010* SET POINT SEL value is set to INTERNAL. **Example:** *4010* SET POINT SEL = INTERNAL *4039* INT SETPNT SEL = DI2 Digital input DI2 = 1 -> *4012* INTERNAL SETPNT2 is used as the reference.			**NOT SEL**	
	NOT SEL *4011* INTERNAL SETPNT is used as the reference.			**0**	
	DI1 0 = *4011* INTERNAL SETPNT is used. 1 = *4036* INTERNAL SETPNT2 is used.			**1**	
	DI2 See selection DI1.			**2**	
	DI3 See selection DI1.			**3**	
	DI4 See selection DI1.			**4**	
	DI5 See selection DI1.			**5**	
	DI1,2 Selects with digital inputs DI1 and DI2 which internal setpoint is used as the reference. 1 = DI active, 0 = DI inactive.			**7**	
	DI2,3 See selection DI1,2.			**8**	
	DI3,4 See selection DI1,2.			**9**	
	DI4,5 See selection DI1,2.			**10**	
	TIMED FUNC 1 0 = *4011* INTERNAL SETPNT is used. 1 = *4036* INTERNAL SETPNT2 is used.			**15**	
	TIMED FUNC 2 See selection TIMED FUNC 1.			**16**	
	TIMED FUNC 3 See selection TIMED FUNC 1.			**17**	

DI1	DI2	Internal setpoint selected
0	0	*4011* INTERNAL SETPNT
1	0	*4036* INTERNAL SETPNT2
0	1	*4037* INTERNAL SETPNT3
1	1	*4038* INTERNAL SETPNT4

Group 40: Process PID Set 1					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
	TIMED FUNC 4 See selection TIMED FUNC 1.			**18**	
	TIMED FUN1&2 Selects with TIMED FUNC 1 and TIMED FUNC 2 which internal setpoint is used as the reference. 1 = timed function active, 0 = timed function inactive.			**19**	

TIMED FUNC 1	TIMED FUNC 2	Internal setpoint selected
0	0	*4011* INTERNAL SETPNT
1	0	*4036* INTERNAL SETPNT2
0	1	*4037* INTERNAL SETPNT3
1	1	*4038* INTERNAL SETPNT4

Group 41: Process PID Set 2

This group defines second set of parameters used with the Process PID (PID1) controller.

The operation of parameters 4101…4139 is analogous with Process PID set 1 (PID1) parameters 4001…4039.

PID parameter set 2 can be selected by parameter 4027 PID 1 PARAM SET.

Group 41: Process PID Set 2					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4101 ... 4139	See 4001 …4139				

Group 42: External PID

This group defines the parameters used for the second PID controller (PID2) of ACS320.

The operation of parameters 4201…4221 is analogous with Process PID set 1 (PID1) parameters 4001…4021.


Group 42: External PID					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4201 ... 4221	See 4001 …4021				

Group 42: External PID					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4228	**ACTIVATE**	**-6…12**	**-**	**1**	
	Defines the source for enabling the external PID function. • Requires 4230 TRIM MODE = 0 NOT SEL. 0 = NOT SEL – Disables external PID control. 1 = DI1 – Defines digital input DI1 as the control for enabling external PID control. • Activating the digital input enables external PID control. • De-activating the digital input disables external PID control. 2…6 = DI2…DI6 – Defines digital input DI2…DI6 as the control for enabling external PID control. • See DI1 above. 7 = DRIVE RUN – Defines the start command as the control for enabling external PID control. • Activating the start command (drive is running) enables external PID control. 8 = ON – Defines the power-on as the control for enabling external PID control. • Activating power to the drive enables external PID control. 9…12 = TIMER 1…4 – Defines the Timer as the control for enabling external PID control (Timer active enables external PID control). • See parameter Group 36: Timer Functions. -1 = DI1(INV) – Defines an inverted digital input DI1 as the control for enabling external PID control. • Activating the digital input disables external PID control. • De-activating the digital input enables external PID control. -2…-6 = DI2(INV)…DI6(INV) – Defines an inverted digital input DI2…DI6 as the control for enabling external PID control. • See DI1(INV) above.				
4229	**OFFSET**	**0.0…100.0%**	**0.1%**	**0.0%**	
	Defines the offset for the PID output. • When PID is activated, output starts from this value. • When PID is deactivated, output resets to this value. • Parameter is not active when 4230 TRIM MODE not = 0 (trim mode is not active).				
4230	**TRIM MODE**	**0…2**	**1**	**0**	
	Selects the type of trim, if any. Using the trim it is possible to combine a corrective factor to the drive reference. 0 = NOT SEL – Disables the trim function. 1 = PROPORTIONAL – Adds a trim factor that is proportional to the rpm/Hz reference. 2 = DIRECT – Adds a trim factor based on the control loop's maximum limit.				
4231	**TRIM SCALE**	**-100.0%…100.0%**	**0.1%**	**0.0%**	
	Defines the multiplier (as a percent, plus or minus) used in the trim mode.				

Group 42: External PID					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4232	**CORRECTION SRC**	**1…2**	**1**	**1**	


Defines the trimming reference for the correction source.
1 = PID2 REF – Uses appropriate REF MAX (SWITCH A OR B):
- 1105 REF 1 MAX when REF1 is active (A).
- 1108 REF 2 MAX when REF2 is active (B).

2 = PID2 OUTPUT – Uses the absolute maximum speed or frequency (Switch C):
- 2002 MAXIMUM SPEED if 9904 MOTOR CONTROL MODE = 1 SPEED or 2 TORQUE.
- 2008 MAXIMUM FREQUENCY IF 9904 MOTOR CONTROL MODE = 3 SCALAR.

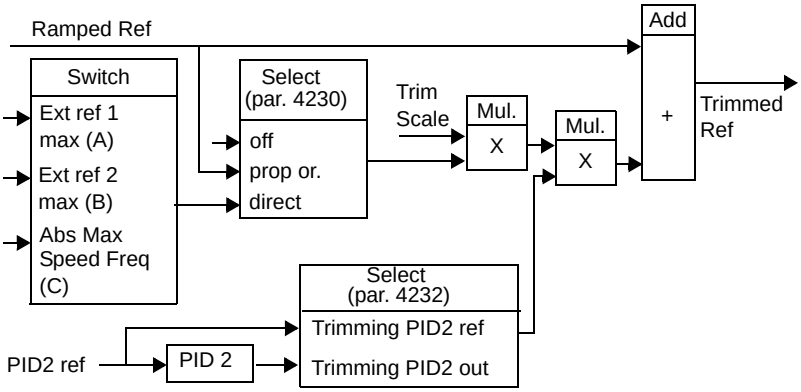


Group 44: Pump Protection

This group defines the parameters used for the set-up of pump protection.

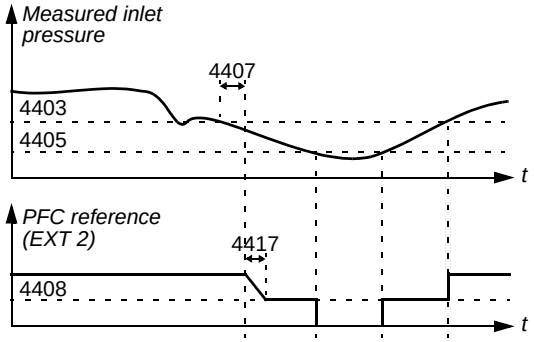Group 44: Pump Protection					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4401	**INLET PROT CTRL** Enables, and selects the mode of, the primary supervision of pump/fan inlet pressure. **Note:** Inlet protection is active only when the active reference is PID.			**NOT SEL**	
	NOT SEL Primary inlet pressure supervision not used			**0**	
	ALARM Detection of low inlet pressure generates an alarm on the control panel display.			**1**	
	PROTECT Detection of low inlet pressure generates an alarm on the control panel display. The output of the PI controller is ramped down (according to parameter *4417* PID OUT DEC TIME) to the forced reference (set by parameter *4008* INLET FORCED REF). The drive will revert to the original reference if the pressure subsequently exceeds the supervision level. The following diagram describes the inlet pressure supervision function.  			**2**	
	FAULT Detection of low inlet pressure trips the drive on a fault.			**3**	
4402	**AI MEASURE INLET** Selects the analog input for pump/fan inlet pressure supervision.			**NOT SEL**	
	NOT SEL No analog input selected			**0**	
	AI1 Pump/fan inlet pressure monitored through analog input AI1			**1**	
	AI2 See selection AI1.			**2**	

Group 44: Pump Protection					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4403	**AI IN LOW LEVEL**	**0.00…100.00%**	**1 = 0.01%**	**0.00%**	
	Sets the supervision limit for the primary inlet pressure measurement. If the value of the selected input falls below this limit, the action defined by parameter *4401* INLET PROT CTRL is taken after the delay set by parameter *4407* INLET CTRL DLY expires. The range corresponds to 0…10 V or 0…20 mA on the analog input. With a bipolar input, the absolute input value is considered.				
4404	**VERY LOW CTRL**			**NOT SEL**	
	Enables, and selects the mode of, the secondary inlet pressure supervision function. The function uses the analog input selected by parameter *4402* AI MEASURE INLET.				
	NOT SEL			**0**	
	Secondary inlet pressure supervision not used				
	STOP			**1**	
	Detection of very low inlet pressure stops the drive. The drive will start again if the pressure exceeds the supervision level.				
	FAULT			**2**	
	Detection of very low inlet pressure trips the drive on a fault.				
4405	**AI IN VERY LOW**	**0.00…100.00%**	**1 = 0.01%**	**0.00%**	
	Supervision level for the secondary inlet pressure monitoring function. See parameter *4401* INLET PROT CTRL. Supervision level.				
4406	**DI STATUS INLET**			**NOT SEL**	
	Selects the digital input for connection of a pressure switch at the pump/fan inlet. The “normal” state is 1 (active). If the selected input switches to 0 (inactive), the action defined by parameter *4401* INLET PROT CTRL is executed after the delay set by parameter *4407* INLET CTRL DLY expires.				
	NOT SEL			**0**	
	No digital input selected				
	DI1			**1**	
	Pump/fan inlet pressure monitored through digital input DI1				
	DI2			**2**	
	See selection DI1.				
	DI3			**3**	
	See selection DI1.				
	DI4			**4**	
	See selection DI1.				
	DI5			**5**	
	See selection DI1.				
4407	**INLET CTRL DLY**	**0.1…1800.0 s**	**1 = 0.1 s**	**60.0 s**	
	Sets the delay after which the action defined by parameter *4401* INLET PROT CTRL is taken on detection of low inlet pressure.				
4408	**INLET FORCED REF**	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
	This reference is used after detection of low inlet pressure. See parameter *4401* INLET PROT CTRL. **WARNING! Make sure that it is safe to continue operation using this reference.**				

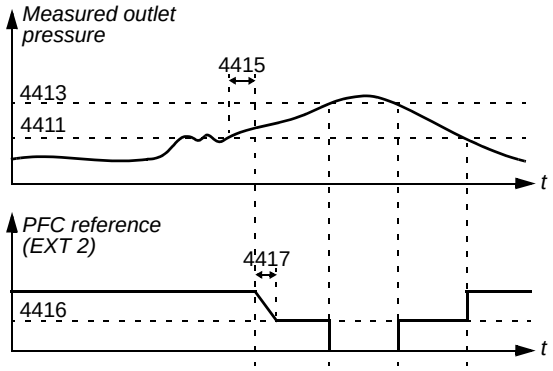Group 44: Pump Protection					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4409	**OUTLET PROT CTRL**			**NOT SEL**	
	Enables, and selects the mode of, the primary supervision of pump/fan outlet pressure. **Note:** Outlet protection is active only when the active reference is PID.				
	NOT SEL			**0**	
	Primary outlet pressure supervision not used				
	ALARM			**1**	
	Detection of high outlet pressure produces an alarm on the control panel display.				
	PROTECT			**2**	
	Detection of high outlet pressure produces an alarm on the control panel display. The output of the PI controller is ramped down (according to parameter *4417* PID OUT DEC TIME) to the forced reference (set by parameter *4416* OUTLET FORCED REF). The drive will revert to the original reference if the pressure subsequently falls below the supervision level. The following diagram describes the outlet pressure supervision function.  				
	FAULT			**3**	
	Detection of high outlet pressure trips the drive on a fault.				
4410	**AI MEAS OUTLET**			**NOT SEL**	
	Selects the analog input for pump/fan outlet pressure supervision.				
	NOT SEL			**0**	
	No analog input selected				
	AI1			**1**	
	Pump/fan outlet pressure monitored through analog input AI1				
	AI2			**2**	
	See selection AI1.				
4411	**AI OUT HI LEVEL**	**0.00…100.00%**	**1 = 0.01%**	**100.00%**	
	Sets the supervision limit for the primary outlet pressure measurement. If the value of the selected analog input exceeds this limit, the action defined by parameter *4409* OUTLET PROT CTRL is taken after a delay set with parameter *4415* OUTLET CTRL DLY expires. Supervision level				

Group 44: Pump Protection					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4412	**VERY HIGH CTRL**			**NOT SEL**	
	Enables, and selects the mode of, the secondary outlet pressure supervision function. The function uses the analog input selected by parameter *4410* AI MEAS OUTLET.				
	NOT SEL			**0**	
	Secondary outlet pressure monitoring not used				
	STOP			**1**	
	Detection of very high outlet pressure stops the drive. The drive will start again if the pressure falls below the supervision level.				
	FAULT			**2**	
	Detection of very high outlet pressure trips the drive on a fault.				
4413	**AI OUT VERY HIGH**	**0.00…100.00%**	**1 = 0.01%**	**100.00%**	
	Supervision level for secondary outlet pressure monitoring function. See parameter *4409* OUTLET PROT CTRL. Supervision level				
4414	**DI STATUS OUTLET**			**NOT SEL**	
	Selects the digital input for connection of a pressure switch at the pump/fan outlet. The “normal” state is 1 (active). If the selected input switches to 0 (inactive), the action defined by parameter *4409* OUTLET PROT CTRL is taken after a delay set by parameter *4415* OUTLET CTRL DLY expires.				
	NOT SEL			**0**	
	No digital input selected				
	DI1			**1**	
	Pump/fan outlet pressure monitored through digital input DI1				
	DI2			**2**	
	See selection DI1.				
	DI3			**3**	
	See selection DI1.				
	DI4			**4**	
	See selection DI1.				
	DI5			**5**	
	See selection DI1.				
4415	**OUTLET CTRL DLY**	**0.1…1800.0 s**	**1 = 0.1 s**	**60.0 s**	
	Sets the delay after which the action defined by parameter *4409* OUTLET PROT CTRL is taken on detection of high outlet pressure.				
4416	**OUTLET FORCED REF**	**0.00…100.00%**	**1 = 0.01%**	**0.0%**	
	This reference is used after detection of high outlet pressure. See parameter *4409* OUTLET PROT CTRL. **WARNING! Make sure that it is safe to continue operation using this reference.**				
4417	**PID OUT DEC TIME**	**0.0…3800.0 s**	**1 = 0.1 s**	**60.0 s**	
	PI controller ramp-down time. See selection PROTECT for parameters *4401* INLET PROT CTRL and *4409* OUTLET PROT CTRL.				

Group 44: Pump Protection					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4418	**APPL PROFILE CTL**			**NOT SEL**	
	Parameters *4418* APPL PROFILE CTL to *4420* PROF LIMIT ON DLY provide the Application Profile protection feature, based on long-term monitoring of an internal status signal. If the selected signal exceeds (and remains above) the supervision limit for a longer time than the set delay (parameter *4420* PROF LIMIT ON DLY), the internal status signal “PROFILE HIGH” is set to 1. The signal can be directed to a relay output (see parameter *Group 14: Relay Outputs*).				
	NOT SEL			**0**	
	Not selected				
	CONTROL DEV1			**1**	
	Signal *0126* PID 1 OUTPUT is monitored and compared to parameter *4419* PROFILE OUTP LIM. Monitoring the deviation between the reference and the actual value gives an indication of the general condition of the pump, piping and valves.				
	CONTROL DEV2			**2**	
	Signal *0127* PID 2 OUTPUT is monitored and compared to parameter *4419* PROFILE OUTP LIM. Monitoring the deviation between the reference and the actual value gives an indication of the general condition of the pump, piping and valves.				
	APPL OUTPUT			**3**	
	Signal *0116* APPL BLK OUTPUT is monitored and compared to parameter *4419* PROFILE OUTP LIM. The signal constantly remaining at 100% may indicate a leak in the output piping.				
4419	**PROFILE OUTP LIM**	**-500.0…500.0%**	**1 = 0.1%**	**100.0%**	
	Supervision limit for the Application Profile protection.				
4420	**PROF LIMIT ON DLY**	**0.00…100.00 h**	**1 = 0.01 h**	**0.00 h**	
	Delay time for the Application Profile protection.				

Group 44: Pump Protection					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4421	**PIPEFILL ENABLE** Enables the Precharge function, which calculates reference steps.			**NOT SEL**	
	NOT SEL Not enabled			**0**	
	DI1 When DI1 is active (1), Precharge function is active when the drive is started. If DI1 becomes inactive (0) before Precharge is finished, normal PID control is enabled.			**1**	
	DI2 See selection DI1.			**2**	
	DI3 See selection DI1.			**3**	
	DI4 See selection DI1.			**4**	
	DI5 See selection DI1.			**5**	
	ACTIVE Precharge is active at every start-up.			**7**	
	DI1(INV) When DI1 is inactive (0), Precharge function is active when the drive is started. If DI1 becomes active (1) before Precharge is finished, normal PID control is enabled.			**-1**	
	DI2(INV) See selection DI1(INV).			**-2**	
	DI3(INV) See selection DI1(INV).			**-3**	
	DI4(INV) See selection DI1(INV).			**-4**	
	DI5(INV) See selection DI1(INV).			**-5**	
4422	**PIPEFILL STEP** Defines the speed step used in Precharge. The PID reference ramp time is specified by parameter *4032* PID REF ACC TIME. The speed step is added to the reference after the time defined by parameter *4424* ACT CHANGE DLY has elapsed and the change in feedback defined by parameter *4423* REQ ACT CHANGE has not been reached. Speed step in percent of the maximum speed output	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
4423	**REQ ACT CHANGE** Defines the requested change in process feedback during the time that is set by parameter *4424* ACT CHANGE DLY. If the requested change in the feedback is not reached, *4422* PIPEFILL STEP is added to the speed reference. Value in percent of the maximum speed.	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	

Group 44: Pump Protection					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4424	**ACT CHANGE DELAY** Defines the time that is waited after the feedback value is compared with the old feedback value. If parameter *4423* REQ ACT CHANGE is measured in the feedback value, the speed reference stays as it is. If REQ ACT CHANGE is not seen in the feedback value, the value of parameter *4422* PIPEFILL STEP is added to the speed reference.	**0.1…6000.0 s**	**1 = 0.1 s**	**0.0 s**	
4425	**PID ENABLE DEV** Defines the level when Precharge is disabled and PID is enabled. When the level is reached, PID is enabled. PID is executed as parameterized. If reference ramp times are set, they are used. Value in percent of the maximum feedback.	**0.0…100.0%**	**1 = 0.1%**	**0.1%**	
4426	**PIPEFILL TIMEOUT** Defines the maximum time Precharge is allowed to operate. If this time elapses, PID is preset and PID is allowed to run as it is parameterized – with or without reference ramps. 0 = NOT SEL - 1…60000 s: Max. Precharge operating time	**1…60000 s**	**1 = 1 s**	**NOT SEL**	

Group 45: Energy Savings


This group defines the set-up for calculation and optimization of energy savings.

Group 45: Energy Savings					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4501	**ENERGY OPTIMIZER** Enables or disables the energy optimizer, which optimizes the flux so that the total energy consumption and motor noise level are reduced when the drive operates below the nominal load. The total efficiency (motor and drive) can be improved by 1…10% depending on load torque and speed.			**OFF**	
	OFF Disabled			**0**	
	ON Enabled			**1**	
4502	**ENERGY PRICE** Price of energy per kWh. Used for reference when energy savings are calculated. See parameters *0174* SAVED KWH, *0175* SAVED MWH, *0176* SAVED AMOUNT 1, *0177* SAVED AMOUNT 2 and *0178* SAVED CO2.	**0.00…655.35**	**1 = 0.1 (Currency)**	**0.00 (Currency)**	
4507	**CO2 CONV FACTOR** Conversion factor used for multiplying the saved energy in MWh to calculate the value of parameter *0178* SAVED CO2.	**0.0…655.35 tn/MWh**	**1 = 0.1 tn/MWh**	**0.5 tn/MWh**	
4508	**PUMP POWER** Pump power when connected directly to supply. Used for reference when energy savings are calculated. See parameters *0174* SAVED KWH, *0175* SAVED MWH, *0176* SAVED AMOUNT 1, *0177* SAVED AMOUNT 2 and *0178* SAVED CO2.	**0.0…1000.0%**	**1 = 0.1%**	**100.0%**	

Group 45: Energy Savings					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4509	**ENERGY RESET** Resets energy calculators *0174* SAVED KWH, *0175* SAVED MWH, *0176* SAVED AMOUNT 1, *0177* SAVED AMOUNT 2 and *0178* SAVED CO2.			**DONE**	
	DONE Reset not requested (normal operation).			**0**	
	RESET Reset energy counters, The value reverts automatically to DONE.			**1**	

Group 46: Pump Cleaning

This group defines the set-up for pump cleaning.

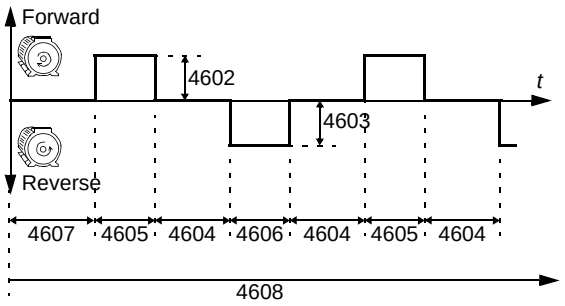Group 46: Pump Cleaning					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
4601	**PUMP CLEAN TRIG**			**NOT SEL**	
	Defines how Pump cleaning is triggered. The pump cleaning sequence consists of forward and reverse “steps”.				
					
	WARNING! Before enabling the Pump cleaning function ensure it is safe to perform the Pump cleaning sequence with the connected equipment.				
	Notes:				
	The Pump cleaning overrides parameter *1003* DIRECTION.				
	The Pump cleaning function observes the maximum forward and reverse frequencies (parameters *2007* MINIMUM FREQ and *2008* MAXIMUM FREQ).				
	The Pump cleaning always uses acceleration time 2 (parameter *2205*) and deceleration time 2 (parameter *2006*).				
	The drive must be started and its Run Enable signal must be present before the Pump cleaning sequence can start.				
	NOT SEL			**0**	
	No triggering source defined.				
	DI1			**1**	
	Trigger on the rising edge of digital input DI1				
	DI2			**2**	
	See selection DI1.				
	DI3			**3**	
	See selection DI1.				
	DI4			**4**	
	See selection DI1.				

Group 46: Pump Cleaning					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
	DI5 See selection DI1.			**5**	
	DI1/SUP1OVR Enable on the rising edge of digital input DI1, trigger on SUPRV1 OVER (parameter *1401* RELAY OUTPUT 1). See parameter *Group 32: Supervision*.			**7**	
	DI2/SUP1OVR See selection DI1/SUP1OVR.			**8**	
	DI3/SUP1OVR See selection DI1/SUP1OVR.			**9**	
	DI4/SUP1OVR See selection DI1/SUP1OVR.			**10**	
	DI5/SUP1OVR See selection DI1/SUP1OVR.			**11**	
	SUPRV1 OVER Trigger on SUPRV1 OVER (parameter *1401* RELAY OUTPUT 1). See parameter *Group 32: Supervision*.			**12**	
	DRIVE START Trigger when the drive receives a start command			**13**	
	TIMER TRIG Pump cleaning sequence is started periodically at intervals defined by parameter *4607* TRIG TIME.			**14**	
	DI1(INV) Trigger on the falling edge of digital input DI1			**-1**	
	DI2(INV) See selection DI1(INV).			**-2**	
	DI3(INV) See selection DI1(INV).			**-3**	
	DI4(INV) See selection DI1(INV).			**-4**	
	DI5(INV) See selection DI1(INV).			**-5**	
	DI5(INV) See selection DI1(INV).			**-6**	
	DI1(INV)S1O Enable on the falling edge of digital input DI1, trigger on SUPRV1 OVER (parameter *1401* RELAY OUTPUT 1). See parameter *Group 32: Supervision*.			**-7**	
	DI2(INV)S1O See selection DI1(INV)S1O.			**-8**	
	DI3(INV)S1O See selection DI1(INV)S1O.			**-9**	

Group 46: Pump Cleaning					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
	DI4(INV)S1O See selection DI1(INV)S1O.			**-10**	
	DI5(INV)S1O See selection DI1(INV)S1O.			**-11**	
4602	**FWD STEP** Defines the forward step frequency for the pump cleaning sequence in percent of the nominal motor frequency (parameter *9907* MOTOR NOM FREQ).	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
4603	**REV STEP** Defines the reverse step frequency for the pump cleaning sequence in percent of the nominal motor frequency (parameter *9907* MOTOR NOM FREQ).	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
4604	**OFF TIME** Defines the length of the interval between forward and reverse steps in the pump cleaning sequence in seconds.	**0.0…1000.0 s**	**1 = 0.1 s**	**0.0 s**	
4605	**FWD TIME** Defines the duration of each forward step in the pump cleaning sequence in seconds.	**0.0…1000.0 s**	**1 = 0.1 s**	**0.0 s**	
4606	**REV TIME** Defines the duration of each reverse step in the pump cleaning sequence in seconds.	**0.0…1000.0 s**	**1 = 0.1 s**	**0.0 s**	
4607	**TRIG TIME** Defines the time for setting TIMER TRIG of parameter *4601* PUMP CLEAN TRIG.	**0.0…200.0 h**	**1 = 0.1 h**	**0.0 h**	
4608	**COUNT** Number of steps to be performed in the pump cleaning sequence.	**0…100**	**1 = 1**	**0**	

Group 52: Panel Communication

This group defines the communication settings for the control panel port on the drive. Normally, when using the supplied control panel, there is no need to change settings in this group.

In this group, parameter modifications take effect on the next power-up.

Group 52: Panel Communication					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
5201	**STATION ID** Defines the address of the drive. • Two units with the same address are not allowed on-line. • Range: 1…247	**1…247**	**1**	**1**	

Group 52: Panel Communication					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
5202	**BAUDRATE** Defines the communication speed of the drive in kbits per second (kbits/s). 9.6 19.2 38.4 57.6 115.2	**9.6…115.2 kbits/s**	**-**	**9.6 kbits/s**	
5203	**PARITY** Sets the character format to be used with the panel communication. 0 = 8N1 – No parity, one stop bit. 1 = 8N2 – No parity, two stop bits. 2 = 8E1 – Even parity, one stop bit. 3 = 8O1 – Odd parity, one stop bit.	**0…3**	**1**	**0**	
5204	**OK MESSAGES** Contains a count of valid Modbus messages received by the drive. • During normal operation, this counter is increasing constantly.	**0…65535**	**1**	**-**	
5205	**PARITY ERRORS** Contains a count of the characters with a parity error that is received from the fieldbus. For high counts, check: • Parity settings of devices connected on the fieldbus – they must not differ. • Ambient electro-magnetic noise levels – high noise levels generate errors.	**0…65535**	**1**	**-**	
5206	**FRAME ERRORS** Contains a count of the characters with a framing error that the fieldbus receives. For high counts, check: • Communication speed settings of devices connected on the fieldbus – they must not differ. • Ambient electro-magnetic noise levels – high noise levels generate errors.	**0…65535**	**1**	**-**	
5207	**BUFFER OVERRUNS** Contains a count of the characters received that cannot be placed in the buffer. • Longest possible message length for the drive is 128 bytes. • Received messages exceeding 128 bytes overflow the buffer. The excess characters are counted.	**0…65535**	**1**	**-**	
5208	**CRC ERRORS** Contains a count of the messages with a CRC error that the drive receives. For high counts, check: • Ambient electro-magnetic noise levels – high noise levels generate errors. • CRC calculations for possible errors.	**0…65535**	**1**	**-**	

Group 53: EFB Protocol

This group defines set-up variables used for an embedded fieldbus (EFB) communication protocol. Refer to communication protocol documentation for more information on these parameters.

Group 53: EFB Protocol					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
5301	**EFB PROTOCOL ID** Contains the identification and program revision of the protocol. • Format: XXYY, where xx = protocol ID, and YY = program revision.	**0000…FFFF hex**	**1**	**0000 hex**	
5302	**EFB STATION ID** Defines the node address of the RS485 link. • The node address on each unit must be unique.	**0…65535**	**1**	**1**	✓
5303	**EFB BAUD RATE** Defines the communication speed of the RS485 link in kbits per second (kbits/s). 1.2 kbits/s 2.4 kbits/s 4.8 kbits/s 9.6 kbits/s 19.2 kbits/s 38.4 kbits/s 57.6 kbits/s 76.8 kbits/s	**1.2…76.8 kbits/s**	**-**	**9.6 kbits/s**	
5304	**EFB PARITY** Defines the data length, parity and stop bits to be used with the RS485 link communication. • The same settings must be used in all on-line stations. 0 = 8N1 – 8 data bits, No parity, one stop bit. 1 = 8N2 – 8 data bits, No parity, two stop bits. 2 = 8E1 – 8 data bits, Even parity, one stop bit. 3 = 8O1 – 8 data bits, Odd parity, one stop bit.	**0…3**		**0**	
5305	**EFB CTRL PROFILE** Selects the communication 1=ACH550 profile used by the EFB protocol. 0 = ABB DRV LIM – Operation of Control/Status Words conforms to ABB Drives Profile, as used in ACH400. 1 = DCU PROFILE – Operation of Control/Status Words conforms to 32-bit DCU Profile. 2 = ABB DRV FULL – Operation of Control/Status Words conforms to ABB Drives Profile, as used in ACH600/800.	**0…2**	**1**	**0**	
5306	**EFB OK MESSAGES** Contains a count of valid messages received by the drive. • During normal operation, this counter is increasing constantly.	**0…65535**	**1**	**0**	
5307	**EFB CRC ERRORS** Contains a count of the messages with a CRC error received by the drive. For high counts, check: • Ambient electro-magnetic noise levels – high noise levels generate errors. • CRC calculations for possible errors.	**0…65535**	**1**	**0**	

Group 53: EFB Protocol					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
5308	**EFB UART ERRORS** Contains a count of the messages with a character error received by the drive.	**0…65535**	**1**	**0**	
5309	**EFB STATUS** Contains the status of the EFB protocol. 0 = IDLE – EFB protocol is configured, but not receiving any messages. 1 = EXEC. INIT – EFB protocol is initializing. 2 = TIME OUT – A timeout has occurred in the communication between the network master and the EFB protocol. 3 = CONFIG ERROR – EFB protocol has a configuration error. 4 = OFF-LINE – EFB protocol is receiving messages that are NOT addressed to this drive. 5 = ON-LINE – EFB protocol is receiving messages that are addressed to this drive. 6 = RESET – EFB protocol is performing a hardware reset. 7 = LISTEN ONLY – EFB protocol is in listen-only mode.	**0…7**	**1**	**0**	
5310 to 5320	**EFB PAR 10 to EFB PAR 20**	**0…65535**	**1**	**Protocol dep.**	

Group 64: Load Analyzer

This group defines the settings for the load analyzing function for peak value and amplitude. See section *Load analyzer* on page *122*.

Group 64: Load Analyzer					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
6401	**PVL SIGNAL** Defines the signal logged for peak value. Parameter index in *Group 01: Operating Data*. Eg 102 = 0102 SPEED.	**x…x**		**103**	
6402	**PVL FILTER TIME** Defines the filter time for peak value logging. Filter time	**0.0…120.0 s**	**1 = 0.1 s**	**0.1 s**	

Group 64: Load Analyzer					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
6403	**LOGGERS RESET** Defines the source for the reset of loggers.			**NOT SEL**	
	NOT SEL No reset selected			**0**	
	DI1 Reset loggers on the rising edge of DI1..			**1**	
	DI2 See selection DI1.			**2**	
	DI3 See selection DI1.			**3**	
	DI4 See selection DI1.			**4**	
	DI5 See selection DI1.			**5**	
	RESET Reset loggers. Parameter is set to NOT SEL.			**7**	
	DI1(INV) Reset loggers on the falling edge of DI1.			**-1**	
	DI2(INV) See selection DI1(INV).			**-2**	
	DI3(INV) See selection DI1(INV).			**-3**	
	DI4(INV) See selection DI1(INV).			**-4**	
	DI5(INV) See selection DI1(INV).			**-5**	
6404	**AL2 SIGNAL** Defines the signal logged for amplitude logger 2. Parameter index in *Group 01: Operating Data*. Eg 102 = 0102 SPEED.	**x…x**		**103**	
6405	**AL2 SIGNAL BASE** Defines the base value from which the percentage distribution is calculated. Representation and default value depends on the signal selected with parameter *6404* AL2 SIGNAL.	**-**		**-**	
6406	**PEAK VALUE** Detected peak value of the signal selected with parameter *6401* PVL SIGNAL.	**-**		**-**	
6407	**PEAK TIME 1** Date of the peak value detection. Day on which the peak value was detected. Format: Date if the real time clock is operating. / The number of days elapsed after the power-on if the real time clock is not used, or was not set.	**0…65535 d**	**1 = 1 d**	**0 d**	

Group 64: Load Analyzer					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
6408	**PEAK TIME 2** Time of the peak value detection.	**00:00:00… 23:59:58**		**00:00:00**	
6409	**CURRENT AT PEAK** Current at the moment of the peak value	**0.0…6553.5 A**	**1 = 0.1 A**	**0.0 A**	
6410	**UDC AT PEAK** DC voltage at the moment of the peak value	**0…65535 V**	**1 = 1 V**	**0 V**	
6411	**FREQ AT PEAK** Output frequency at the moment of the peak value	**0.0…6553.5 Hz**	**1 = 0.1 Hz**	**0.0 Hz**	
6412	**TIME OF RESET 1** Last reset date of the peak logger and amplitude logger 2. Day of the last reset. Format: Date if the real time clock is operating. / The number of days elapsed after the power-on if the real time clock is not used, or was not set.	**0…65535 d**	**1 = 1 d**	**0 d**	
6413	**TIME OF RESET 2** Last reset time of the peak logger and amplitude logger 2.	**00:00:00… 23:59:58**		**00:00:00**	
6414	**AL1RANGE0TO10** Amplitude logger 1 (current in percent of nominal current) 0…10% distribution	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
6415	**AL1RANGE10TO20** Amplitude logger 1 (current in percent of nominal current) 10…20% distribution	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
6416	**AL1RANGE20TO30** Amplitude logger 1 (current in percent of nominal current) 20…30% distribution	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
6417	**AL1RANGE30TO40** Amplitude logger 1 (current in percent of nominal current) 30…40% distribution	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
6418	**AL1RANGE40TO50** Amplitude logger 1 (current in percent of nominal current) 40…50% distribution	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
6419	**AL1RANGE50TO60** Amplitude logger 1 (current in percent of nominal current) 40…50% distribution	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
6420	**AL1RANGE60TO70** Amplitude logger 1 (current in percent of nominal current) 40…50% distribution	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
6421	**AL1RANGE70TO80** Amplitude logger 1 (current in percent of nominal current) 40…50% distribution	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
6422	**AL1RANGE80TO90** Amplitude logger 1 (current in percent of nominal current) 40…50% distribution	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
6423	**AL1RANGE90TO** Amplitude logger 1 (current in percent of nominal current) 40…50% distribution	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
6424	**AL2RANGE0TO10** Amplitude logger 2 (selection with parameter *6404*) 0…10% distribution	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	

Group 64: Load Analyzer					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
6425	**AL2RANGE10TO20**	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
	Amplitude logger 2 (selection with parameter *6404*) 10…20% distribution				
6426	**AL2RANGE20TO30**	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
	Amplitude logger 2 (selection with parameter *6404*) 20…30% distribution				
6427	**AL2RANGE30TO40**	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
	Amplitude logger 2 (selection with parameter *6404*) 30…40% distribution				
6428	**AL2RANGE40TO50**	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
	Amplitude logger 2 (selection with parameter *6404*) 40…50% distribution				
6429	**AL2RANGE50TO60**	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
	Amplitude logger 2 (selection with parameter *6404*) 50…60% distribution				
6430	**AL2RANGE60TO70**	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
	Amplitude logger 2 (selection with parameter *6404*) 60…70% distribution				
6431	**AL2RANGE70TO80**	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
	Amplitude logger 2 (selection with parameter *6404*) 70…80% distribution				
6432	**AL2RANGE80TO90**	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
	Amplitude logger 2 (selection with parameter *6404*) 80…90% distribution				
6433	**AL2RANGE90TO**	**0.0…100.0%**	**1 = 0.1%**	**0.0%**	
	Amplitude logger 2 (selection with parameter *6404*) 90…100% distribution				


Group 81: PFA


This group defines a Pump and Fan Alternation (PFA) mode of operation. The major features of PFA are:

- The ACS320 controls the motor of pump no. 1, varying the motor speed to control the pump capacity. This motor is the speed regulated motor.
- Direct line connections power the motor of pump no. 2 and pump no. 3, etc. The ACS320 switches pump no. 2 (and then pump no. 3, etc.) on and off as needed. These motors are auxiliary motors. Use of the MREL-01 relay output module is required for control of pump no. 2 and no. 3.
- The ACS320 PID control uses two signals: a process reference and an actual value feedback. The PID controller adjusts the speed (frequency) of the first pump such that the actual value follows the process reference.
- When demand (defined by the process reference) exceeds the first motor's capacity (user defined as a frequency limit), the PFA automatically starts an auxiliary pump. The PFA also reduces the speed of the first pump to account for the auxiliary pump's addition to total output. Then, as before, the PID controller adjusts the speed (frequency) of the first pump such that the actual value follows the process reference. If demand continues to increase, PFA adds additional auxiliary pumps, using the same process.
- When demand drops, such that the first pump speed falls below a minimum limit (user defined by a frequency limit), the PFA automatically stops an auxiliary pump. The PFA also increases the speed of the first pump to account for the auxiliary pump's missing output.
- An Interlock function (when enabled) identifies off-line (out of service) motors, and the PFA skips to the next available motor in the sequence.

An Autochange function (when enabled and with the appropriate switchgear) equalizes duty time between the pump motors. Autochange periodically increments the position of each motor in the rotation – the speed regulated motor becomes the last auxiliary motor, the first auxiliary motor becomes the speed regulated motor, etc.

Group 81: PFA					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
8103	**REFERENCE STEP 1** Sets a percentage value that is added to the process reference. • Applies only when at least one auxiliary (constant speed) motor is running. • Default value is 0%. Example: An ACS320 operates three parallel pumps that maintain water pressure in a pipe. • 4011 INTERNAL SETPNT sets a constant pressure reference that controls the pressure in the pipe. • The speed regulated pump operates alone at low water consumption levels. • As water consumption increases, first one constant speed pump operates, then, the second. • As flow increases, the pressure at the output end of the pipe drops relative to the pressure measured at the input end. As auxiliary motors step in to increase the flow, the adjustments below correct the reference to more closely match the output pressure. • When the first auxiliary pump operates, increase the reference with parameter 8103 REFERENCE STEP 1. • When both auxiliary pumps operate, increase the reference with parameter 8103 reference step 1 + parameter 8104 reference step 2. • When three auxiliary pumps operate, increase the reference with parameter 8103 REFERENCE STEP 1 + parameter 8104 REFERENCE STEP 2 + parameter 8105 REFERENCE STEP 3.	**0.0…100.0%**	**0.1%**	**0.0%**	
8104	**REFERENCE STEP 2** Sets a percentage value that is added to the process reference. • Applies only when at least two auxiliary (constant speed) motors are running. • See parameter 8103 REFERENCE STEP1.	**0.0…100.0%**	**0.1%**	**0.0%**	
8105	**REFERENCE STEP 3** Sets a percentage value that is added to the process reference. • Applies only when at least three auxiliary (constant speed) motors are running. • See parameter 8103 REFERENCE STEP1.	**0.0…100.0%**	**0.1%**	**0.0%**	

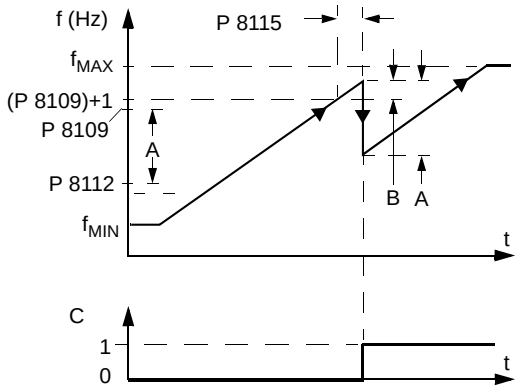Group 81: PFA					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
8109	**START FREQ 1**	**0.0...500.0 Hz**	**0.1 Hz**	**60.0**	
	Sets the frequency limit used to start the first auxiliary motor. The first auxiliary motor starts if: • No auxiliary motors are running. • ACS320 output frequency exceeds the limit: 8109 + 1 Hz. • Output frequency stays above a relaxed limit (8109 - 1 Hz) for at least the time: 8115 AUX MOT START D. After the first auxiliary motor starts: • Output frequency decreases by the value = (8109 START FREQ 1) - (8112 LOW FREQ 1). • In effect, the output of the speed regulated motor drops to compensate for the input from the auxiliary motor.  See figure, where: A = (8109 START FREQ 1) - (8112 LOW FREQ 1) B = Output frequency increase during the start delay. C = Diagram showing auxiliary motor's run status as frequency increases (1 = On). **Note!** 8109 START FREQ 1 value must be between: • 8112 LOW FREQ 1 • (2008 MAXIMUM FREQ) -1.				
8110	**START FREQ 2**	**0.0…500.0 Hz**	**0.1 Hz**	**60.0**	
	Sets the frequency limit used to start the second auxiliary motor. • See 8109 START FREQ 1 for a complete description of the operation. The second auxiliary motor starts if: • One auxiliary motor is running. • ACS320 output frequency exceeds the limit: 8110 + 1. • Output frequency stays above the relaxed limit (8110 - 1 Hz) for at least the time: 8115 AUX MOT START D.				
8111	**START FREQ 3**	**0.0…500.0 Hz**	**0.1 Hz**	**60.0**	
	Sets the frequency limit used to start the third auxiliary motor. • See 8109 START FREQ 1 for a complete description of the operation. The third auxiliary motor starts if: • Two auxiliary motors are running. • ACS320 output frequency exceeds the limit: 8111 + 1 Hz. • Output frequency stays above the relaxed limit (8111 - 1 Hz) for at least the time: 8115 AUX MOT START D.				

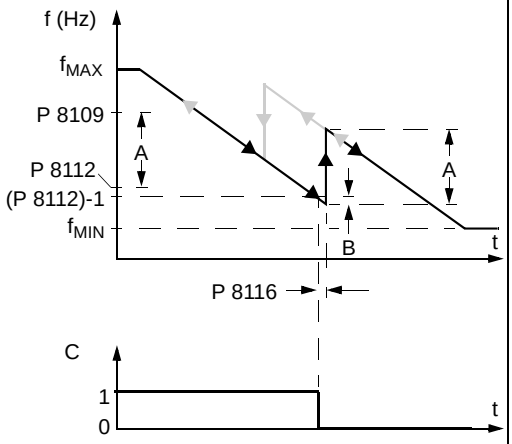Group 81: PFA					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
8112	**LOW FREQ 1**	**0.0…500.0 Hz**	**0.1 Hz**	**25.0**	
	Sets the frequency limit used to stop the first auxiliary motor. The first auxiliary motor stops if: • The first auxiliary motor is running alone. • ACS320 output frequency drops below the limit: 8112 - 1. • Output frequency stays below the relaxed limit (8112 + 1 Hz) for at least the time: 8116 AUX MOT STOP D. After the first auxiliary motor stops: • Output frequency increases by the value = (8109 START FREQ 1) - (8112 LOW FREQ 1). • In effect, the output of the speed regulated motor increases to compensate for the loss of the auxiliary motor.  See figure, where: • A = (8109 START FREQ 1) - (8112 LOW FREQ 1) • B = Output frequency decrease during the stop delay. • C = Diagram showing auxiliary motor's run status as frequency decreases (1 = On). • Grey path = Shows hysteresis – if time is reversed, the path backwards is not the same. For details on the path for starting, see the diagram at 8109 START FREQ 1. **Note!** Low Frequency 1 value must be between: • (2007 MINIMUM FREQ) +1. • 8109 START FREQ 1				
8113	**LOW FREQ 2**	**0.0…500.0 Hz**	**0.1 Hz**	**25.0**	
	Sets the frequency limit used to stop the second auxiliary motor. • See 8112 LOW FREQ 1 for a complete description of the operation. The second auxiliary motor stops if: • Two auxiliary motors are running. • ACH550 output frequency drops below the limit: 8113 - 1. • Output frequency stays below the relaxed limit (8113 + 1 Hz) for at least the time: 8116 AUX MOT STOP D.				
8114	**LOW FREQ 3**	**0.0…500.0 Hz**	**0.1 Hz**	**25.0**	
	Sets the frequency limit used to stop the third auxiliary motor. • See 8112 LOW FREQ 1 for a complete description of the operation. The third auxiliary motor stops if: • Three auxiliary motors are running. • ACS320 output frequency drops below the limit: 8114 - 1. • Output frequency stays below the relaxed limit (8114 + 1 Hz) for at least the time: 8116 AUX MOT STOP D.				

Group 81: PFA					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
8115	**AUX MOT START D**	**0.0…3600.0 s**	**0.1 s; 1 s**	**5.0 s**	
	Sets the Start Delay for the auxiliary motors. • The output frequency must remain above the start frequency limit (parameter 8109, 8110, or 8111) for this time period before the auxiliary motor starts. • See 8109 START FREQ 1 for a complete description of the operation.				
8116	**AUX MOT STOP D.**	**0.0…3600.0 s**	**0.1 s; 1 s**	**3.0 s**	
	Sets the Stop Delay for the auxiliary motors. • The output frequency must remain below the low frequency limit (parameter 8112, 8113, or 8114) for this time period before the auxiliary motor stops. • See 8112 LOW FREQ 1 for a complete description of the operation.				

Group 81: PFA					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
8117	**NR OF AUX MOT**	**0…4 (5 with TO)**	**1 = 1**	**1**	✓

Sets the number of auxiliary motors. Each auxiliary motor requires a relay output, which the drive uses to send start/stop signals.

The Autochange function, if used, requires an additional relay output for the speed regulated motor.

The following describes the set-up of the required relay outputs.

Relay outputs

As noted above, each auxiliary motor requires a relay output, which the drive uses to send start/stop signals. The following describes how the drive keeps track of motors and relays.


The drive provides one relay output RO1. An external relay output module can be added to provide relay outputs RO2…RO4.

Note: If five auxiliary motors are used (Autochange disabled), use transistor output TO in addition to relay outputs RO1…RO4. Note that max. voltage at TO is 30 V DC.


Parameters *1401*…*1403* and *1410* define, respectively, how relays RO1…RO4 are used – the parameter value 31 (PFC) defines the relay as used for PFC.

The drive assigns auxiliary motors to relays in ascending order. If the Autochange function is disabled, the first auxiliary motor is the one connected to the first relay with a parameter setting = 31 (PFC), and so on.

If the Autochange function is used, the assignments rotate. Initially, the speed regulated motor is the one connected to the first relay with a parameter setting = 31 (PFC), the first auxiliary motor is the one connected to the second relay with a parameter setting = 31 (PFC), and so on. The fourth auxiliary motor uses the same reference step, low frequency and start frequency values as the third auxiliary motor. Number of auxiliary motors.

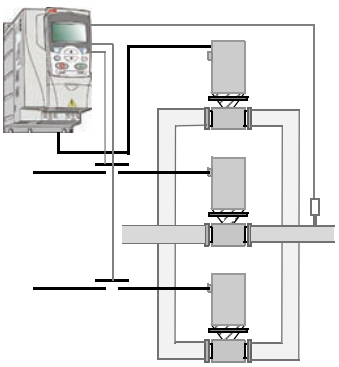

Standard PFC mode

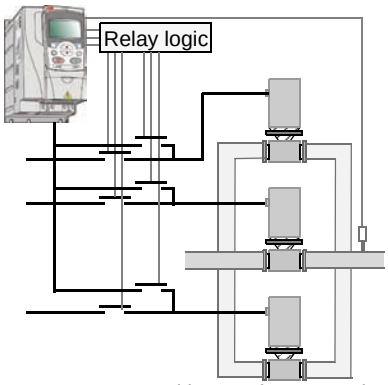

PFC with Autochange mode

Group 81: PFA										
Code	**Description**					**Range**		**Resolution**	**Default**	**S**

The table below shows the PFC motor assignments for some typical settings in the relay output parameters (*1401*…*1403* and *1410*), where the settings are either = 31 (PFC), or =X (anything but 31), and where the Autochange function is disabled (*8118* AUTOCHNG INTERV = 0).


Parameter setting					Relay assignment			
					Autochange disabled			
1401	**1402**	**1403**	**1410**	**8117**	**RO1**	**RO2**	**RO3**	**RO4**
31	X	X	X	1	Aux.	X	X	X
31	31	X	X	2	Aux.	Aux.	X	X
31	31	31	X	3	Aux.	Aux.	Aux.	X
X	31	31	X	2	X	Aux.	Aux.	X
31	31	X	X	1*	Aux.	Aux.	X	X

* = One additional relay output for the PFC that is in use.
One motor is in “sleep” when the other is rotating.

The table below shows the PFC motor assignments for some typical settings in the relay output parameters (*1401*…*1403* and *1410*), where the settings are either = 31 (PFC), or =X (anything but 31), and where the Autochange function is enabled (*8118* AUTOCHNG INTERV > 0).

Parameter setting					Relay assignment			
					Autochange enabled			
1401	**1402**	**1403**	**1410**	**8117**	**RO1**	**RO2**	**RO3**	**RO4**
31	31	X	X	1	PFC	PFC	X	X
31	31	31	X	2	PFC	PFC	PFC	X
X	31	31	X	1	X	PFC	PFC	X
31	31	X	X	0**	PFC	PFC	X	X

** = No auxiliary motors, but the autochange function is in use. Working as a standard PID-control.

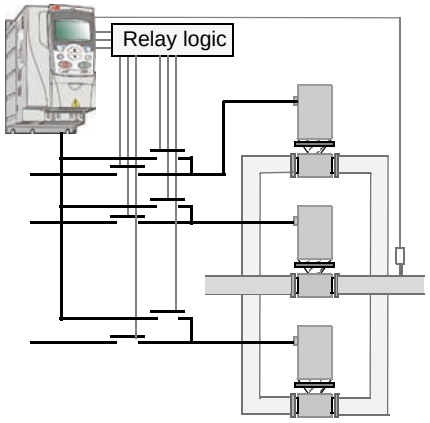Group 81: PFA					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
8118	**AUTOCHNG INTERV**	**0.1…336.0 h**	**1 = 0.1 h**	**NOT SEL**	
	Controls operation of the Autochange function and sets the interval between changes. The Autochange time interval only applies to the time when the speed regulated motor is running. See parameter *8119* AUTOCHNG LEVEL for an overview of the Autochange function. The drive always coasts to stop when autochange is performed. Autochange enabled requires parameter *8120* INTERLOCKS > 0. **WARNING! When enabled, the Autochange function requires the interlocks (*8120* INTERLOCKS > 0) enabled. During autochange the power output is interrupted and the drive coasts to stop, preventing damage to the contacts.**  PFC with Autochange mode -0.1 = TEST MODE – Forces the interval to value 36…48 s. 0.0 = NOT SEL – Disables the Autochange function. The operating time interval (the time when the start signal is on) between automatic motor changes.				

Group 81: PFA					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
8119	**AUTOCHNG LEVEL**	**0.0…100.0%**	**0.1%**	**50.0%**	

Sets an upper limit, as a percent of output capacity, for the autochange logic. When the output from the PID/PFA control block exceeds this limit, autochange is prevented. For example, use this parameter to deny autochange when the Pump-Fan system is operating near maximum capacity.

Autochange Overview

The purpose of the autochange operation is to equalize duty time between multiple motors used in a system. At each autochange operation:

- A different motor takes a turn connected to the ACS320 output – the speed regulated motor.
- The starting order of the other motors rotates.

The Autochange function requires:

- External switchgear for changing the dive's output power connections.
- Parameter 8120 INTERLOCKS = value > 0.


Autochange is performed when:

- The running time since the previous autochange reaches the time set by 8118 AUTOCHNG INTERV
- The PFA input is below the level set by this parameter, 8119 AUTOCHNG LEVEL.

Note! The ACS320 always coasts to stop when autochange is performed.

In an autochange, the Autochange function does all of the following (see figure):

- Initiates a change when the running time, since the last autochange, reaches 8118 AUTOCHNG INTERV, and PFA input is below limit 8119 AUTOCHNG LEVEL.
- Stops the speed regulated motor.
- Switches off the contactor of the speed regulated motor.
- Increments the starting order counter, to change the starting order for the motors.
- Identifies the next motor in line to be the speed regulated motor.

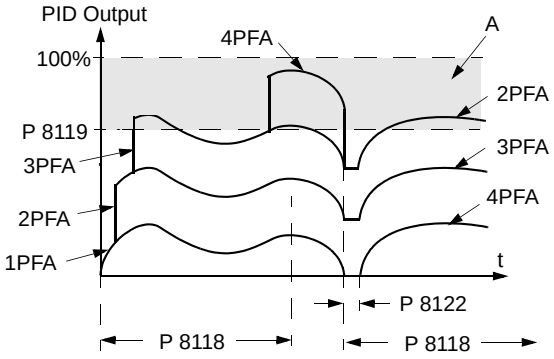


A = Area above 8119 AUTOCHNG LEVEL – autochange not allowed.

B = Autochange occurs.

1PFA, etc. = PID output associated with each motor.

- Switches off the above motor's contactor, if the motor was running. Any other running motors are not interrupted.
- Switches on the contactor of the new speed regulated motor. The autochange switchgear connects this motor to the ACS320 power output.
- Delays motor start for the time 8122 PFA START DELAY.
- Starts the speed regulated motor.
- Identifies the next constant speed motor in the rotation.
- Switches the above motor on, but only if the new speed regulated motor had been running (as a constant speed motor) – This step keeps an equal number of motors running before and after autochange.
- Continues with normal PFA operation.

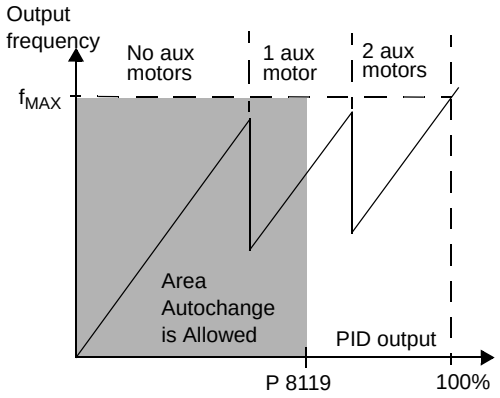Group 81: PFA					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
	Starting Order Counter The operation of the starting-order counter: • The relay output parameter definitions (1401…1403 and 1410…1412)) establish the initial motor sequence. (The lowest parameter number with a value 31 (PFA) identifies the relay connected to 1PFA, the first motor, and so on.) • Initially, 1PFA = speed regulated motor, 2PFA = 1st auxiliary motor, etc. • The first autochange shifts the sequence to: 2PFA = speed regulated motor, 3PFA = 1st auxiliary motor, …, 1PFA = last auxiliary motor.  • The next autochange shifts the sequence again, and so on. • If the autochange cannot start a needed motor because all inactive motors are interlocked, the drive displays an alarm (2051, PFA INTERLOCK). • When ACS320 power supply is switched off, the counter preserves the current Autochange rotation positions in permanent memory. When power is restored, the Autochange rotation starts at the position stored in memory. • If the PFA relay configuration is changed (or if the PFA enable value is changed), the rotation is reset. (See the first bullet above.)				
8120	**INTERLOCKS**	**0…6**	**1**	**4**	
	Defines operation of the Interlock function. When the Interlock function is enabled: • An interlock is active when its command signal is absent. • An interlock is inactive when its command signal is present. The ACH550 will not start if a start command occurs when the speed regulated motor's interlock is active – the control panel displays an alarm (2015, PFA INTERLOCK). Wire each Interlock circuit as follows: • Wire a contact of the motor's On/Off switch to the Interlock circuit – the drive's PFA logic can then recognize that the motor is switched off, and start the next available motor. • Wire a contact of the motor thermal relay (or other protective device in the motor circuit) to the Interlock input – the drive's PFA logic can then recognize that a motor fault is activated and stop the motor. 0 = NOT SEL – Disables the Interlock function. All digital inputs are available for other purposes. • Requires 8118 AUTOCHNG INTERV = 0 (The Autochange function must be disabled if Interlock function is disabled.) 1 = DI1 – Enables the Interlock function, and assigns a digital input (starting with DI1) to the interlock signal for each PFA relay. These assignments are defined in the following table and depend on: The number of PFA relays (number of parameters 1401…1403 and 1410…1412) with value = 31 (PFA).				

<table>
<tr><th colspan="6">Group 81: PFA</th></tr>
<tr><th>Code</th><th>Description</th><th>Range</th><th>Resolution</th><th>Default</th><th>S</th></tr>
<tr><td></td><td colspan="5">The Autochange function status (disabled if 8118 AUTOCHNG INTERV = 0, and otherwise enabled).
<table>
<tr><th>No. PFA Relays</th><th>Autochange Disabled (P 8118)</th><th>Autochange Enabled (P 8118)</th></tr>
<tr><td>0</td><td>DI1: Speed Reg Motor
DI2…DI5: Free</td><td>Not allowed</td></tr>
<tr><td>1</td><td>DI1: Speed Reg Motor
DI2: First PFA Relay
DI3…DI5: Free</td><td>DI1: First PFA Relay
DI2…DI5: Free</td></tr>
<tr><td>2</td><td>DI1: Speed Reg Motor
DI2: First PFA Relay
DI3: Second PFA Relay
DI4…DI5: Free</td><td>DI1: First PFA Relay
DI2: Second PFA Relay
DI3…DI5: Free</td></tr>
<tr><td>3</td><td>DI1: Speed Reg Motor
DI2: First PFA Relay
DI3: Second PFA Relay
DI4: Third PFA Relay
DI5…DI5: Free</td><td>DI1: First PFA Relay
DI2: Second PFA Relay
DI3: Third PFA Relay
DI4…DI5: Free</td></tr>
<tr><td>4</td><td>DI1: Speed Reg Motor
DI2: First PFA Relay
DI3: Second PFA Relay
DI4: Third PFA Relay
DI5: Fourth PFA Relay</td><td>DI1: First PFA Relay
DI2: Second PFA Relay
DI3: Third PFA Relay
DI4: Fourth PFA Relay
DI5…DI5: Free</td></tr>
</table>
Note: MREL-01 required for PFA relays 2, 3 and 4.</td></tr>
</table>

Group 81: PFA

Code	Description	Range	Resolution	Default	S

2 = DI2 – Enables the Interlock function, and assigns a digital input (starting with DI2) to the interlock signal for each PFA relay. These assignments are defined in the following table and depend on:

- The number of PFA relays (number of parameters 1401…1403 and 1410…1412) with value = 31 (PFA).
- The Autochange function status (disabled if 8118 AUTOCHNG INTERV = 0, and otherwise enabled).

No. PFA Relays	Autochange Disabled (P 8118)	Autochange Enabled (P 8118)
0	DI1: Free DI2: Speed Reg Motor DI3…DI5: Free	Not allowed
1	DI1: Free DI2: Speed Reg Motor DI3: First PFA Relay DI4…DI5: Free	DI1: Free DI2: First PFA Relay DI3…DI5: Free
2	DI1: Free DI2: Speed Reg Motor DI3: First PFA Relay DI4: Second PFA Relay DI5…DI5: Free	DI1: Free DI2: First PFA Relay DI3: Second PFA Relay DI4…DI5: Free
3	DI1: Free DI2: Speed Reg Motor DI3: First PFA Relay DI4: Second PFA Relay DI5: Third PFA Relay	DI1: Free DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5…DI5: Free
4	DI1: Free DI2: Speed Reg Motor DI3: First PFA Relay DI4: Second PFA Relay DI5: Third PFA Relay	DI1: Free DI2: First PFA Relay DI3: Second PFA Relay DI4: Third PFA Relay DI5: Fourth PFA Relay

Note: MREL-01 required for PFA relays 2, 3 and 4.

Group 81: PFA

Code	Description	Range	Resolution	Default	S

3 = DI3 – Enables the Interlocks function, and assigns a digital input (starting with DI3) to the interlock signal for each PFA relay. These assignments are defined in the following table and depend on:

- The number of PFA relays (number of parameters 1401…1403 and 1410…1412) with value = 31 (PFA).
- The Autochange function status (disabled if 8118 AUTOCHNG INTERV = 0, and otherwise enabled).
- INTERV = 0, and otherwise enabled).

No. PFA Relays	Autochange Disabled (P 8118)	Autochange Enabled (P 8118)
0	DI1…DI2: Free DI3: Speed Reg Motor DI4…DI5: Free	Not allowed
1	DI1…DI2: Free DI3: Speed Reg Motor DI4: First PFA Relay DI5…DI5: Free	DI1…DI2: Free DI3: First PFA Relay DI4…DI5: Free
2	DI1…DI2: Free DI3: Speed Reg Motor DI4: First PFA Relay DI5: Second PFA Relay	DI1…DI2: Free DI3: First PFA Relay DI4: Second PFA Relay DI5…DI5: Free
3	DI1…DI2: Free DI3: Speed Reg Motor DI4: First PFA Relay DI5: Second PFA Relay	DI1…DI2: Free DI3: First PFA Relay DI4: Second PFA Relay DI5: Third PFA Relay
4	Not allowed	DI1…DI2: Free DI3: First PFA Relay DI4: Second PFA Relay DI5: Third PFA Relay

Note: MREL-01 required for PFA relays 2, 3 and 4.

4 = DI4 – Enables the Interlock function, and assigns a digital input (starting with DI4) to the interlock signal for each PFA relay. These assignments are defined in the following table and depend on:

- The number of PFA relays (number of parameters 1401…1403 and 1410…1412) with value = 31 (PFA).
- The Autochange function status (disabled if 8118 AUTOCHNG)

No. PFA Relays	Autochange Disabled (P 8118)	Autochange Enabled (P 8118)
0	DI1…DI3: Free DI4: Speed Reg Motor DI5…DI5: Free	Not allowed
1	DI1…DI3: Free DI4: Speed Reg Motor DI5: First PFA Relay	DI1…DI3: Free DI4: First PFA Relay DI5…DI5: Free
2	DI1…DI3: Free DI4: Speed Reg Motor DI5: First PFA Relay	DI1…DI3: Free DI4: First PFA Relay DI5: Second PFA Relay
3	Not allowed	DI1…DI3: Free DI4: First PFA Relay DI5: Second PFA Relay
4	Not allowed	Not allowed

Group 81: PFA					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**

5 = DI5 – Enables the Interlock function, and assigns a digital input (starting with DI5) to the interlock signal for each PFA relay. These assignments are defined in the following table and depend on:

- The number of PFA relays (number of parameters 1401…1403 and 1410…1412) with value = 31 (PFA).
- The Autochange function status (disabled if 8118 AUTOCHNG INTERV = 0, and otherwise enabled).

No. PFA Relays	Autochange Disabled (P 8118)	Autochange Enabled (P 8118)
0	DI1…DI4: Free DI5: Speed Reg Motor	Not allowed
1	DI1…DI4: Free DI5: Speed Reg Motor	DI1…DI4: Free DI5: First PFA Relay
2	Not allowed	DI1…DI4: Free DI5: First PFA Relay
3…5	Not allowed	Not allowed

8121 **REG BYPASS CTRL** **0…1** **1** **0**


Selects Regulator by-pass control. When enabled, Regulator by-pass control provides a simple control mechanism without a PID regulator.

- Use Regulator by-pass control only in special applications.


0 = NO – Disables Regulator by-pass control. The drive uses the normal PFA reference: 1106 REF2 SELECT.


1 = YES – Enables Regulator by-pass control.

- The process PID regulator is bypassed. Actual value of PID is used as the PFA reference (input). Normally EXT REF2 is used as the PFA reference.
- The drive uses the feedback signal defined by 4014 FBK SEL (or 4114) for the PFA frequency reference.
- The figure shows the relation between the control signal 4014 FBK SEL (OR 4114) and the speed regulated motor's frequency in a three-motor system.

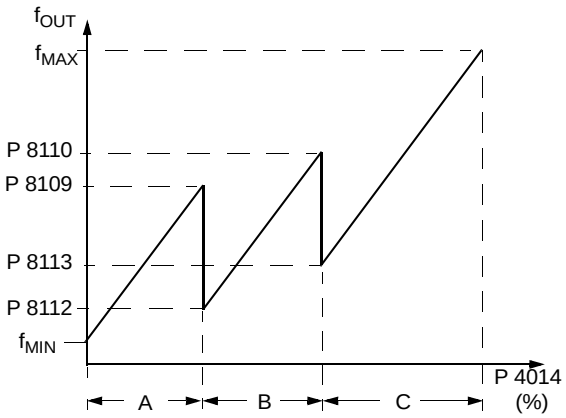

A = No auxiliary motors running
B = One auxiliary motor running
C = Two auxiliary motors running

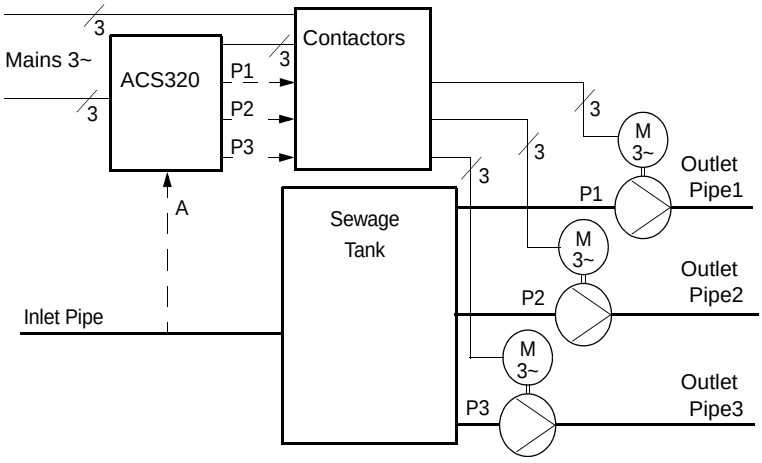Group 81: PFA					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
	Example: In the diagram below, the pumping station's outlet flow is controlled by the measured inlet flow (A).  				
8122	**PFA START DELAY**	**0.00…10.00 s**	**0.01 s**	**0.50 s**	
	Sets the start delay for speed regulated motors in the system. Using the delay, the drive works as follows: • Switches on the contactor of the speed regulated motor – connecting the motor to the ACH550 power output. • Delays motor start for the time 8122 PFA START DELAY. • Starts the speed regulated motor. • Starts auxiliary motors. See parameter 8115 for delay. **Warning! Motors equipped with star-delta starters require a PFA Start Delay.** • After the ACH550 relay output switches a motor On, the star-delta starter must switch to the star-connection and then back to the delta-connection before the drive applies power. • So, the PFA Start Delay must be longer than the time setting of the star-delta starter.				
8123	**PFA ENABLE**	**0…1**	**-**	**0**	✓
	Sets the start delay for speed regulated motors in the system. Using the delay, the drive works as follows: • Switches on the contactor of the speed regulated motor – connecting the motor to the ACH550 power output. • Delays motor start for the time 8122 PFA START DELAY. • Starts the speed regulated motor. • Starts auxiliary motors. See parameter 8115 for delay. **Warning! Motors equipped with star-delta starters require a PFA Start Delay.** • After the ACH550 relay output switches a motor On, the star-delta starter must switch to the star-connection and then back to the delta-connection before the drive applies power. • So, the PFA Start Delay must be longer than the time setting of the star-delta starter.				

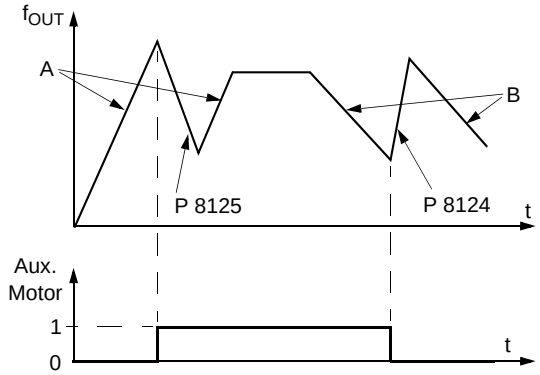Group 81: PFA					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
8124	**ACC IN AUX STOP**	**0.0…1800.0 s**	**0.1 s**	**0.0**	
	Sets the PFA acceleration time for a zero-to-maximum frequency ramp. This PFA acceleration ramp: • Applies to the speed regulated motor, when an auxiliary motor is switched off. • Replaces the acceleration ramp defined in Group 22: Accel / Decel. • Applies only until the output of the regulated motor increases by an amount equal to the output of the switched off auxiliary motor. Then the acceleration ramp defined in Group 22: Accel / Decel applies. 0 = NOT SEL. 0.1…1800 = Activates this function using the value entered as the acceleration time.  • A = speed regulated motor accelerating using Group 22 parameters (2202 or 2205). • B = speed regulated motor decelerating using Group 22 parameters (2203 or 2206). • At aux. motor start, speed regulated motor decelerates using 8125 DEC IN AUX START. • At aux. motor stop, speed regulated motor accelerates using 8124 ACC IN AUX STOP.				
8125	**DEC IN AUX START**	**0.0…1800.0 s**	**0.1 s**	**0.0**	
	Sets the PFA deceleration time for a maximum-to-zero frequency ramp. This PFA deceleration ramp: • Applies to the speed regulated motor, when an auxiliary motor is switched on. • Replaces the deceleration ramp defined in Group 22 ACCEL / DECEL. • Applies only until the output of the regulated motor decreases by an amount equal to the output of the auxiliary motor. Then the deceleration ramp defined in Group 22 ACCEL / DECEL applies. 0 = NOT SEL. 0.1…1800 = Activates this function using the value entered as the acceleration time.				
8126	**TIMED AUTOCHANGE**	**0…4**	**1**	**0**	
	Sets the autochange with timer. When enables, autochange is controlled with the timer functions. 0 = NOT SEL. 1 = Timer 1 – Enables autochange when Timer 1 is active. 2…4 Timer 2…4 – Enables autochange when Timer 2…4 is active.				

Group 81: PFA					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
8127	**MOTORS**	**0…7**	**1**	**0**	✓
	Sets the actual number of PFA controlled motors (maximum 6 motors, 1 speed regulated, 3 connected direct-on-line and 3 spare motors). • This value includes also the speed regulated motor. • This value must be compatible with number of relays allocated to PFA if the autochange function is used. • If Autochange function is not used, the speed regulated motor does not need to have a relay output allocated to PFA but it needs to be included in this value.				
8128	**AUX START ORDER**				
	Sets the start order of the auxiliary motors. 1 = EVEN RUNTIME – Time sharing is active. The start order depends on the run times. 2 = RELAY ORDER – The start order is fixed to be the order of the relays.				

Group 98: Options

This group configures for options, in particular, enabling serial communication with the drive.

Group 98: Options					
Code	**Description**	**Range**	**Resolution**	**Default**	**S**
9802	**COMM PROT SEL**	**0…5**	**1**	**0**	
	Selects the communication protocol. 0 = NOT SEL – No communication protocol selected. 1 = STD MODBUS – The drive communicates with Modbus via the RS485 channel (X1-communications, terminal). • See also parameter Group 53 EFB PROTOCOL. 2 = N2 – Enables fieldbus communication with the drive using Metasys N2 protocol via the RS485 serial link (X1-communications terminal). 3 = FLN – Enables fieldbus communication with the drive using FLN protocol via the RS485 serial link (X1-communications terminal). 5 = BACNET – Enables fieldbus communication with the drive using BACnet protocol via the RS485 serial link (X1-communications terminal).				

11


Fieldbus control with embedded fieldbus

System overview

The drive can be connected to an external control system via embedded fieldbus. The embedded fieldbus supports Modbus RTU, BACnet®, Metasys® N2 and APOGEE® FLN Protocols.

Embedded fieldbus connection is either RS-232 (control panel connector X2) or RS-485 (I/O terminals 23…26). The maximum length of the communication cable with RS-232 is restricted to 3 meters.

RS-232 is designed for a point-to-point application (a single master controlling one slave). RS-485 is designed for a multipoint application (a single master controlling one or more slaves).

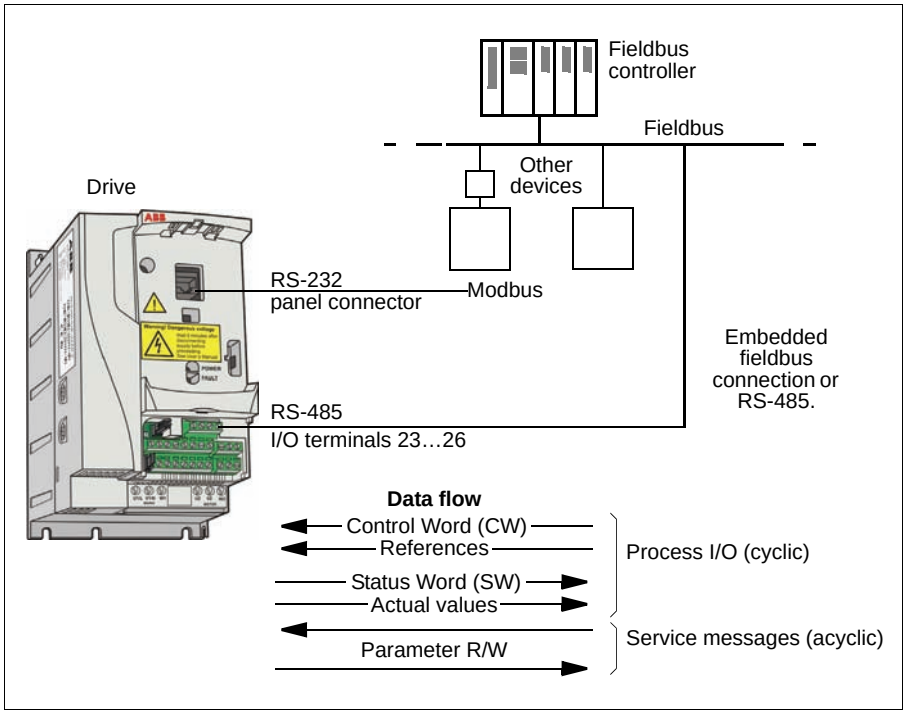

The drive can be set to receive all of its control information through the fieldbus interface, or the control can be distributed between the fieldbus interface and other available sources, eg digital and analog inputs.

Control Interface

In general, the basic control interface between the fieldbus system and the drive consists of:

Protocol	Control Interface	Reference for more information
Modbus	• Output Words – Control word – Reference1 – Reference2 • Input Words – Status word – Actual value 1 – Actual value 2 – Actual value 3 – Actual value 4 – Actual value 5 – Actual value 6 – Actual value 7 – Actual value 8	The content of these words is defined by profiles. For details on the profiles used, see *ABB Control Profiles Technical Data*
N2	• Binary output objects • Analog output objects • Binary input objects • Analog input objects	*N2 Protocol Technical Data*
FLN	• Binary output points • Analog output points • Binary input points • Analog input points	*FLN Protocol Technical Data*
BACnet	• Device management • Binary output objects • Analog output objects • Binary input objects • Analog input objects	*BACnet Protocol Technical Data*

Note! The words “output” and “input” are used as seen from the fieldbus controller point of view. For example an output describes data flow from the fieldbus controller to the drive and appears as an input from the drive point of view.

Planning

Network planning should address the following questions:

- What types and quantities of devices must be connected to the network?
- What control information must be sent down to the drives?
- What feedback information must be sent from the drives to the controlling system?


Mechanical and Electrical Installation – EFB

Warning! Connections should be made only while the drive is disconnected from the power source.


Drive terminals 23…26 are for RS485 communications.

- Use Belden 9842 or equivalent. Belden 9842 is a dual twisted, shielded pair cable with a wave impedance of 120 Ω.
- Use one of these twisted shielded pairs for the RS485 link. Use this pair to connect all A (-) terminals together and all B (+) terminals together.
- Use one of the wires in the other pair for the logical ground (terminal 26), leaving one wire unused.
- Do not directly ground the RS485 network at any point. Ground all devices on the network using their corresponding earthing terminals.
- As always, the grounding wires should not form any closed loops, and all the devices should be earthed to a common ground.
- Connect the RS485 link in a daisy-chained bus, without dropout lines.
- To reduce noise on the network, terminate the RS485 network using 120 Ω resistors at both ends of the network. Use the DIP switch to connect or disconnect the termination resistors. See following wiring diagram.
- For configuration information see the following:
  - below.
  - *Activate Drive Control Functions – EFB* on page *265*.
  - The appropriate EFB protocol specific technical data. For example, *Modbus Protocol Technical Data* on page *307*.

Preferred Wiring Diagram

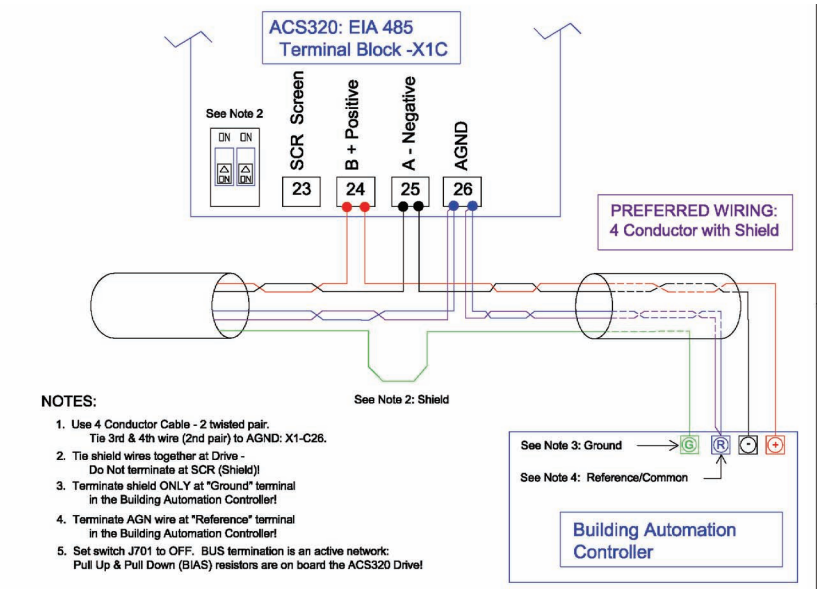
ACS320: EIA 485
Terminal Block -X1C
See Note 2
SCR Screen
B + Positive
A - Negative
AGND
23
24
25
26
PREFERRED WIRING:
4 Conductor with Shield
See Note 2: Shield
See Note 3: Ground
See Note 4: Reference/Common
Building Automation Controller
NOTES:
1. Use 4 Conductor Cable - 2 twisted pair.
Tie 3rd & 4th wire (2nd pair) to AGND: X1-C26.
2. Tie shield wires together at Drive -
Do Not terminate at SCR (Shield)!
3. Terminate shield ONLY at "Ground" terminal
in the Building Automation Controller!
4. Terminate AGN wire at "Reference" terminal
in the Building Automation Controller!
5. Set switch J701 to OFF. BUS termination is an active network:
Pull Up & Pull Down (BIAS) resistors are on board the ACS320 Drive!

Alternate Wiring Diagram

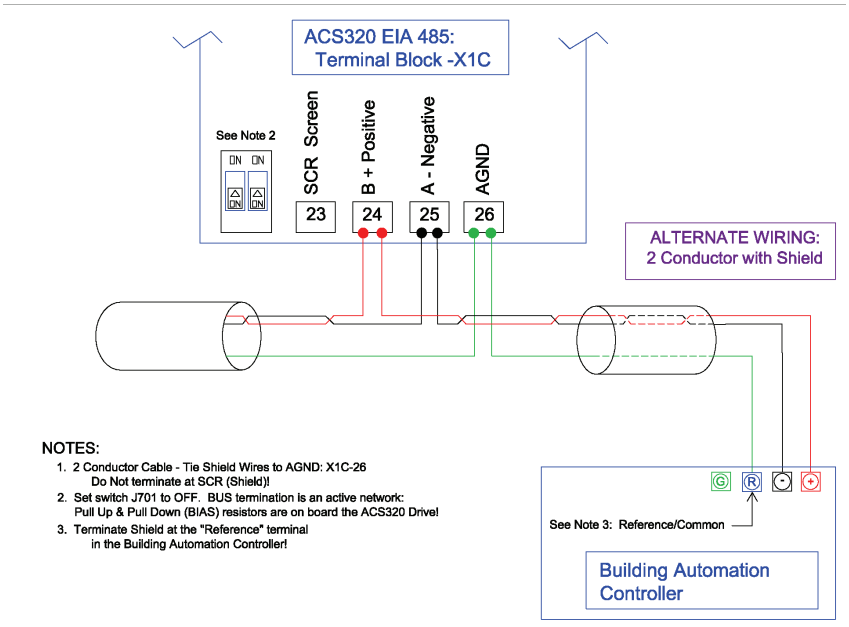
ACS320 EIA 485:
Terminal Block -X1C
See Note 2
SCR Screen
B + Positive
A - Negative
AGND
23
24
25
26
ALTERNATE WIRING:
2 Conductor with Shield
See Note 3: Reference/Common
Building Automation Controller
NOTES:
1. 2 Conductor Cable - Tie Shield Wires to AGND: X1C-26
Do Not terminate at SCR (Shield)!
2. Set switch J701 to OFF. BUS termination is an active network:
Pull Up & Pull Down (BIAS) resistors are on board the ACS320 Drive!
3. Terminate Shield at the "Reference" terminal
in the Building Automation Controller!

Communication Set-up – EFB

Serial Communication Selection

To activate the serial communication, set parameter 9802 COMM PROTOCOL SEL =

- 1 (STD MODBUS).
- 2 (N2)
- 3 (FLN)
- 5 (BACNET)

Note! If you cannot see the desired selection on the panel, your drive does not have that protocol software in the application memory.

Serial Communication Configuration

Setting 9802 automatically sets the appropriate default values in parameters that define the communication process. These parameters and descriptions are defined below. In particular, note that the station Id may require adjustment.

Code	Description	EFB Protocol Reference			
		Modbus	N2	FLN	BACnet
5301	EFB PROTOCOL ID Contains the identification and program revision of the protocol.	Do not edit. Any non-zero value entered for parameter 9802 COMM PROT SEL, sets this parameter automatically. The format is: XXYY, where xx = protocol ID, and YY = program revision.			
5302	EFB STATION ID Defines the node address of the RS485 link.	Set each drive on the network with a unique value for this parameter. When this protocol is selected, the default value for this parameter is: 1 **Note:** For a new address to take affect, the drive power must be cycled **OR** 5302 must first be set to 0 before selecting a new address. Leaving 5302 = 0 places the RS485 channel in reset, disabling communication.			Sets MS/TP MAC ID. A temporary value of 0 places the protocol channel in reset.

Code	Description	EFB Protocol Reference			
		Modbus	**N2**	**FLN**	**BACnet**
5303	EFB BAUD RATE Defines the communication speed of the RS485 link in kbits per second (kbits/s). 1.2 kbits/s 2.4 kbits/s 4.8 kbits/s 9.6 kbits/s 19.2 kbits/s 38.4 kbits/s 57.6 kbits/s 76.8 kbits/s	When this protocol is selected, the default value for this parameter is			When this protocol is selected, the default value for this parameter is: 38400.
		9.6	9.6	4.8	
5304	EFB PARITY Defines the data length, parity and stop bits to be used with the RS485 link communication. The same settings must be used in all on-line stations. 0 = 8N1 – 8 data bits, No parity, one stop bit. 1 = 8N2 – 8 data bits, No parity, two stop bits. 2 = 8E1 – 8 data bits, Even parity, one stop bit. 3 = 8O1 – 8 data bits, Odd parity, one stop bit.	When this protocol is selected, the default value for this parameter is: 1	When this protocol is selected, the default value for this parameter is: 0		
					Sets MS/TP character format.
5305	EFB CTRL PROFILE Selects the communication profile used by the EFB protocol. 0 = ABB DRV LIM – Operation of Control/Status Words conform to ABB Drives Profile, as used in ACH400. 1 = DCU PROFILE – Operation of Control/Status Words conform to 32-bit DCU Profile. 2 = ABB DRV FULL – Operation of Control/Status Words conform to ABB Drives Profile, as used in ACH600/800.	When this protocol is selected, the default value for this parameter is: 0	N/A. When this protocol is selected, the default value for this parameter is: 0. Changing the value for this parameter has no affect on this protocol's behavior.		

Code	Description	EFB Protocol Reference			
		Modbus	N2	FLN	BACnet
5310	EFB PAR10	Not used for Comm setup.	Sets them response turnaround time in milliseconds. When this protocol is selected, the default value is:		
			3 msec.	0 msec.	5 msec.
5311	EFB PAR11	Not used for Comm setup.			This parameter, together with parameter 5317, EFB PAR 17, sets BACnet Device Object Instance IDs: • For the range 1 to 65,535: This parameter sets the ID directly (5317 must be 0). For example, the following values set the ID to 49134: 5311 = 49134 and 5317 = 0. • For IDs > 65,335: The ID equals 5311's value plus 10,000 times 5317's value. For example, the following values set the ID to 71234: 5311 = 1234 and 5317 = 7.
5312	EFB PAR12	Not used for Comm setup.			This parameter sets the BACnet Device Object Max Info Frames Property.
5313	EFB PAR13	Not used for Comm setup.			This parameter sets the BACnet Device Object Max Master Property..
5314	EFB PAR14	Not used for Comm setup.			
5315	EFB PAR15	Not used for Comm setup.			
5316	EFB PAR 16	Not used for Comm setup.			This parameter indicates the count of MS/TP tokens passed to this drive.
5317	EFB PAR17				This parameter works with parameter 5311 to set BACnet Device Object Instance IDs. See parameter 5311.

Note! After any changes to the communication settings, protocol must be reactivated by either cycling the drive power, or by clearing and then restoring the station Id (5302) or use Reinitialize Device Service.

Activate Drive Control Functions – EFB

Controlling the Drive

Fieldbus control of various drive functions requires configuration to:

- Tell the drive to accept fieldbus control of the function.
- Define as a fieldbus input, any drive data required for control.
- Define as a fieldbus output, any control data required by the drive.

The following sections describe, at a general level, the configuration required for each control function. For the protocol-specific details, see the document supplied with the FBA module.

Start/Stop Direction Control

Using the fieldbus for start/stop/direction control of the drive requires:

- Drive parameter values set as defined below.
- Fieldbus controller supplied command(s) in the appropriate location. (The location is defined by the Protocol Reference, which is protocol dependent.)

Drive Parameter		Value	Description	Protocol Reference				
				Modbus[1]		N2	FLN	BACnet
				abb drv	dcu profile			
1001	EXT1 COMMANDS	10 (COMM)	Start/Stop by fieldbus with Ext1 selected.	40001 bits 0…3	40031 bits 0, 1	BO1	24	BV10
1002	EXT2 COMMANDS	10 (COMM)	Start/Stop by fieldbus with Ext2 selected.	40001 bits 0…3	40031 bits 0, 1	BO1	24	BV10
1003	DIRECTION	3 (REQUEST)	Direction by fieldbus.	4002/ 4003[2]	40031 bit 3	BO2	22	BV11

1.For Modbus, the protocol reference can depend on the profile used, hence two columns in these tables. One column refers to the ABB Drives profile, selected when parameter 5305 = 0 (ABB DRV LIM) or 5305 = 2 (ABB DRV FULL). The other column refers to the DCU profile selected when parameter 5305 = 1 (DCU PROFILE). See *ABB Control Profiles Technical Data* Section.

2.The reference provides direction control – a negative reference provides reverse rotation.

Input Reference Select

Using the fieldbus to provide input references to the drive requires:

- Drive parameter values set as defined below.

- Fieldbus controller supplied reference word(s) in the appropriate location. (The location is defined by the Protocol Reference, which is protocol dependent.)

Drive Parameter		Value	Setting	Protocol Reference				
				Modbus		N2	FLN	BACnet
				abb drv	dcu profile			
1102	EXT1/EXT2 SEL	8 (COMM)	Reference set selection by fieldbus.	40001 bit 11	40031 bit 5	BO5	26	BV13
1103	REF1 SEL	8 (COMM)	Input reference 1 by fieldbus.	40002		AO1	60	AV16
1106	REF2 SEL	8 (COMM)	Input reference 2 by fieldbus.	40003		AO2	61	AV17

Reference Scaling

Where required, REFERENCES can be scaled. See the following, as appropriate:

- Modbus Register *40002* in the *Modbus Protocol Technical Data* section.
- *Reference Scaling* in the *ABB Control Profiles Technical Data* section.
- *N2 Analog Output Objects* in the *N2 Protocol Technical Data* section.
- The slope of points 60 and 61 in the *FLN Protocol Technical Data* section.

Miscellaneous Drive Control

NOTE: The user should change only the parameters for the functions you wish to control vial fieldbus. All other parameters should typically remain at factory default. For simple start/stop and speed reference fieldbus control, only parameters 1001 and 1103 need to be changed to comm.

Using the fieldbus for miscellaneous drive control requires:

- Drive parameter values set as defined below.
- Fieldbus controller supplied reference word(s) in the appropriate location. (The location is defined by the Protocol Reference, which is protocol dependent.)

Drive Parameter		Value	Setting	Protocol Reference				
				Modbus		N2	FLN	BACnet
				abb drv	dcu profile			
1601	RUN ENABLE	7 (COMM)	Run enable by fieldbus. (Not recommended[1])	40001 bit 3	40031 bit 6 (inverted)	BO4	35	BV12
1604	FAULT RESET SEL	8 (COMM)	Fault reset by fieldbus.	40001 bit 7	40031 bit 4	BO6	94	BV14

Drive Parameter		Value	Setting	Protocol Reference				
				Modbus		N2	FLN	BACnet
				abb drv	dcu profile			
1606	LOCAL LOCK	8 (COMM)	Source for local lock selection is the fieldbus.	Does not apply	40031 bit 14			
1607	PARAM SAVE	1 (SAVE)	Saves altered parameters to memory (then value returns to 0).	41607	40032 bit 2	BO18	N/A[1]	
1608	START ENABLE 1	7 (COMM)	Source for start enable 1 is the fieldbus Command word. (Not recommended)[1]	Does not apply.	40032 bit 2			BV20
1609	START ENABLE 2	7 (COMM)	Source for start enable 2 is the fieldbus Command word. (Not recommended)[1]		40032 bit 3			BV21
2013	MIN TORQUE SEL	7 (COMM)	Source for minimum torque selection is the fieldbus.		40031 bit 15			
2014	MAX TORQUE SEL	7 (COMM)	Source for maximum torque selection is the fieldbus.					
2201	ACC/DEC 1/2 SEL	7 (COMM)	Source for ramp pair selection is the fieldbus.		40031 bit 10			

1.ABB recommends hard wiring run permissive and safeties.

Relay Output Control

Using the fieldbus for relay output control requires:

- Drive parameter values set as defined below.
- Fieldbus controller supplied reference word(s) in the appropriate location. (The location is defined by the Protocol Reference, which is protocol dependent.)

Drive Parameter		Value	Setting	Protocol Reference				
				Modbus		N2	FLN	BACnet
				abb drv	dcu profile			
1401	RELAY OUTPUT 1	35 (COMM)	Relay Output 1 controlled by fieldbus.	40134 bit 0 or 00033		BO7	40	BO0
1402[1]	RELAY OUTPUT 2	35 (COMM)	Relay Output 2 controlled by fieldbus.	40134 bit 1 or 00034		BO8	41	BO1
1403[1]	RELAY OUTPUT 3	35 (COMM)	Relay Output 3 controlled by fieldbus.	40134 bit 2 or 00035		BO9	42	BO2

Drive Parameter		Value	Setting	Protocol Reference				
				Modbus		N2	FLN	BACnet
				abb drv	dcu profile			
1410[1]	RELAY OUTPUT 4	35 (COMM)	Relay Output 4 controlled by fieldbus.	40134 bit 3 or 00036		BO10	43	BO3

1. More than 1 relay requires the addition of a relay extension module.

For example: To control relays 1 and 2 using serial communication:
Set parameters 1401 RELAY OUTPUT 1 and 1402 RELAY OUTPUT 1 = 35 (COMM).

Then, for example using N2:

- To turn Relay 1 On: Force object B07 to On.
- To turn Relay 2 On: Force object B08 to On.
- To turn both Relay 1 and 2 On: Force objects B07 and B08 On.

Note! Relay status feedback occurs without configuration as defined below.

Drive Parameter		Value	Setting	Protocol Reference				
				Modbus		N2	FLN	BACnet
				abb drv	dcu profile			
0122	RO 1-3 STATUS	Relay 1…3 status.	40122	0122		BI4… BI6	76… 78	BI0… BI2
0123	RO 4 STATUS	Relay 4 status.	40123	0123		BI7	79	BI3

Analog Output Control

Using the fieldbus for analog output control requires:

- Drive parameter values set as defined below.
- Fieldbus controller supplied reference word(s) in the appropriate location. (The location is defined by the Protocol Reference, which is protocol dependent.)

Drive Parameter		Value	Setting	Protocol Reference				
				Modbus		N2	FLN	BACnet
				abb drv	dcu profile			
1501	AO1 CONTENT SEL	135 (COMM VALUE 1)	Analog Output 1 controlled by writing to parameter 0135.	–		–	–	–
0135	COMM VALUE 1	–		40135		AO14	46	AO0

PID Control Setpoint Source

Use the following settings to select the fieldbus as the setpoint source for PID loops:

Drive Parameter		Value	Setting	Protocol Reference				
				Modbus		N2	FLN	BACnet
				abb drv	dcu profile			
4010	SET POINT SEL (Set 1)	8 (COMM VALUE 1) 9 (COMM + AI1) 10 (COMM*AI1)	Setpoint is either: Input Reference 2 (+/-/* AI1). Control requires parameter 1106 value = comm. Process PID setpoint. Control requires parameter 1106 value = pid1 out and parameter 4010 value = comm.	40003		AO2	61	AV17
4110	SET POINT SEL (Set 2)							
4210	SET POINT SEL (Ext/Trim)							

Communication Fault

When using fieldbus control, specify the drive's action if serial communication is lost.

Drive Parameter		Value	Description
3018	COMM FAULT FUNC	0 (NOT SEL) 1 (FAULT) 2 (CONST SP7) 3 (LAST SPEED)	Set for appropriate drive response.
3019	COMM FAULT TIME	Set time delay before acting on a communication loss.	

Feedback from the Drive – EFB

Pre-defined Feedback

Inputs to the controller (drive outputs) have pre-defined meanings established by the protocol. This feedback does not require drive configuration. The following table lists a sample of feedback data. For a complete listing, see input word/point/object listings in the technical data for the appropriate protocol starting on *274*.

Drive Parameter		Protocol Reference			
		Modbus	N2	FLN	BACnet
0102	SPEED	40102	AI3	5	AV0
0103	FREQ OUTPUT	40103	AI1	2	AV1
0104	CURRENT	40104	AI4	6	AV4
0105	TORQUE	40105	AI5	7	AV5
0106	POWER	40106	AI6	8	AV6
0107	DC BUS VOLT	40107	AI11	13	AV2
0109	OUTPUT VOLTAGE	40109	AI12	14	AV3
0115	KWH COUNTER	40115	AI8	10	AV8

Drive Parameter		Protocol Reference			
		Modbus	**N2**	**FLN**	**BACnet**
0118	DI1-3 STATUS – bit 1 (DI3)	40118	BI10, BI11, BI12,	70, 71, 72	BI6, BI7, BI8
0122	RO1-3 STATUS	40122	BI4, BI5, BI6	76, 77, 78	BI0, BI1, BI2
0301	FB STATUS WORD – bit 0 (STOP)	40301 bit 0	BI1	23	BV0
0301	FB STATUS WORD – bit 2 (REV)	40301 bit 2	BI2	21	BV1

Note! With Modbus, any parameter can be accessed using the format: 4 followed by the parameter number.

Mailbox Read/Write

The ACS320 provides a “Mailbox” function to access parameters that have not been pre-defined by the protocol. Using mailbox, any drive parameter can be identified and read. Mailbox can also be used to adjust parameter settings by writing a value to any parameter identifiedThe following table describes the use of this function.

Name	Description	Protocol Reference			
		Modbus[1]	N2	FLN	BACnet
Mailbox Parameter	Enter the number of the drive parameter to access.	Does not apply.	AO19	95	AV25
Mailbox Data	Contains the parameter value after a read, or enter the desired parameter value for a write.		AO20	96	AV26
Mailbox Read	A binary value triggers a read – the value of the “Mailbox Parameter” appears in “Mailbox data”.		BO19	97	BV15
Mailbox Write	A binary value triggers a write – the drive value for the “Mailbox Parameter” changes to the value in “Mailbox data”.		BO20	98	BV16

1.As noted above, Modbus provides direct access to all parameters using the format: 4 followed by the parameter number.

Actual Value Scaling

The scaling of actual values can be protocol dependent. In general, for Actual Values, scale the feedback integer using the parameter’s resolution. (See “Parameter Descriptions” section for parameter resolutions.) For example:

Feedback Integer	Parameter Resolution	(Feedback Integer) * (Parameter Resolution) = Scaled Value
1	0.1 mA	1 * 0.1 mA = 0.1 mA
10	0.1%	10 * 0.1% = 1%

Where parameters are in percent, the “Parameter Descriptions” section specifies what parameter corresponds to 100%. In such cases, to convert from percent to engineering units, multiply by the value of the parameter that defines 100% and divide by 100%. For example:

Feedback Integer	Parameter Resolution	Value of the Parameter that defines 100%	(Feedback Integer) * (Parameter Resolution) * (Value of 100% Ref.) / 100% = Scaled Value
10	0.1%	1800 rpm[1]	10 * 0.1% * 1800 RPM / 100% = 18 rpm
100	0.1%	600 Hz[2]	100 * 0.1% * 600 Hz / 100% = 60 Hz

1. Assuming, for the sake of this example, that the Actual Value uses parameter 9908 MOT NOM SPEED as the 100% reference, and that 9908 = 1800 rpm.

2. Assuming, for the sake of this example, that the Actual Value uses parameter 9907 MOT NOM FREQ as the 100% reference, and that 9907 = 6.00 Hz.

Although Actual Value scaling could differ from the above for the N2 and FLN protocols, it currently does not. To confirm, see the following sections, as appropriate:

- *N2 Analog Input Objects* in the *N2 Protocol Technical Data* section.
- *Scaling Drive Feedback Values* in the *FLN Protocol Technical Data* section.

Scaling does not apply for the BACnet protocol.

Diagnostics – EFB

Fault Queue for Drive Diagnostics

For general ACS320 diagnostics information, see “Diagnostics” in the ACS320 User’s Manual. The three most recent ACS320 faults are reported to the fieldbus as defined below.

Drive Parameter		Protocol Reference			
		Modbus	N2	FLN	BACnet
0401	Last Fault	40401	17	90	AV18
0412	Previous Fault 1	40402	18	91	AV19
0413	Previous Fault 2	40403	19	92	AV20

Serial Communication Diagnostics

Network problems can be caused by multiple sources. Some of these sources are:

- Loose connections
- Incorrect wiring (including swapped wires)
- Bad grounding
- Duplicate station numbers
- Incorrect setup of drives or other devices on the network

The major diagnostic features for fault tracing on an EFB network include Group 53 EFB Protocol parameters 5306…5309. The “Parameter Descriptions” section describes these parameters in detail.

Diagnostic Situations

The sub-sections below describe various diagnostic situations – the problem symptoms and corrective actions.

Normal Operation

During normal network operation, 5306…5309 parameter values act as follows at each drive:

- 5306 EFB OK MESSAGES advances (advances for each application message properly received and addressed to this drive).

- 5307 EFB CRC ERRORS does not advance at all (advances when an invalid message CRC is received).
- 5308 EFB UART ERRORS does not advance at all (advances when character format errors are detected, such as parity or framing errors).
- 5309 EFB status value varies depending on network traffic.
- BACnet protocol: 5316 EFB PAR 16 (MS/TP token counter) advances for each token passed to this drive. (Does not apply for other protocols.)

Loss of Communication

The AC320 behavior, if communication is lost, was configured in *Communication Fault*. The parameters are 3018 COMM FAULT FUNC and 3019 COMM FAULT TIME. The “Parameter Descriptions” section in the ACH550 User’s Manual describes these parameter.

No Master Station on Line

If no master station is on line: Neither the EFB OK MESSAGES nor the errors (5307 EFB CRC ERRORS and 5308 EFB UART ERRORS) increase on any of the stations.

To correct:

- Check that a network master is connected and properly programmed on the network.
- Verify that the cable is connected, and is not cut or short circuited.

Duplicate Stations

If two or more stations have duplicate numbers:

- Two or more drives cannot be addressed.
- Every time there is a read or write to one particular station, the value for 5307 EFB CRC ERRORS or 5308 EFB UART ERRORS advances.

To correct: Check all station numbers and edit conflicting values.

Swapped Wires

If the communication wires are swapped (terminal A on one drive is connected to terminal B on another):

- The value of 5306 EFB OK MESSAGES does not advance.
- The values of 5307 EFB CRC ERRORS and 5308 EFB UART ERRORS are advancing.

To correct: Check that the EIA-485 lines are not swapped.

Fault 28 – Serial 1 Err

If the drive’s control panel shows fault code 28 “SERIAL 1 ERR”, check for either of the following:

- The master system is down. To correct, resolve problem with master system.

- The communication connection is bad. To correct, check communication connection at the drive.
- The time-out selection for the drive is too short for the given installation. The master is not polling the drive within the specified time-out delay. To correct, increase the time set by parameter 3019 COMM FAULT TIME.

Fault 31 – EFB1

For BACnet: If the drive's control panel shows fault code 31 "EFB1", the drive has an invalid Device Object Instance ID. To correct, use parameters 5311 and 5317 and establish a unique drive ID that is in the range 1 to 4,194,303.

Faults 31…33 – EFB1…EFB3

Except as noted above, these three EFB fault codes (listed for the drive in "Diagnostics" in the ACH550 User's Manual, fault codes 31…33) are not used.

Intermittent Off-line Occurrences

The problems described above are the most common problems encountered with ACS320 serial communication. Intermittent problems might also be caused by:

- Marginally loose connections,
- Wear on wires caused by equipment vibrations,
- Insufficient grounding and shielding on both the devices and on the communication cables.

N2 Protocol Technical Data

Overview


The N2 Fieldbus connection to the ACS320 drives is based on an industry standard RS-485 physical interface. The N2 Fieldbus protocol is a master-slave type, serial communication protocol, used by the Johnson Controls Metasys® system. In the Metasys architecture the N2 Fieldbus connects object interfaces and remote controllers to Network Control Units (NCUs).

The N2 Fieldbus can also be used to connect ACS320 drives to the Metasys Companion product line.

This section describes the use of the N2 Fieldbus with the ACS320 drives' connection and does not describe the protocol in detail.

Supported Features

In the N2 Fieldbus protocol the ACS320 drive appears as a “virtual object”.

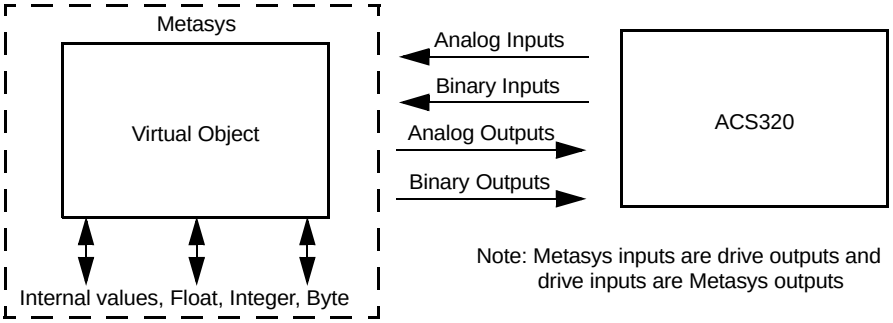

A virtual object is made up of:

- Analog Inputs
- Binary Inputs
- Analog Outputs
- Binary Outputs
- Internal values for Floating point, Integer, and Byte values.

The ACS320 drive does not support N2 Fieldbus communication “internal values”.

All of the Analog and Binary I/O objects are listed below, starting with *N2 Analog Input Objects* below.

Analog Input – The analog input objects support the following features:

- Analog Input actual value in engineering units
- Low Alarm limit
- Low Warning limit
- High Warning limit
- High Alarm limit
- Differential value for the hysteresis of the Alarms and Warnings
- Change of State (COS) enabled
- Alarm Enabled
- Warning Enabled
- Override value is received, but there is no action taken.

Binary Input – The binary input objects support the following features:

- Binary Input actual value
- Normal / Alarm state specification
- Alarm Enabled

- Change of State (COS) enabled
- Override value is received, but there is no action taken.

Analog Output – The analog output objects support the following features:


- Analog Output value in engineering units
- Override value is used to change the Analog Output value. It is not possible to return to the previous value by removing the override. The override feature is used only to change the value.

Binary Output – The binary output objects support the following features:


- Binary Output value
- Override value is used to change the Binary Output value. It is not possible to return to the previous value by removing the override. The override feature is used only to change the value.

Metasys Integration

The following diagram shows the drives' integration to the Johnson Controls Metasys system.

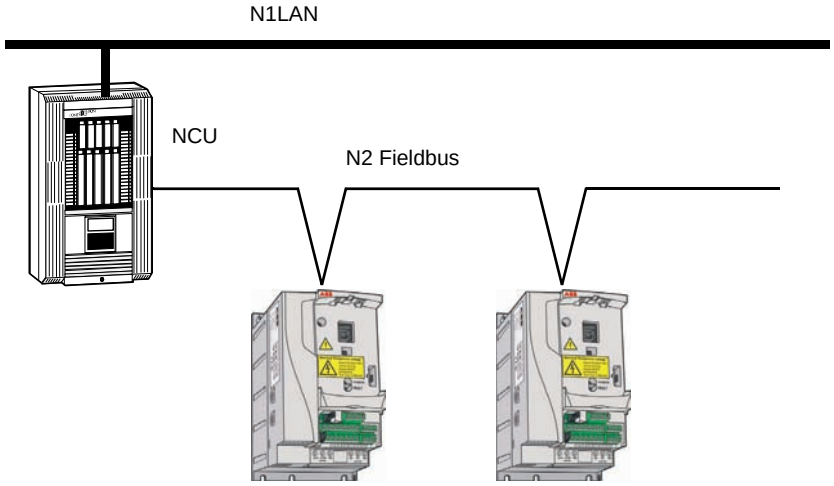

The following diagram shows the drives' integration to the Johnson Controls Metasys Companion system.

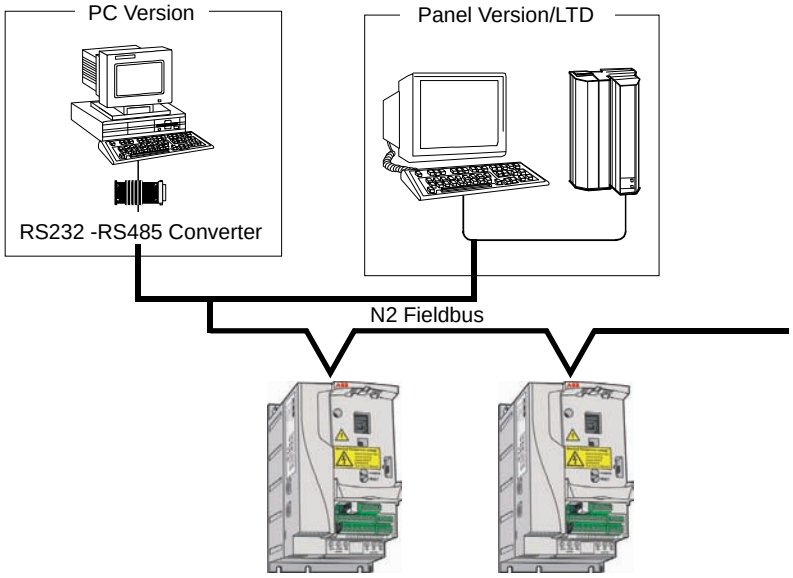

On the N2 Fieldbus each ACS320 drive can be accessed by the full complement of Metasys FMS features, including Change-of-State (COS) monitoring, alarm notification, scheduling, trend, and totalization.

On one N2 Fieldbus segment there can be up to 32 nodes while integrating ACS320 drives with Johnson Controls Metasys.

Drive Device Type

For the Metasys and Metasys Companion products, the device type for the ACS320 drive is VND.

N2 Analog Input Objects

The following table lists the N2 Analog Input objects defined for the ACS320 drive.

N2 Analog Inputs:					
Number	**Object**	**Drive Parameter**	**Scale Factor**	**Units**	**Range**
AI1	OUTPUT FREQUENCY	0103	10	Hz	0…250
AI2	RATED SPEED	Note 1	10	%	0 …100
AI3	SPEED	0102	1	rpm	0 …9999
AI4	CURRENT	0104	10	A	0…9999
AI5	TORQUE	0105	10	%	-200…200
AI6	POWER	0106	10	kW	0…9999

N2 Analog Inputs:					
Number	**Object**	**Drive Parameter**	**Scale Factor**	**Units**	**Range**
AI7	DRIVE TEMPERATURE	0110	10	°C	0 …125
AI8	KILOWATT HOURS	0115	1	kWh	0…65535
AI9	MEGAWATT HOURS	0141	1	MWh	0…65535
AI10	RUN TIME	0114	1	H	0…65535
AI11	DC BUS VOLTAGE	0107	1	V	0…999
AI12	OUTPUT VOLTAGE	0109	1	V	0…999
AI13	PRC PID FEEDBACK	0130	10	%	0…100
AI14	PRC PID DEVIATION	0132	10	%	0…100
AI15	EXT PID FEEDBACK	0131	10	%	0…100
AI16	EXT PID DEVIATION	0133	10	%	0…100
AI17	LAST FAULT	0401	1		fault code
AI18	PREV FAULT	0402	1		fault code
AI19	OLDEST FAULT	0403	1		fault code
AI20	AI 1 ACTUAL	0120	10	%	0…100
AI21	AI 2 ACTUAL	0121	10	%	0…100
AI22	AO 1 ACTUAL	0124	10	mA	0…20
AI24	MOTOR TEMP	0145	1	°C	0…200
AI25	REVOLUTION CNT	0142	1	MREV	0…32767

1.RATED SPEED is a percent of maximum frequency (parameter 2008) if the drive is in scalar mode, and is a percent of maximum speed (parameter 2002) in speed mode.

N2 Binary Input Objects

The following table lists the N2 Binary Input objects defined for the ACS320 drive.

N2 Binary Inputs:			
Number	**Object**	**Drive Parameter**	**Range**
BI1	STOP/RUN	Status Word	0 = Stop, 1 = Drive Running
BI2	FORWARD/REVERSE	Status Word	0 = Forward, 1 = Reverse
BI3	FAULT STATUS	Status Word	0 = OK, 1 = Drive Fault
BI4	RELAY 1 STATUS	0122 (bit mask 04)	0 = Off, 1 = On
BI5	RELAY 2 STATUS	0122 (bit mask 02)	0 = Off, 1 = On[1]
BI6	RELAY 3 STATUS	0122 (bit mask 01)	0 = Off, 1 = On[1]
BI7	RELAY 4 STATUS	0123 (bit mask 04)	0 = Off, 1 = On[1]
BI10	INPUT 1 STATUS	0118 (bit mask 04)	0 = Off, 1 = On
BI11	INPUT 2 STATUS	0118 (bit mask 02)	0 = Off, 1 = On
BI12	INPUT 3 STATUS	0118 (bit mask 01)	0 = Off, 1 = On
BI13	INPUT 4 STATUS	0119 (bit mask 04)	0 = Off, 1 = On
BI14	INPUT 5 STATUS	0119 (bit mask 02)	0 = Off, 1 = On
BI16	EXTERNAL 2 SELECT	Status Word	0 = EXT1 = EXT2
BI17	HAND/AUTO	Status Word	0 = AUTO, 1 = HAND

N2 Binary Inputs:			
Number	**Object**	**Drive Parameter**	**Range**
BI18	ALARM	Status Word	0 = OK, 1 = ALARM
BI19	MAINTENANCE REQ	Status Word	0 = OK, 1 = MAINT REQ
BI20	DRIVE READY	Status Word	0 = Not Ready, 1 = Ready
BI21	AT SETPOINT	Status Word	0 = No, 1 = At Setpoint
BI22	RUN ENABLED	Status Word	0 = Not Enabled, 1 = Enabled
BI23	N2 LOCAL MODE	Status Word	0 = Auto, 1 = N2 Local
BI24	N2 CONTROL SRC	Status Word	0 = No, 1 = Yes
BI25	N2 REF1 SRC	Status Word	0 = No, 1 = Yes
BI26	N2 REF2 SRC	Status Word	0 = No, 1 = Yes

1.Require optional MREL relay output card.

N2 Analog Output Objects

The following table lists the N2 Analog Output objects defined for the ACS320 drive.

N2 Analog Outputs:					
Number	**Object**	**Drive Parameter**	**Scale Factor**	**Units**	**Range**
AO1	REFERENCE 1	Reference 1	10	%	0…100
AO2	REFERENCE 2	Reference 2	10	%	0…100
AO3	ACCEL TIME 1	2202	10	s	0.1…1800
AO4	DECEL TIME 1	2203	10	s	0.1…1800
AO5	CURRENT LIMIT	2003	10	A	0…1.3*I_{2N}
AO6	PID1-CONT GAIN	4001	10	%	0.1…100
AO7	PID1-CONT I-TIME	4002	10	s	0.1…600
AO8	PID1-CONT D-TIME	4003	10	s	0…10
AO9	PID1-CONT D FILTER	4004	10	s	0…10
AO10	PID2-CONT GAIN	4101	10	%	0.1…100
AO11	PID2-CONT I-TIME	4102	10	s	0.1…600
AO12	PID2-CONT D-TIME	4103	10	s	0…10
AO13	PID2-CONT D FILTER	4104	10	s	0…10
AO14	COMMAND AO 1	135	10	%	0…100
AO16	EXT PID SETPOINT	4211	10	%	0…100
AO17	SPD OUT MIN	2001/2007	10	%	0…200
AO18	SPD OUT MAX	2002/2008	10	%	0…200
A019	MAILBOX PARAMETER		1		0…65535
A020	MAILBOX DATA		1		0…65535

N2 Binary Output Objects

The following table lists the N2 Binary Output objects defined for the ACS320 drive.

N2 Binary Outputs:			
Number	**Object**	**Drive Parameter**	**Range**
BO1	STOP/START	Command Word	0 = Stop, 1 = Start to Speed
BO2	FORWARD/REVERSE	Command Word	0 = Forward, 1 = Reverse
BO3	PANEL LOCK	Command Word	0 = Open, 1 = Locked
BO4	RUN ENABLE	Command Word	0 = Enable, 1 = Disable
BO5	REF1/REF2 SELECT	Command Word	0 = Ref1, 1 = Ref2
BO6	FAULT RESET	Command Word	Change 0 -> 1 Resets
BO7	COMMAND RO 1	134 (bit mask 01)	0 = Off, 1 = On
BO8	COMMAND RO 2	134 (bit mask 02)	0 = Off, 1 = On[1]
BO9	COMMAND RO 3	134 (bit mask 04)	0 = Off, 1 = On[1]
BO10	COMMAND RO 4	134 (bit mask 08)	0 = Off, 1 = On[1]
BO13	RESET RUN TIME	114 (indirectly)	0 = N/A, 1 = On (Reset Run Time)
BO14	RESET KWH COUNT	115 (indirectly)	0 = N/A, 1 = On (Reset kWh Count)
BO15	PRC PID SELECT	4027 (indirectly)	0 = SET2, 1 = SET2
BO16	N2 LOCAL CTL[2]	Command Word	0 = Auto, 1 = N2
BO17	N2 LOCAL REF[2]	Command Word	0 = Auto, 1 = N2
BO18	SAVE PARAMETERS	1607 (indirectly)	0 = N/A, 1 = On (Save Parameters)
B019	READ MAILBOX		0 = No, 1 = Yes
B020	WRITE MAILBOX		0 = No, 1 = Yes

1.Requires optional MREL realy output card.

2.N2 LOCAL CTL and N2 LOCAL REF have priority over drive input terminals. Use these binary outputs for temporary N2 control of the drive when COMM is not the selected control source.

DDL File for NCU

The listing below is the Data Definition Language (DDL) file for ACS320 drives used with the Network Control Units.

This listing is useful when defining drive I/O objects to the Network Controller Units.

Below is the ACS320.DDL file listing.

```
************************************************************
*  ABB Drives, ACS 320 Variable Frequency Drive
************************************************************
CSMODEL "ACS_320","VND"

AITITLE "Analog_Inputs"
BITITLE "Binary_Inputs"
AOTITLE "Analog_Outputs"
BOTITLE "Binary_Outputs"

CSAI "AI1",N,N,"FREQ_ACT","Hz"
CSAI "AI2",N,N,"PCT_ACT","%"
```

```
CSAI "AI3",N,N,"SPEED","RPM"
CSAI "AI4",N,N,"CURRENT","A"
CSAI "AI5",N,N,"TORQUE","%"
CSAI "AI6",N,N,"POWER","kW"
CSAI "AI7",N,N,"DRV_TEMP","°C"
CSAI "AI8",N,N,"ENERGY_k","kWh"
CSAI "AI9",N,N,"ENERGY_M","MWh"
CSAI "AI10",N,N,"RUN_TIME","H"
CSAI "AI11",N,N,"DC_VOLT","V"
CSAI "AI12",N,N,"VOLT_ACT","V"
CSAI "AI13",N,N,"PID1_ACT","%"
CSAI "AI14",N,N,"PID2_DEV","%"
CSAI "AI15",N,N,"PID2_ACT","%"
CSAI "AI16",N,N,"PID2_DEV","%"
CSAI "AI17",N,N,"LAST_FLT","Code"
CSAI "AI18",N,N,"PREV_FLT","Code"
CSAI "AI19",N,N,"1ST_FLT","Code"
CSAI "AI20",N,N,"AI_1_ACT","%"
CSAI "AI21",N,N,"AI_2_ACT","%"
CSAI "AI22",N,N,"AO_1_ACT","mA"
CSAI "AI24",N,N,"MTR_TEMP","°C"
CSAI "AI25",N,N,"REVL_CNT",""

CSBI "BI1",N,N,"STOP/RUN","STOP","RUN"
CSBI "BI2",N,N,"FWD/REV","FWD","REV"
CSBI "BI3",N,N,"FAULT","OK","FLT"
CSBI "BI4",N,N,"RELAY_1","OFF","ON"
CSBI "BI5",N,N,"RELAY_2","OFF","ON"
CSBI "BI6",N,N,"RELAY_3","OFF","ON"
CSBI "BI7",N,N,"RELAY_4","OFF","ON"
CSBI "BI10",N,N,"INPUT_1","OFF","ON"
CSBI "BI11",N,N,"INPUT_2","OFF","ON"
CSBI "BI12",N,N,"INPUT_3","OFF","ON"
CSBI "BI13",N,N,"INPUT_4","OFF","ON"
CSBI "BI14",N,N,"INPUT_5","OFF","ON"
CSBI "BI16",N,N,"EXT1/2","EXT1","EXT2"
CSBI "BI17",N,N,"HND/AUTO","HAND","AUTO"
CSBI "BI18",N,N,"ALARM","OFF","ON"
CSBI "BI19",N,N,"MNTNCE_R","OFF","ON"
CSBI "BI20",N,N,"DRV_REDY","NO","YES"
CSBI "BI21",N,N,"AT_SETPT","NO","YES"
CSBI "BI22",N,N,"RUN_ENAB","NO","YES"
CSBI "BI23",N,N,"N2_LOC_M","AUTO","N2_L"
CSBI "BI24",N,N,"N2_CTRL","NO","YES"
CSBI "BI25",N,N,"N2_R1SRC","NO","YES"
CSBI "BI26",N,N,"N2_R2SRC","NO","YES"
CSAO "AO1",Y,Y,"REF_1","%"
CSAO "AO2",Y,Y,"REF_2","%"
CSAO "AO3",Y,Y,"ACCEL_1","s"
CSAO "AO4",Y,Y,"DECEL_1","s"
CSAO "AO5",Y,Y,"CURR_LIM","A"
```

```
CSAO "AO6",Y,Y,"PID1_GN","%"
CSAO "AO7",Y,Y,"PID1_I","s"
CSAO "AO8",Y,Y,"PID1_D","s"
CSAO "AO9",Y,Y,"PID1_FLT","s"
CSAO "AO10",Y,Y,PID2_GN","%"
CSAO "AO11",Y,Y,"PID2_I","s"
CSAO "AO12",Y,Y,"PID2_D","s"
CSAO "AO13",Y,Y,"PID2_FLT","s"
CSAO "AO14",Y,Y,"CMD_AO_1","%"
CSAO "AO16",Y,Y,"PI2_STPT","%"
CSAO "AO17",Y,Y,"MIN_SPD","%"
CSAO "AO18",Y,Y,"MAX_SPD","%"
CSAO "AO19",Y,Y,"MB_PARAM",""
CSAO "AO20",Y,Y,"MB_DATA",""
CSBO "BO1",Y,Y,"START","STOP","START"
CSBO "BO2",Y,Y,"REVERSE","FWD","REV"
CSBO "BO3",Y,Y,"PAN_LOCK","OPEN","LOCKED"
CSBO "BO4",Y,Y,"RUN_ENAB","DISABLE","ENABLE"
CSBO "BO5",Y,Y,"R1/2_SEL","EXT_1","EXT_2"
CSBO "BO6",Y,Y,"FLT_RSET","-","RESET"
CSBO "BO7",Y,Y,"CMD_RO_1","OFF","ON"
CSBO "BO8",Y,Y,"CMD_RO_2","OFF","ON"
CSBO "BO9",Y,Y,"CMD_RO_3","OFF","ON"
CSBO "BO10",Y,Y,"CMD_RO_4","OFF","ON"
CSBO "BO13",Y,Y,"RST_RTIM","OFF","RESET"
CSBO "BO14",Y,Y,"RST_KWH","OFF","RESET"
CSBO "BO15",Y,Y,"PID_SEL","SET1","SET2"
CSBO "BO16",Y,Y,"N2_LOC_C","AUTO","N2"
CSBO "BO17",Y,Y,"N2_LOC_R","EUTO","N2"
CSBO "BO18",Y,Y,"SAV_PRMS","OFF","SAVE"
CSBO "BO19",Y,Y,"READ_MB","NO","READ"
CSBO "BO20",Y,Y,"WRITE_MB","NO","WRITE"
```

FLN Protocol Technical Data

Overview

The FLN fieldbus connection to the ACS320 drives is based on an industry standard RS-485 physical interface. The FLN (Floor Level Network) Fieldbus protocol is a serial communication protocol, used by the Siemens APOGEE® system. The ACS320 interface is specified in Siemens application xxxx.

Supported Features

The ACS320 supports all required FLN features.

Reports

The ACS320 provides seven pre-defined reports. Using a report request generated from the FLN fieldbus controller, select one of the following sets of points. By

providing views of selected points, these reports are often easier to work with than views of the full point database.

ABB ACS320

FLN ABB ACH550 Report			
Point		**Subpoint Name**	**Data**
#	**Type**		
01	LAO	CTLR ADDRESS	Each host FLN application (e.g. CIS or Insight) controls both the particular data reported for each point, and the report format.
02	LAO	APPLICATION	
20	LAO	OVRD TIME	
29	LDO	DAY.NIGHT	

Startup

FLN Startup Report			
Point		**Subpoint Name**	**Data**
#	**Type**		
21	LDI	FWD.REV	Each host FLN application (e.g. CIS or Insight) controls both the particular data reported for each point, and the report format.
22	LDO	CMD FWD.REV	
23	LDI	STOP.RUN	
24	LDO	CMD STP.STRT	
25	LDI	EXT1.2 ACT	
26	LDO	EXT1.2 CMD	
34	LDI	ENA.DIS ACT	
35	LDO	ENA.DIS CMD	
36	LDI	FLN LOC ACT	
60	LAO	INPUT REF1	
61	LAO	INPUT REF2	
68	LDO	FLN LOC CTL	
69	LDO	FLN LOC REF	
94	LDO	RESET FAULT	

Overview

FLN Overview Report			
Point		**Subpoint Name**	**Data**
#	**Type**		
03	LAI	FREQ OUTPUT	Each host FLN application (e.g. CIS or Insight) controls both the particular data reported for each point, and the report format.
04	LAI	PCT OUTPUT	
05	LAI	SPEED	
06	LAI	CURRENT	
07	LAI	TORQUE	
08	LAI	POWER	
09	LAI	DRIVE TEMP	

FLN Overview Report			
Point		Subpoint Name	Data
#	Type		
10	LAI	DRIVE KWH	
11	LAI	DRIVE MWH	
12	LAI	RUN TIME	
13	LAI	DC BUS VOLT	
14	LAI	OUTPUT VOLT	
17	LAI	MOTOR TEMP	
18	LAI	MREV COUNTER	
21	LDI	FWD.REV	
23	LDI	STOP.RUN	
25	LDI	EXT1.2 ACT	
27	LDI	DRIVE READY	
28	LDI	AT SETPOINT	
33	LDI	HANDAUTO ACT	
34	LDI	ENA.DIS ACT	
36	LDI	FLN LOC ACT	

Drive I/O

FLN Drive I/O Report			
Point		Subpoint Name	Data
#	Type		
40	LDO	RO 1 COMMAND	Each host FLN application (e.g. CIS or Insight) controls both the particular data reported for each point, and the report format.
41	LDO	RO 2 COMMAND	
42	LDO	RO 3 COMMAND	
43	LDO	RO 4 COMMAND	
46	LAO	AO 1 COMMAND	
70	LDI	DI 1 ACTUAL	
71	LDI	DI 2 ACTUAL	
72	LDI	DI 3 ACTUAL	
73	LDI	DI 4 ACTUAL	
74	LDI	DI 5 ACTUAL	
76	LDI	RO 1 ACTUAL	
77	LDI	RO 2 ACTUAL	
78	LDI	RO 3 ACTUAL	
79	LDI	RO 4 ACTUAL	

Drive Config

FLN Drive Config. Report			
Point		**Subpoint Name**	**Data**
#	**Type**		
30	LAO	CURRENT LIM	Each host FLN application (e.g. CIS or Insight) controls both the particular data reported for each point, and the report format.
31	LAO	ACCEL TIME 1	
32	LAO	DECEL TIME 1	
48	LDO	RST RUN TIME	
49	LDO	RESET KWH	
59	LDO	LOCK PANEL	
66	LDO	SPD OUT MIN	
67	LDO	SPD OUT MAX	
95	LAO	MBOX PARAM	
96	LAO	MBOX DATA	
97	LDO	MBOX READ	
98	LDO	MBOX WRITE	

Process PID

FLN Process PID Report			
Point		**Subpoint Name**	**Data**
#	**Type**		
15	LAI	PRC PID FBCK	Each host FLN application (e.g. CIS or Insight) controls both the particular data reported for each point, and the report format.
16	LAI	PRC PID DEV	
50	LAO	PRC PID GAIN	
51	LAO	PRC PID ITIM	
52	LAO	PRC PID DTIM	
53	LAO	PRC PID DFIL	
54	LDO	PRC PID SEL	
60	LAO	INPUT REF1	
61	LAO	INPUT REF2	
82	LAI	AI 1 ACTUAL	
83	LAI	AI 2 ACTUAL	
84	LAI	AO 1 ACTUAL	

External PID

FLN External PID Report			
Point		**Subpoint Name**	**Data**
#	**Type**		
55	LAO	EXT PID GAIN	Each host FLN application (e.g. CIS or Insight) controls both the particular data reported for each point, and the report format.
56	LAO	EXT PID ITIM	
57	LAO	EXT PID DTIM	

FLN External PID Report			
Point		Subpoint Name	Data
#	Type		
58	LAO	EXT PID DFIL	
62	LAO	EXT PID STPT	
63	LAI	EXT PID FBCK	
64	LAI	EXT PID DEV	
82	LAI	AI 1 ACTUAL	
83	LAI	AI 2 ACTUAL	
84	LAI	AO 1 ACTUAL	

Scaling Drive Feedback Values

Feedback values are provided with units of percent, where 0% and 100% correspond to the range of the sensor being used to measure the control variable. These points have default units in Hz. If other units are required:

- Unbundle these points with appropriate slopes and intercepts.
- The new intercept equals the lowest value of the desired range.
- Calculate the new slope as follows:

$$\text{New Slope} = \frac{\text{(Desired Range, i.e. high - low values) x (Slope of Existing Point)}}{\text{Range of Existing Point}}$$

$$= \frac{\text{(60 Hz - 0 Hz) x (0.01)}}{\text{100\% - 0\%}} = 0.006$$

Example – You are controlling water temperature from a cooling tower using the ACS320 to control a fan. The temperature sensor has a range of 30 to 250 degrees Fahrenheit.

To unbundle the set point (INPUT REF 2), for commanding in degrees Fahrenheit, where 0…60 Hz is equal to 30…250° F:

New Intercept = 30 (the temperature that corresponds to 0%)

$$\text{New Slope} = \frac{\text{(Desired Range) x (Slope of Existing Point)}}{\text{Range of Existing Point}}$$

$$= \frac{\text{(250° F - 30° F) x (0.1)}}{\text{100\% - 0\%}} = 0.22$$

To unbundle the feedback (PRC PID FBCK) for monitoring in degrees Fahrenheit:

$$\text{New Intercept} = 30$$

$$\text{New Slope} = \frac{(\text{Desired Range}) \times (\text{Slope of Existing Point})}{\text{Range of Existing Point}}$$

$$= \frac{(250° \text{ F} - 30° \text{ F}) \times (0.01)}{100\% - 0\%} = 0.022$$

Loop Gains

PRC PID GAIN (Point 50) and PRC PID ITIM (Point 51) are PID parameters similar to the P and I gains in the APOGEE TECs. Because the ABB PI loop and the Siemens loop are structured differently, there is no a one-to-one correspondence between the gains. The following formulas allow translation from ABB gains to Siemens gains and vice versa:

- To convert from ABB PI gains to Siemens P and I gains:

$$\text{P GAIN}_{\text{Siemens}} = \text{PI GAIN}_{\text{ABB}} \times 0.0015$$

$$\text{I GAIN}_{\text{Siemens}} = \frac{\text{PI GAIN}_{\text{ABB}}}{\text{PI GAIN}_{\text{ABB}}} \times 0.0015$$

- To convert from Siemens P and I gains to ABB PI gains:

$$\text{P GAIN}_{\text{ABB}} = \text{PI GAIN}_{\text{Siemens}} \times 667$$

$$\text{I GAIN}_{\text{ABB}} = \frac{\text{PI GAIN}_{\text{Siemens}}}{\text{PI GAIN}_{\text{Siemens}}} \times 667$$

Point Database

The following table lists the point database for FLN / ACS320 (Application 2734).

FLN Point Database								
Point		**Subpoint Name**	**Factory Default**	**Engr. Units**	**Slope**	**Intercept**	**On Text**	**Off Text**
#	**Type**		**(SI Units)**					
01	LAO	CTLR ADDRESS	99	-	1	0	-	-
02	LAO	APPLICATION	2734	-	1		-	-
{03}	LAI	FREQ OUTPUT	0	Hz	0.1	0	-	-
{04}	LAI	PCT OUTPUT	0	PCT	0.1	0	-	-
{05}	LAI	SPEED	0	RPM	1	0	-	-
{06}	LAI	CURRENT	0	A	0.1		-	-

FLN Point Database								
Point		Subpoint Name	Factory Default	Engr. Units	Slope	Intercept	On Text	Off Text
#	Type		(SI Units)					
{07}	LAI	TORQUE	0	PCT	0.1	-200	-	-
{08}	LAI	POWER	0 (0)	HP (KW)	0.134 0.1	0 0	-	-
{09}	LAI	DRIVE TEMP	77 (25)	°F (°C)	0.18 (0.1)	32 0	-	-
{10}	LAI	DRIVE KWH	0	KWH	1		-	-
{11}	LAI	DRIVE MWH	0	MWH	1		-	-
{12}	LAI	RUN TIME	0	HRS	1		-	-
{13}	LAI	DC BUS VOLT	0	V	1		-	-
{14}	LAI	OUTPUT VOLT	0	V	1		-	-
{15}	LAI	PRC PID FBCK	0	PCT	0.1		-	-
{16}	LAI	PRC PID DEV	0	PCT	0.1		-	-
{17}	LAI	MOTOR TEMP	77(25)	°F (°C)	1.8 (1)	32 0	-	-
{18}	LAI	MREV COUNTER	0	MREV	1	0	-	-
20	LAO	OVRD TIME	1	hrs	1	0	-	-
{21}	LDI	FWD.REV	FWD	-	1	0	REV	FWD
{22}	LDO	CMD FWD.REV	FWD	-	1	0	REV	FWD
{23}	LDI	STOP.RUN	STOP	-	1	0	RUN	STOP
{24}	LDO	CMD STP.STRT	STOP	-	1	0	RUN	STOP
{25}	LDI	EXT1.2 ACT	EXT1	-	1	0	EXT2	EXT1
{26}	LDO	EXT1.2 CMD	EXT1	-	1	0	EXT2	EXT1
{27}	LDI	DRIVE READY	NOTRDY	-	1	0	READY	NOTRDY
{28}	LDI	AT SETPOINT	NO	-	1	0	YES	NO
{29}	LDO	DAY.NIGHT	DAY	-	1	0	NIGHT	DAY
30	LAO	CURRENT LIM	0	A	0.1	0	-	-
31	LAO	ACCEL TIME 1	300	sec	0.1	0	-	-
32	LAO	DECEL TIME 1	300	sec	0.1	0	-	-
{33}	LDI	HANDAUTO ACT	AUTO	-	1	0	HAND	AUTO
{34}	LDI	ENA.DIS ACT	DISABL	-	1	0	ENABLE	DISABL
{35}	LDO	ENA.DIS CMD	DISABL	-	1	0	ENABLE	DISABL
{36}	LDI	FLN LOC ACT	AUTO	-	1	0	FLN	AUTO
{37}	LDI	CTL SRC	NO	-	1	0	YES	NO
{38}	LDI	FLN REF1 SRC	NO	-	1	0	YES	NO
{39}	LDI	FLN REF2 SRC	NO	-	1	0	YES	NO
{40}	LDO	RO 1 COMMAND	OFF	-	1	0	ON	OFF
{41}	LDO	RO 2 COMMAND	OFF	-	1	0	ON	OFF

FLN Point Database								
Point		**Subpoint Name**	**Factory Default**	**Engr. Units**	**Slope**	**Intercept**	**On Text**	**Off Text**
#	**Type**		**(SI Units)**					
{42}	LDO	RO 3 COMMAND	OFF	-	1	0	ON	OFF
{43}	LDO	RO 4 COMMAND	OFF	-	1	0	ON	OFF
{46}	LAO	AO 1 COMMAND	PCT	PCT	0.1	0	-	-
48	LDO	RST RUN TIME	NO	-	1	0	RESET	NO
49	LDO	RESET KWH	NO	-	1	0	RESET	NO
50	LAO	PRC PID GAIN	10	PCT	0.1	0	-	-
51	LAO	PRC PID ITIM	600	SEC	0.1	0	-	-
52	LAO	PRC PID DTIM	0	SEC	0.1	0	-	-
53	LAO	PRC PID DFIL	10	SEC	0.1	0	-	-
54	LDO	PRC PID SEL	SET1	-	1	0	SET2	SET1
55	LAO	EXT PID GAIN	10	PCT	0.1	0	-	-
56	LAO	EXT PID ITIM	600	SEC	0.1	0	-	-
57	LAO	EXT PID DTIM	0	SEC	0.1	0	-	-
58	LAO	EXT PID DFIL	10	SEC	0.1	0	-	-
59	LDO	LOCK PANEL	UNLOCK	-	1	0	LOCK	UNLOCK
{60}	LAO	INPUT REF1	0	PCT	0.1	0	-	-
{61}	LAO	INPUT REF2	0	PCT	0.1	0	-	-
{62}	LAO	EXT PID STPT	0	PCT	0.1	0	-	-
{63}	LAI	EXT PID FBCK	0	PCT	0.1	0	-	-
{64}	LAI	EXT PID DEV	0	PCT	0.1	0	-	-
66	LDO	SPD OUT MIN	0	PCT	0.1	0	-	-
67	LDO	SPD OUT MAX	1000	PCT	0.1	0	-	-
{68}	LDO	FLN LOC CTL	AUTO	-	1	0	FLN	AUTO
{69}	LDO	FLN LOC REF	AUTO	-	1	0	FLN	AUTO
{70}	LDI	DI 1 ACTUAL	OFF	-	1	0	ON	OFF
{71}	LDI	DI 2 ACTUAL	OFF	-	1	0	ON	OFF
{72}	LDI	DI 3 ACTUAL	OFF	-	1	0	ON	OFF
{73}	LDI	DI 4 ACTUAL	OFF	-	1	0	ON	OFF
{74}	LDI	DI 5 ACTUAL	OFF	-	1	0	ON	OFF
{76}	LDI	RO 1 ACTUAL	OFF	-	1	0	ON	OFF
{77}	LDI	RO 2 ACTUAL	OFF	-	1	0	ON	OFF
{78}	LDI	RO 3 ACTUAL	OFF	-	1	0	ON	OFF
{79}	LDI	RO 4 ACTUAL	OFF	-	1	0	ON	OFF
{82}	LAI	AI 1 ACTUAL	0	PCT	0.1	0	-	-
{83}	LAI	AI 2 ACTUAL	0	PCT	0.1	0	-	-
{84}	LAI	AO 1 ACTUAL	0	MA	0.1	0	-	-

FLN Point Database								
Point		Subpoint Name	Factory Default	Engr. Units	Slope	Intercept	On Text	Off Text
#	Type		(SI Units)					
{86}	LDI	OK.ALARM	OK	-	1	0	ALARM	OK
{87}	LDI	OK.MAINT	OK	-	1	0	MAINT	OK
{88}	LAI	ALARM WORD 1	-	-	1	0	-	-
{89}	LAI	ALARM WORD 2	-	-	1	0	-	-
{90}	LAI	LAST FAULT	-	-	1	0	-	-
{91}	LAI	PREV FAULT 1	-	-	1	0	-	-
{92}	LAI	PREV FAULT 2	-	-	1	0	-	-
{93}	LDI	OK.FAULT	OK	-	1	0	FAULT	OK
{94}	LDO	RESET FAULT	NO	-	1	0	RESET	NO
{95}	LAO	MBOX PARAM	-	-	1	0	-	-
{96}	LAO	MBOX DATA	-	-	1	0	-	-
{97}	LDO	MBOX READ	DONE	-	1	0	READ	DONE
{98}	LDO	MBOX WRITE	DONE	-	1	0	WRITE	DONE
{99}	LAO	ERROR STATUS	-	-	1	0	-	-

a.Points not listed are not used in this application.

b.A single value in a column means that the value is the same in English units and in SI units.

c.Point numbers that appear in brackets { } may be unbundled at the field panel.

Detailed Point Descriptions

FLN Detailed Point Descriptions			
Point		**Description**	**Drive Parameter**
1	CTRL ADDRESS	The FLN address of the drive. It can be set by FLN and by the panel.	5302
2	APPLICATION	The Application ID for FLN on the ACS320. This ID is assigned by Siemens for each unique application. It correlates directly to a particular point list approved at the time of release. Therefore, this point list shall remain fixed once approval is granted. Any changes to the point list shall require a new Application ID and re-approval by Siemens. The Application ID assigned to ACS320 is 2934.	
3	FREQ OUTPUT	The output frequency applied to the motor, in Hertz.	0103
4	PCT OUTPUT	The ratio of output frequency or speed to the corresponding maximum rating, depending on control mode. For scalar mode, it is the ratio of Output Frequency (parameter 0103) to Maximum Frequency (parameter 2008). For speed mode, it is the ratio Speed (parameter 0102) to Maximum Speed (2002).	None. This ratio is calculated by the FLN application.
5	SPEED	The calculated speed of the motor, in RPM.	0102
6	CURRENT	The measured output current.	0104
7	TORQUE	The calculated output torque of the motor as a percentage of nominal torque.	0105
8	POWER	The measured output power in KW. The FLN point definition also supports horsepower by selecting English units.	0106
	DRIVE TEMP	The measured heatsink temperature, in ° C. The FLN point definition also supports ° F by selecting English units.	0110
10	DRIVE KWH	The drive's cumulative power consumption in kilowatt-hours. This value may be reset by commanding FLN point 49, RESET KWH.	0115
11	DRIVE MWH	The drive's cumulative power consumption in megawatt hours. This value cannot be reset.	0141
12	RUN TIME	The drive's cumulative run time in hours. This value may be reset by commanding FLN point 48, RESET RUN TIME.	0114
13	DC BUS VOLT	The DC bus voltage level of the drive.	0107
14	OUTPUT VOLT	The AC output voltage applied to the motor.	0109
15	PRC PID FBCK	The Process PID feedback signal.	0130
16	PRC PID DEV	The deviation of the Process PID output signal from its setpoint.	0132
17	MOTOR TEMP	The measured motor temperature as set up in Group 35.	0145
18	ROTATION CNT	The motor's cumulative revolution count, in mega-revolutions.	0142
19	N/A		

FLN Detailed Point Descriptions			
Point		**Description**	**Drive Parameter**
20	OVRD TIME	1 of the 5 mandatory FLN points required for compatibility with Siemens control systems. It has no functionality in the drive application.	None
21	FWD.REV ACT	Indicates the rotational direction of the motor, regardless of control source (1 = REV, 0 = FWD).	
22	FWD.REV CMD	Commanded by FLN to change the rotational direction of the drive. Parameter 1001 must be set to COMM for FLN to control the direction of the motor by EXT1. Parameter 1002 must be set to COMM for FLN to control the direction of the motor by EXT2.	
23	RUN.STOP ACT	Indicates the drive's run status, regardless of control source (1 = RUN, 0 = STOP).	
24	RUN.STOP CMD	Commanded by FLN to start the drive. Parameter 1001 must be set to COMM for FLN to control the run state of the drive by EXT1. Parameter 1002 must be set to COMM for FLN to have this control.	
25	EXT1.2 ACT	Indicates whether External 1 or External 2 is the active control source (1 = EXT2, 0 = EXT1).	
26	EXT1.2 CMD	Commanded by FLN to select External 1 or External 2 as the active control source (1 = EXT2, 0 = EXT1). Parameter 1102 must be set to COMM for FLN to have this control.	
27	DRIVE READY	Indicates the drive is ready to accept a run command (1 = READY, 0 = NOTRDY).	
28	AT SETPOINT	Indicates the drive has reached its commanded setpoint (1 = YES, 0 = NO)	
29	DAY.NIGHT	1 of the 5 mandatory FLN points required for compatibility with Siemens control systems. It has no functionality in the drive application.	None
30	CURRENT LIM	Sets the output current limit of the drive.	2003
31	ACCEL TIME 1	Sets the acceleration time for Ramp 1.	2202
32	DECEL TIME 1	Sets the deceleration time for Ramp 1.	2203
33	HANDAUTO ACT	Indicates whether the drive is in Hand or Auto control (1 = HAND, 0 = AUTO).	
34	ENA.DIS ACT	Indicates the status of the Run Enable command, regardless of its source (1 = ENABLE, 0 = DISABL).	
35	ENA.DIS CMD	Commanded by FLN to assert the Run Enable command (1 = ENABLE, 0 = DISABL). Parameter 1601 must be set to COMM for FLN to have this control.	
36	FLN LOC ACT	Indicates if the drive has been placed in “FLN LOCAL” mode by commanding either point 68 (FLN LOC CTL) or point 69 (FLN LOC REF). Commanding either of these points to FLN (1) “steals” control from its normal source and places in under FLN control. Note that the HAND mode of the panel has priority over FLN local control.	

FLN Detailed Point Descriptions			
Point		**Description**	**Drive Parameter**
37	FLN CTL SRC	Indicates if FLN is a source for control inputs (1 = YES, 0 = NO). Note that this status point is true if any of the following control inputs are from FLN: Run/Stop, Ext1/2 Select or Run Enable.	
38	FLN REF1 SRC	Indicates if FLN is the source for speed reference 1 (1 = YES, 0 = NO).	
39	FLN REF2 SRC	Indicates if FLN is the source for speed reference 2 (1 = YES, 0 = NO).	
40	RO1 COMMAND	Controls the output state of Relay 1. Parameter 1401 must be set to COMM for FLN to have this control (1 = ON, 0 = OFF).	0134, bit 0
41	RO2 COMMAND	Controls the output state of Relay 2. Access to relay 2 requires ACS320 option MREL. Parameter 1402 must be set to COMM for FLN to have this control (1 = ON, 0 = OFF).	0134, bit 1
42	RO3 COMMAND	Controls the output state of Relay 3. Access to relay 3 requires ACS320 option MREL. Parameter 1403 must be set to COMM for FLN to have this control (1 = ON, 0 = OFF).	0134, bit 2
43	RO4 COMMAND	Controls the output state of Relay 4. Access to relay 4 require ACS320 option MREL. Parameter 1410 must be set to COMM for FLN to have this control (1 = ON, 0 = OFF).	0134, bit 3
46	AO1 COMMAND	Controls Analog Output 1. Parameter 1501 must be set to this value for FLN to have this control.	0135 (COMM VALUE 1)
48	RESET RUN TIME	Commanded by FLN to reset the cumulative run timer (1 = RESET, 0 = NO). The control input is rising-edge sensitive, so, once the command is issued, this point automatically returns to its inactive state. This “momentary” operation avoids any need for an explicit command to clear the point before a subsequent reset can be issued.	
49	RESET KWH	Commanded by FLN to reset the cumulative kilowatt-hour counter (1 = RESET, 0 = NO). The control input is rising-edge sensitive, so, once the command is issued, this point automatically returns to its inactive state. This “momentary” operation avoids any need for an explicit command to clear the point before a subsequent reset can be issued.	
50	PRC PID GAIN	Sets the proportional gain of the active Process PID set, as selected by Point 54, PRC PID SEL (1 = SET2, 0 = SET1).	4001 (SET1) 4101 (SET2)
51	PRC PID ITIM	Sets the integration time of the active Process PID set, as selected by Point 54, PRC PID SEL (1 = SET2, 0 = SET1).	4002 (SET1) 4102 (SET2)
52	PRC PID DTIM	Sets the derivation time of the active Process PID set, as selected by Point 54, PRC PID SEL (1 = SET2, 0 = SET1).	4001 (SET1) 4101 (SET2)

FLN Detailed Point Descriptions			
Point		**Description**	**Drive Parameter**
53	PRC PID DFIL	Sets the time constant for the error-derivative of the active Process PID set, as selected by Point 54, PRC PID SEL (1 = SET2, 0 = SET1).	4004 (SET1) 4104 (SET2)
54	PRC PID SEL	Selects the active Process PID set (1 = SET2, 0 = SET1).	4027
55	EXT PID GAIN	Sets the proportional gain of the External PID controller.	4201
56	EXT PID ITIM	Sets the integration time of the External PID controller.	4202
57	EXT PID DTIM	Sets the derivation time of the External PID controller.	4203
58	EXT PID DFIL	Sets the time constant for the error-derivative of the External PID controller.	4204
59	LOCK PANEL	Command by FLN to lock the panel and prevent parameter changes (1 = LOCK, 0 = UNLOCK).	1602
60	INPUT REF 1	Sets Input Reference 1. Parameter 1102 must be set to COMM for FLN to control this value.	
61	INPUT REF 2	Sets Input Reference 2. Parameter 1106 must be set to COMM for FLN to control this value.	
62	EXT PID STPT	The setpoint for the External PID controller. The function of this point requires parameter 4210, PID Setpoint Select, to be set to 19 (Internal).	4211
63	EXT PID FBCK	The External PID feedback signal.	0131
64	EXT PID DEV	The deviation of the External PID output signal from its setpoint.	0133
65	N/A		
66	SPD OUT MIN	Sets the minimum output speed of the drive as a percentage of the motor nominal rating.	2007 (SCALAR) 2001 (SPEED)
67	SPD OUT MAX	Sets the maximum output speed of the drive as a percentage of the motor nominal rating.	2008 (SCALAR) 2002 (SPEED)
68	FLN LOC CTL	Commanded by FLN to temporarily “steal” start/stop control of the drive from its normal source and place it under FLN control. This functionality is analogous to placing the drive in HAND mode at the panel, with the control being taken by FLN instead. HAND mode at the panel has priority over this point. Thus, this point is only effective in temporarily taking control from the digital inputs or some other internal control functionality.	
69	FLN LOC REF	Commanded by FLN to temporarily “steal” input reference control of the drive from its normal source and place it under FLN control. This functionality is analogous to placing the drive in HAND mode at the panel, with the reference control being taken by FLN instead. HAND mode at the panel has priority over this point. Thus, this point is only effective in temporarily taking control from the analog inputs or some other internal control functionality.	
70	DI 1 ACTUAL	Indicates the status of Digital Input 1 (1 = ON, 0 = OFF).	0118, bit 2

FLN Detailed Point Descriptions			
Point		**Description**	**Drive Parameter**
71	DI 2 ACTUAL	Indicates the status of Digital Input 2 (1 = ON, 0 = OFF).	0118, bit 1
72	DI 3 ACTUAL	Indicates the status of Digital Input 3 (1 = ON, 0 = OFF).	0118, bit 0
73	DI 4 ACTUAL	Indicates the status of Digital Input 4 (1 = ON, 0 = OFF).	0119, bit 2
74	DI 5 ACTUAL	Indicates the status of Digital Input 5 (1 = ON, 0 = OFF).	0119, bit 1
76	RO 1 ACTUAL	Indicates the status of Relay Output 1 (1 = ON, 0 = OFF).	0122, bit 2
77	RO 2 ACTUAL	Indicates the status of Relay Output 2 (1 = ON, 0 = OFF).	0122, bit 1
78	RO 3 ACTUAL	Indicates the status of Relay Output 3 (1 = ON, 0 = OFF).	0122, bit 0
79	RO 4 ACTUAL	Indicates the status of Relay Output 4 (1 = ON, 0 = OFF).	0123, bit 2
82	AI 1 ACTUAL	Indicates the input level of Analog Input 1.	0120
83	AI 2 ACTUAL	Indicates the input level of Analog Input 2.	0121
84	AO 1 ACTUAL	Indicates the output level of Analog Output 1.	0124
86	OK.ALARM	Indicates the current alarm state of the drive (1 = ALARM, 0 = OK).	
87	OK.MAINT	Indicates the current maintenance state of the drive (1 = MAINT, 0 = OK). Maintenance triggers are configured in drive parameter Group 29.	
88	ALARM WORD1	This point is a bit-field indicating active alarms in the drive.	0308
89	ALARM WORD2	This point is a bit-field indicating active alarms in the drive.	0309
90	LAST FAULT	This point is first in the drive's fault log and indicates the most recent fault declared.	0401
91	PREV FAULT 1	This point is second in the drive's fault log and indicates the previous fault declared.	0412
92	PREV FAULT 2	This point is last in the drive's fault log and indicates the oldest fault in the log.	0413
93	OK.FAULT	Indicates the current fault state of the drive (1 = FAULT, 0 = OK).	
94	RESET FAULT	Command by FLN to reset a faulted drive (1 = RESET, 0 = NO). Parameter 1604 must be set to COMM for FLN to control this state. The control input is rising-edge sensitive, so, once the command is issued, this point automatically returns to its inactive state. This “momentary” operation avoids any need for an explicit command to clear the point before a subsequent reset can be issued.	
95	MBOX PARAM	Sets the parameter to be used by the mailbox function.	
96	MBOX DATA	Sets or indicates the data value of the mailbox function.	
97	MBOX READ	Command by FLN to read the parameter value specified by Point 95, MBOX PARAM. The parameter value is returned in Point 96, MBOX DATA. The control input is rising-edge sensitive, so, once the command is issued, this point automatically returns to its inactive state. This “momentary” operation avoids any need for an explicit command to clear the point before a subsequent reset can be issued.	

FLN Detailed Point Descriptions			
Point		**Description**	**Drive Parameter**
98	MBOX WRITE	Command by FLN to write the data value specified by Point 96, MBOX DATA, to the parameter value specified by Point 95, MBOX PARAM. The control input is rising-edge sensitive, so, once the command is issued, this point automatically returns to its inactive state. This “momentary” operation avoids any need for an explicit command to clear the point before a subsequent reset can be issued.	
99	ERROR STATUS	1 of the 5 mandatory FLN points required for compatibility with Siemens control systems. It has no functionality in the drive application.	None

BACnet Protocol Technical Data

Binary Input Object Instance Summary

The following table summarizes the Binary Input Objects supported:

Instance ID	Object Name	Description	Active/Inactive Text	Present Value Access Type
BI0	RO 1 ACT	This object indicates the status of Relay Output 1.	ON/OFF	R
BI1	RO 2 ACT	This object indicates the status of Relay Output 2 (requires MREL-01 option).	ON/OFF	R
BI2	RO 3 ACT	This object indicates the status of Relay Output 3 (requires MREL-01 option).	ON/OFF	R
BI3	RO 4 ACT	This object indicates the status of Relay Output 4 (requires MREL-01 option).	ON/OFF	R
BI6	DI 1 ACT	This object indicates the status of Digital Input 1.	ON/OFF	R
BI7	DI 2 ACT	This object indicates the status of Digital Input 2.	ON/OFF	R
BI8	DI 3 ACT	This object indicates the status of Digital Input 3.	ON/OFF	R
BI9	DI 4 ACT	This object indicates the status of Digital Input 4.	ON/OFF	R
BI10	DI 5 ACT	This object indicates the status of Digital Input 5.	ON/OFF	R

Note! For Present Value Access Types, R = Read-only, W = Writeable, C = Commandable. Commandable values support priority arrays & relinquish defaults.

Binary Output Object Instance Summary

The following table summarizes the Binary Output Objects supported:

Instance ID	Object Name	Description	Active/Inactive Text	Present Value Access Type
BO0	RO1 COMMAND	This object controls the output state of Relay 1. This control requires that parameter 1401 value = COMM.	ON/OFF	C
BO1	RO2 COMMAND	This object controls the output state of Relay 2. This control requires that parameter 1402 value = COMM (also requires MREL-01 option).	ON/OFF	C
BO2	RO3 COMMAND	This object controls the output state of Relay 3. This control requires that parameter 1403 value = COMM (also requires MREL-01 option).	ON/OFF	C
BO3	RO4 COMMAND	This object controls the output state of Relay 4. This control requires that parameter 1410 value = COMM (also requires MREL-01 option).	ON/OFF	C

Note! For Present Value Access Types, R = Read-only, W = Writeable, C = Commandable. Commandable values support priority arrays & relinquish defaults.

Binary Value Object Instance Summary

The following table summarizes the Binary Value Objects supported:

Instance ID	Object Name	Description	Active/Inactive Text	Present Value Access Type
BV0	RUN/STOP ACT	This object indicates the drive Run Status, regardless of the control source.	RUN/STOP	R
BV1	FWD/REV ACT	This object indicates the motor's rotation direction, regardless of the control source.	REV/FWD	R
BV2	FAULT ACT	this object indicates the drive's fault status.	FAULT/OK	R
BV3	EXT 1/2 ACT	This object indicates which control source is active: External 1 or External 2.	EXT2/EXT1	R
BV4	HAND/AUTO ACT	This object indicates whether the drive is under Hand or Auto control.	HAND/AUTO	R
BV5	ALARM ACT	This object indicates the drive's alarm status.	ALARM/OK	R

Instance ID	Object Name	Description	Active/Inactive Text	Present Value Access Type
BV6	MAINT REQ	This object indicates the drive's maintenance status. Refer to Group 29 in the drive's parameter descriptions.	MAINT/OK	R
BV7	DRIVE READY	This object indicates whether the drive is ready to accept a run command.	READY/NOT READY	R
BV8	AT SETPOINT	This object indicates whether the drive is at the commanded setpoint.	YES/NO	R
BV9	RUN ENA ACT	This object indicates the Run Enable command status, regardless of the control source.	ENABLE/DISABLE	R
BV10	RUN/STOP CMD	This object commands a drive start. Control requires either: Parameter 1001 value = COMM for control by EXT1 or Parameter 1002 value = COMM for control by EXT2.	RUN/STOP	C
BV11	FWD/REV CMD	This object commands a motor rotation direction change. Control requires 1003 = REQUEST and either: Parameter 1001 value = COMM for control by EXT1 or Parameter 1002 value = COMM for control by EXT2.	REV/FWD	C
BV12	RUN ENA CMD	This object commands Run Enable. Control requires parameter 1601 value = COMM.	ENABLE/DISABLE	C
BV13	EXT 1/2 CMD	This object selects ext1 or ext2 as the active control source. Control requires parameter 1102 value = COMM.	EXT2/EXT1	C
BV14	FAULT RESET	This object resets a faulted drive. The command is rising-edge triggered. Control requires parameter 1604 value = COMM.	RESET/NO	C
BV15	MBOX READ	This object reads a parameter (defined by AV25 MBOX PARAM) and returns it in AV26 MBOX DATA.	READ/RESET	W
BV16	MBOX WRITE	This object writes the data value specified by AV26, MBOX DATA, to a parameter (defined by AV25, MBOX PARAM).	WRITE/RESET	W

Instance ID	Object Name	Description	Active/Inactive Text	Present Value Access Type
BV17	LOCK PANEL	This object locks the panel and prevents parameter changes. The corresponding drive parameter is 1602.	LOCK/UNLOCK	W
BV18	CTL OVERRIDE CMD	This object commands the drive into BACnet Control Override. In this mode, BACnet takes drive control from the normal source. However, the control panel's HAND mode has priority over BACnet Control Override.	ON/OFF	C
BV19	CTL OVERRIDE ACT	This object indicates whether the drive is in BACnet Control Override. (See BV18.)	ON/OFF	R
BV20	START ENABLE 1	This object commands start enable1. Control requires param 1608 value = COMM.	ENABLE/DISABLE	C
BV21	START ENABLE 2	This object commands start enable1. Control requires param 1609 value = COMM.	ENABLE/DISABLE	C

Note! For Present Value Access Types, R = Read-only, W = Writeable, C = Commandable. Commandable values support priority arrays & relinquish defaults.

Analog Input Object Instance Summary

The following table summarizes the Analog Input Objects supported:

Instance ID	Object Name	Description	Units	Present Value Access Type
AI0	ANALOG INPUT 1	This object indicates the value of Analog Input 1. The corresponding drive parameter is 0120.	Percent	R
AI1	ANALOG INPUT 2	This object indicates the value of Analog Input 2. The corresponding drive parameter is 0121.	Percent	R

Note! For Present Value Access Types, R = Read-only, W = Writeable, C = Commandable. Commandable values support priority arrays & relinquish defaults.

Analog Output Object Instance Summary

The following table summarizes the Analog Output Objects supported:

Instance ID	Object Name	Description	Units	Present Value Access Type
AO0	AO 1 COMMAND	This object controls Analog Output 1. The corresponding drive parameter is 0135, COMM VALUE 1. Control requires parameter 1501 value = 135.	Percent	C

Note! For Present Value Access Types, R = Read-only, W = Writeable, C = Commandable. Commandable values support priority arrays & relinquish defaults.

Analog Value Object Instance Summary

The following table summarizes the Analog Value Objects supported:

Instance ID	Object Name	Description	Units	Present Value Access Type
AV0	OUTPUT SPEED	This object indicates the calculated motor speed in RPM. The corresponding drive parameter is 0102.	RPM	R
AV1	OUTPUT FREQ	This object indicates the output frequency applied to the motor in Hz. The corresponding drive parameter is 0103.	Hertz	R
AV2	DC BUS VOLT	This object indicates the drive's DC bus voltage level. The corresponding drive parameter is 0107.	Volts	R
AV3	OUTPUT VOLT	This object indicates the AC output voltage applied to the motor. The corresponding drive parameter is 0109.	Volts	R
AV4	CURRENT	This object indicates the measured output current. The corresponding drive parameter is 0104.	Amps	R
AV5	TORQUE	This object indicates the calculated motor output torque as a percentage of nominal torque. The corresponding drive parameter is 0105.	Percent	R
AV6	POWER	This object indicates the measured output power in kW. The corresponding drive parameter is 0106.	Kilowatts	R
AV7	DRIVE TEMP	This object indicates the measured heatsink temperature in °C. The corresponding drive parameter is 0110.	°C	R
AV8	KWH (R)	This object indicates, in kW hours, the drive's accumulated energy usage since the last reset. The value can be reset to zero. The corresponding drive parameter is 0115.	kWh	W

Instance ID	Object Name	Description	Units	Present Value Access Type
AV9	KWH (NR)	This object indicates the drive's accumulated energy usage in kW hours. The value cannot be reset.	kWh	R
AV10	PRC PID FBCK	This object is the Process PID feedback signal. The corresponding drive parameter is 0130.	Percent	R
AV11	PRC PID DEV	This object is the Process PID output signal's deviation from its setpoint. The corresponding drive parameter is 0132.	Percent	R
AV12	EXT PID FBCK	This object is the External PID feedback signal. The corresponding drive parameter is 0131.	Percent	R
AV13	EXT PID DEV	This object is the External PID output signal's deviation from its setpoint. The corresponding drive parameter is 0133.	Percent	R
AV14	RUN TIME (R)	This object indicates, in hours, the drive's accumulated run time since the last reset. The value can be reset to zero. The corresponding drive parameter is 0114.	Hours	W
AV15	MOTOR TEMP	This object indicates the drive's motor temperature, as set up in parameter Group 35. The corresponding drive parameter is 0145.	°C	R
AV16	INPUT REF 1	This object sets Input Reference 1. Control requires parameter 1103 value = COMM.	Percent	C
AV17	INPUT REF 2	This object sets either: Input Reference 2. Control requires parameter 1106 value = COMM. Process PID setpoint. Control requires parameter 1106 value = PID1 OUT and parameter 4010 value = COMM.	Percent	C
AV18	LAST FLT	This object indicates the most recent fault entered in the drive's fault log. The corresponding drive parameter is 0401.	None	R
AV19	PREV FLT 1	This object indicates the second most recent fault entered in the drive's fault log. The corresponding drive parameter is 0412.	None	R
AV20	PREV FLT 2	This object indicates the third most recent fault entered in the drive's fault log. The corresponding drive parameter is 0413.	None	R
AV21	AO 1 ACT	This object indicates Analog Output 1's level. The corresponding drive parameter is 0124.	Milliamps	R
AV23	ACCEL1 TIME	This object sets the Ramp1 acceleration time. The corresponding drive parameter is 2202.	Seconds	W
AV24	DECEL1 TIME	This object sets the Ramp1 deceleration time. The corresponding drive parameter is 2203.	Seconds	W

Instance ID	Object Name	Description	Units	Present Value Access Type
AV25	MBOX PARAM	This object defines the parameter to be read or written to by the mailbox function. See BV15 and BV16.	None	W
AV26	MBOX DATA	This object holds the mailbox function's parameter value – a value that was read, or is to be written. See BV15 and BV16.	None	W
AV27	EXT PID STPT	This object sets the External PID controller setpoint. The corresponding drive parameter is 4211. Control requires parameter 4210, PID SETPOINT SEL, value = 19 (INTERNAL).	Percent	C

Note! For Present Value Access Types, R = Read-only, W = Writeable, C = Commandable. Commandable values support priority arrays & relinquish defaults.

BACnet Quick-Start Sequence

The following steps summarize the process for enabling and configuring BACnet on the ACS320:

1. Enable BACnet protocol: Set drive parameter 9802, COMM PROTOCOL SEL = BACNET (5).

Note! If you cannot see the desired selection on the panel, your drive does not have that protocol software in the application memory.

- To confirm this selection, read drive parameter 5301, EFB PROTOCOL ID. It should read x5xx (where "x" is any value).

2. Place the BACnet channel in "reset": Set drive parameter 5302, EFB STATION ID = 0.

- This setting holds the BACnet communication channel in reset while remaining settings are completed.

3. Define the MS/TP baud rate.

- Set drive parameter 5303, EFB BAUD RATE = appropriate value.

4. Define the Device Object Instance ID.

- To define a specific device object instance value, use drive parameters 5311 and 5317 (object instance values must be unique and in the range 1 to 4,194,303).
- To use the drive's MS/TP MAC ID as the device object instance value, set drive parameter 5311 and 5317 = 0.

5. Define a unique MS/TP MAC ID. Set drive parameter 5302, EFB STATION ID = appropriate value.

- Once this parameter is set to a non-zero value, current BACnet settings are “latched” and used for communication until the channel is reset.
- In order to participate in MS/TP token passing, the MAC ID used must be within the limits defined by other masters’ “Max Master” property.

6. Confirm proper BACnet communication.

- When BACnet communication is operating properly, drive parameter 5316, EFB PAR 16 (the MS/TP token counter), should be continually increasing.
- Drive parameter 5306, UART ERRORS, should be stable.

Protocol Implementation Conformance Statement (PICS)

PICS Summary

BACnet Standard Device Profile. This version of ACS320 BACnet fully conforms to the 'Application-Specific Controller' standard device profile (B-ASC).

Services Supported. The following services are supported by the ACS320:

- I-Am (Response to Who-Is, also broadcast on power-up & other reset)
- I-Have (Response to Who-Has)
- ReadProperty
- WriteProperty
- DeviceCommunicationControl
- ReinitializeDevice

Data Link Layer. The ACS320 implements MS/TP (Master) Data Link Layer. All standard MS/TP baud rates are supported (9600, 19200, 38400 & 76800).

MAC ID / Device Object Instance. The ACS320 supports separate MAC ID and Device Object Instance parameters:

- Set the MAC ID using drive parameter 5302. Default: 5302 = 12?.
- Set the Device Object Instance ID using drive parameters 5311 and 5317. Default: Both 5311 and 5317 = 0, which causes the MAC ID to “double” as the Device Object Instance. For Device Object Instance values not linked to the MAC ID, set ID values using 5311 and 5317:
  - For IDs in the range 1 to 65,535: Parameter 5311sets the ID directly (5317 must be 0). For example, the following values set the ID to 49,134: 5311 = 49134 and 5317 = 0.
  - For IDs > 65,335: The ID equals 5311’s value plus 10,000 times 5317’s value. For example, the following values set the ID to 71,234: 5311 = 1234 and 5317 = 7.

Max Info Frames Property. Configure the Device Object Max Info Frames property using drive parameter 5312. Default: 5312 = 1.

Max Master Property. Configure the Device Object Max Master property using drive parameter 5313. Default: 5313 = 127.

MS/TP Token Counter

Parameter 5316 stores the count of MS/TP tokens passed to the associated node.

Statement

This statement is part of this Standard and is required for its use.

BACnet Protocol Implementation Conformance Statement	
Date:	TBD
Vendor Name:	ABB, Inc
Product Name:	Low Voltage AC Motor Drive
Product Model Number:	ACS320
Applications Software Version:	TBD
Firmware Revision:	TBD
BACnet Protocol Revision:	2
Product Description:	The ACS320 is a high-performance adjustable frequency drive specifically designed for commercial automation applications. This product supports native BACnet, connecting directly to the MS/TP LAN. All standard MS/TP baud rates are supported, as well as master mode functionality. Over BACnet, the drive can be fully controlled as a standard adjustable frequency drive. In addition, up to 16 configurable I/O ports are available over BACnet for user applications.
BACnet Standardized Device Profile (Annex L):	☐ BACnet Operator Workstation (B-OWS) ☐ BACnet Building Controller (B-BC) ☐ BACnet Advanced Application Controller (B-AAC) ☒ BACnet Application Specific Controller (B-ASC) ☐ BACnet Smart Sensor (B-SS) ☐ BACnet Smart Actuator (B-SA)
List all BACnet Interoperability Building Blocks Supported (Annex K):	DS-RP-B, DS-WP-B, DM-DDB-B, DM-DOB-B, DM-DCC-B, DM-RD-B.
Segmentation Capability:	☐ Segmented requests supported. Window Size ____ ☐ Segmented responses supported. Window Size ____

BACnet Protocol Implementation Conformance Statement	
Standard Object Types Supported: An object type is supported if it may be present in the device. For each standard Object Type supported provide the following data: 1. Whether objects of this type are dynamically creatable using the CreateObject service 2. Whether objects of this type are dynamically detectable using the DeleteObject service 3. List of the optional properties supported 4. List of all properties that are writable where not otherwise required by this standard 5. List of proprietary properties and for each its property identifier, datatype, and meaning 6. List of any property range restrictions	See table at *Object/Property Support Matrix* on page *306*.
Data Link Layer Options:	☐ BACnet IP, (Annex J) ☐ BACnet IP, (Annex J), Foreign Device ☐ ISO 8802-3, Ethernet (Clause 7) ☐ ANSI/ATA 878.1, 2.5 Mb. ARCNET (Clause 8) ☐ ANSI/ATA 878.1, EIA-485 ARCNET (Clause 8), baud rate(s) ___ ☒ MS/TP master (Clause 9), baud rate(s): 9600, 19200, 38400, 76800 ☐ MS/TP slave (Clause 9), baud rate(s): ___ ☐ Point-To-Point, EIA 232 (Clause 10), baud rate(s): ___ ☐ Point-To-Point, modem, (Clause 10), baud rate(s): ___ ☐ LonTalk, (Clause 11), medium: _____ ☐ Other: _____
Device Address Binding: Is static device binding supported? (This is currently necessary for two-way communication with MS/TP slaves and certain other devices.)	☐ Yes ☒ No
Networking Options:	☐ Router, Clause 6 - List all routing configurations, e.g., ARCNET-Ethernet, Ethernet-MS/TP, etc. ☐ Annex H, BACnet Tunneling Router over IP ☐ BACnet/IP Broadcast Management Device (BBMD)
Does the BBMD support registrations by Foreign Devices?	☐ Yes ☐ No

BACnet Protocol Implementation Conformance Statement	
Character Sets Supported: Indicating support for multiple character sets does not imply that they can all be supported simultaneously.	☒ ANSI X3.4 ☐ IBM™/Microsoft™ DBCS ☐ ISO 8859-1 ☐ ISO 10646 (UCS-2) ☐ ISO 10646 (UCS-4) ☐ JIS C 6226
If this product is a communication gateway, describe the types of non-BACnet equipment/network(s) that the gateway supports:	

BACnet Object Definitions

Object/Property Support Matrix

The following table summarizes the Object Types/Properties Supported:

Property	Object Type						
	Device	Binary Input	Binary Output	Binary Value	Analog Input	Analog Output	Analog Value
Object Identifier	✓	✓	✓	✓	✓	✓	✓
Object Name	✓	✓	✓	✓	✓	✓	✓
Object Type	✓	✓	✓	✓	✓	✓	✓
System Status	✓						
Vendor Name	✓						
Vendor Identifier	✓						
Model Name	✓						
Firmware Revision	✓						
Appl Software Revision	✓						
Protocol Version	✓						
Protocol Revision	✓						
Services Supported	✓						
Object Types Supported	✓						
Object List	✓						
Max APDU Length	✓						
Segmentation Support	✓						
APDU Timeout	✓						
Number APDU Retries	✓						
Max Master	✓						
Max Info Frames	✓						
Device Address Binding	✓						
Database Revision	✓						
Present Value		✓	✓	✓	✓	✓	✓

Property	Object Type						
	Device	Binary Input	Binary Output	Binary Value	Analog Input	Analog Output	Analog Value
Status Flags		✓	✓	✓	✓	✓	✓
Event State		✓	✓	✓	✓	✓	✓
Out-of-Service		✓	✓	✓	✓	✓	✓
Units					✓	✓	✓
Priority Array			✓	✓ *		✓	✓ *
Relinquish Default			✓	✓ *		✓	✓ *
Polarity		✓	✓				
Active Text		✓	✓	✓			
Inactive Text		✓	✓	✓			

* For commandable values only.

Modbus Protocol Technical Data

Overview

The Modbus® protocol was introduced by Modicon, Inc. for use in control environments featuring Modicon programmable controllers. Due to its ease of use and implementation, this common PLC language was quickly adopted as a de-facto standard for integration of a wide variety of master controllers and slave devices.

Modbus is a serial, asynchronous protocol. Transactions are half-duplex, featuring a single Master controlling one or more Slaves. While RS232 can be used for point-to-point communication between a single Master and a single Slave, a more common implementation features a multi-drop RS485 network with a single Master controlling multiple Slaves. The ACS320 features RS485 for its Modbus physical interface.

RTU

The Modbus specification defines two distinct transmission modes: ASCII and RTU. The ACS320 supports RTU only.

Feature Summary

The following Modbus function codes are supported by the ACS320.

Function	Code (Hex)	Description
Read Coil Status	0x01	Read discrete output status. For the ACS320, the individual bits of the control word are mapped to Coils 1…16. Relay outputs are mapped sequentially beginning with Coil 33 (e.g. RO1=Coil 33).
Read Discrete Input Status	0x02	Read discrete inputs status. For the ACS320, the individual bits of the status word are mapped to Inputs 1…16 or 1…32, depending on the active profile. Terminal inputs are mapped sequentially beginning with Input 33 (e.g. DI1=Input 33).

Function	Code (Hex)	Description
Read Multiple Holding Registers	0x03	Read multiple holding registers. For the ACS320, the entire parameter set is mapped as holding registers, as well as command, status and reference values.
Read Multiple Input Registers	0x04	Read multiple input registers. For the ACS320, the 2 analog input channels are mapped as input registers 1 & 2.
Force Single Coil	0x05	Write a single discrete output. For the ACS320, the individual bits of the control word are mapped to Coils 1…16. Relay outputs are mapped sequentially beginning with Coil 33 (e.g. RO1=Coil 33).
Write Single Holding Register	0x06	Write single holding register. For the ACS320, the entire parameter set is mapped as holding registers, as well as command, status and reference values.
Diagnostics	0x08	Perform Modbus diagnostics. Subcodes for Query (0x00), Restart (0x01) & Listen Only (0x04) are supported.
Force Multiple Coils	0x0F	Write multiple discrete outputs. For the ACS320, the individual bits of the control word are mapped to Coils 1…16. Relay outputs are mapped sequentially beginning with Coil 33 (e.g. RO1=Coil 33).
Write Multiple Holding Registers	0x10	Write multiple holding registers. For the ACS320, the entire parameter set is mapped as holding registers, as well as command, status and reference values.
Read/Write Multiple Holding Registers	0x17	This function combines functions 0x03 and 0x10 into a single command.

Mapping Summary

The following table summarizes the mapping between the ACS320 (parameters and I/0) and Modbus reference space. For details, see “Modbus Addressing” below.

ACS320	Modbus Reference	Supported Function Codes
• Control Bits • Relay Outputs	Coils(0xxxx)	• 01 – Read Coil Status • 05 – Force Single Coil • 15 – Force Multiple Coils
• Status Bits • Discrete Inputs	Discrete Inputs(1xxxx)	• 02 – Read Input Status
• Analog Inputs	Input Registers(3xxxxx)	• 04 – Read Input Registers
• Parameters • Control/Status Words • References	Holding Registers(4xxxx)	• 03 – Read 4X Registers • 06 – Preset Single 4X Register • 16 – Preset Multiple 4X Registers • 23 – Read/Write 4X Registers

Communication Profiles

When communicating by Modbus, the ACS320 supports multiple profiles for control and status information. Parameter 5305 (EFB CTRL PROFILE) selects the profile used.

- ABB DRV LIM – This profile is based on the PROFIBUS interface, and is discussed in detail in the following sections.

- DCU PROFILE – Another profile is called the DCU PROFILE profile. It extends the control and status interface to 32 bits, and is the internal interface between the main drive application and the embedded fieldbus environment.
- ABB DRV FULL – This profile is also based on the PROFIBUS interface, and supports two control word bits not supported by the ABB DRV LIM profile.

Modbus Addressing

With Modbus, each function code implies access to a specific Modbus reference set. Thus, the leading digit is not included in the address field of a Modbus message.

Note: The ACS320 supports the zero-based addressing of the Modbus specification. Holding register 40002 is addressed as 0001 in a Modbus message. Similarly, coil 33 is addressed as 0032 in a Modbus message.

Refer again to the “Mapping Summary” above. The following sections describe, in detail, the mapping to each Modbus reference set.

0xxxx Mapping – Modbus Coils. The drive maps the following information to the 0xxxx Modbus set called Modbus Coils:

- Bit-wise map of the CONTROL WORD (selected using parameter 5305 EFB CTRL PROFILE). The first 32 coils are reserved for this purpose.
- Relay output states, numbered sequentially beginning with coil 00033.

The following table summarizes the 0xxxx reference set:

Modbus Ref.	Internal Location (All Profiles)	ABB DRV LIM (5305 = 0)	DCU PROFILE (5305 = 1)	ABB DRV FULL (5305 = 2)
00001	CONTROL WORD – Bit 0	OFF1*	STOP	OFF1*
00002	CONTROL WORD – Bit 1	OFF2*	START	OFF2*
00003	CONTROL WORD – Bit 2	OFF3*	REVERSE	OFF3*
00004	CONTROL WORD – Bit 3	START	LOCAL	START
00005	CONTROL WORD – Bit 4	N/A	RESET	RAMP_OUT_ZERO*
00006	CONTROL WORD – Bit 5	RAMP_HOLD*	EXT2	RAMP_HOLD*
00007	CONTROL WORD – Bit 6	RAMP_IN_ZERO*	RUN_DISABLE	RAMP_IN_ZERO*
00008	CONTROL WORD – Bit 7	RESET	STPMODE_R	RESET
00009	CONTROL WORD – Bit 8	N/A	STPMODE_EM	N/A
00010	CONTROL WORD – Bit 9	N/A	STPMODE_C	N/A
00011	CONTROL WORD – Bit 10	N/A	RAMP_2	REMOTE_CMD*
00012	CONTROL WORD – Bit 11	EXT2	RAMP_OUT_0	EXT2
00013	CONTROL WORD – Bit 12	N/A	RAMP_HOLD	N/A
00014	CONTROL WORD – Bit 13	N/A	RAMP_IN_0	N/A
00015	CONTROL WORD – Bit 14	N/A	REQ_LOCALLOCK	N/A
00016	CONTROL WORD – Bit 15	N/A	TORQLIM2	N/A

Modbus Ref.	Internal Location (All Profiles)	ABB DRV LIM (5305 = 0)	DCU PROFILE (5305 = 1)	ABB DRV FULL (5305 = 2)
00017	CONTROL WORD – Bit 16	Does not apply	FBLOCAL_CTL	Does not apply
00018	CONTROL WORD – Bit 17		FBLOCAL_REF	
00019	CONTROL WORD – Bit 18		START_DISABLE1	
00020	CONTROL WORD – Bit 19		START_DISABLE2	
00021… **0**0032	Reserved	Reserved	Reserved	Reserved
00033	relay output 1	Relay Output 1	Relay Output 1	Relay Output 1
00034	relay output 2	Relay Output 2	Relay Output 2	Relay Output 2
00035	relay output 3	Relay Output 3	Relay Output 3	Relay Output 3
00036	relay output 4	Relay Output 4	Relay Output 4	Relay Output 4

* = Active low

For the 0xxxx registers:

- Status is always readable.
- Forcing is allowed by user configuration of the drive for fieldbus control.
- Additional relay outputs are added sequentially.

The ACS320 supports the following Modbus function codes for coils:

Function Code	Description
01	Read coil status
05	Force single coil
15 (0x0F Hex)	Force multiple coils

1xxxx Mapping – Modbus Discrete Inputs. The drive maps the following information to the 1xxxx Modbus set called Modbus Discrete Inputs:

- Bit-wise map of the STATUS WORD (selected using parameter 5305 EFB CTRL PROFILE). The first 32 inputs are reserved for this purpose.
- Discrete hardware inputs, numbered sequentially beginning with input 33.

The following table summarizes the 1xxxx reference set:

Modbus Ref.	Internal Location (All Profiles)	ABB DRV (5305 = 0 or 2)	DCU PROFILE (5305 = 1)
10001	STATUS WORD – Bit 0	RDY_ON	READY
10002	STATUS WORD – Bit 1	RDY_RUN	ENABLED
10003	STATUS WORD – Bit 2	RDY_REF	STARTED
10004	STATUS WORD – Bit 3	TRIPPED	RUNNING
10005	STATUS WORD – Bit 4	OFF_2_STA*	ZERO_SPEED
10006	STATUS WORD – Bit 5	OFF_3_STA*	ACCELERATE
10007	STATUS WORD – Bit 6	SWC_ON_INHIB	DECELERATE
10008	STATUS WORD – Bit 7	ALARM	AT_SETPOINT
10009	STATUS WORD – Bit 8	AT_SETPOINT	LIMIT

Modbus Ref.	Internal Location (All Profiles)	ABB DRV (5305 = 0 or 2)	DCU PROFILE (5305 = 1)
10010	STATUS WORD – Bit 9	REMOTE	SUPERVISION
10011	STATUS WORD – Bit 10	ABOVE_LIMIT	REV_REF
10012	STATUS WORD – Bit 11	EXT2	REV_ACT
10013	STATUS WORD – Bit 12	RUN_ENABLE	PANEL_LOCAL
10014	STATUS WORD – Bit 13	N/A	FIELDBUS_LOCAL
10015	STATUS WORD – Bit 14	N/A	EXT2_ACT
10016	STATUS WORD – Bit 15	N/A	FAULT
10017	STATUS WORD – Bit 16	Reserved	ALARM
10018	STATUS WORD – Bit 17	Reserved	REQ_MAINT
10019	STATUS WORD – Bit 18	Reserved	DIRLOCK
10020	STATUS WORD – Bit 19	Reserved	LOCALLOCK
10021	STATUS WORD – Bit 20	Reserved	CTL_MODE
10022	STATUS WORD – Bit 21	Reserved	Reserved
10023	STATUS WORD – Bit 22	Reserved	Reserved
10024	STATUS WORD – Bit 23	Reserved	Reserved
10025	STATUS WORD – Bit 24	Reserved	Reserved
10026	STATUS WORD – Bit 25	Reserved	Reserved
10027	STATUS WORD – Bit 26	Reserved	REQ_CTL
10028	STATUS WORD – Bit 27	Reserved	REQ_REF1
10029	STATUS WORD – Bit 28	Reserved	REQ_REF2
10030	STATUS WORD – Bit 29	Reserved	REQ_REF2EXT
10031	STATUS WORD – Bit 30	Reserved	ACK_STARTINH
10032	STATUS WORD – Bit 31	Reserved	ACK_OFF_ILCK
10033	DI1	DI1	DI1
10034	DI2	DI2	DI2
10035	DI3	DI3	DI3
10036	DI4	DI4	DI4
10037	DI5	DI5	DI5

* = Active low

For the 1xxxx registers:

- Additional discrete inputs are added sequentially.

The ACS320 supports the following Modbus function codes for discrete inputs:

Function Code	Description
02	Read input status

3xxxx Mapping – Modbus Inputs. The drive maps the following information to the 3xxxx Modbus addresses called Modbus input registers:

- Any user defined analog inputs.

The following table summarizes the input registers:

Modbus Reference	Internal Location (All Profiles)	Remarks
30001	ai1	This register shall report the level of Analog Input 1 (0…100%).
30002	ai2	This register shall report the level of Analog Input 2 (0…100%).

The ACH550 supports the following Modbus function codes for 3xxxx registers:

Function Code	Description
04	Read 3xxxx input status

4xxxx Register Mapping. The drive maps its parameters and other data to the 4xxxx holding registers as follows:

- 40001…40099 map to drive control and actual values. These registers are described in the table below.
- 40101…49999 map to drive parameters 0101…9999. Register addresses that do not correspond to drive parameters are invalid. If there is an attempt to read or write outside the parameter addresses, the Modbus interface returns an exception code to the controller.

The following table summarizes the 4xxxx drive control registers 40001…40099 (for 4xxxx registers above 40099, see the drive parameter list, e.g. 40102 is parameter 0102):

Modbus Register		Access	Remarks
40001	CONTROL WORD	R/W	Maps directly to the profile'S CONTROL WORD. Supported only if 5305 = 0 or 2 (ABB Drives profile). Parameter 5319 holds a copy in hex format.
40002	Reference 1	R/W	Range = 0…+20000 (scaled to 0…1105 REF1 MAX), or -20000…0 (scaled to 1105 REF1 MAX…0).
40003	Reference 2	R/W	Range = 0…+10000 (scaled to 0…1108 REF2 MAX), or -10000…0 (scaled to 1108 REF2 MAX…0).
40004	STATUS WORD	R	Maps directly to the profile'S STATUS WORD. Supported only if 5305 = 0 or 2 (ABB Drives profile). Parameter 5320 holds a copy in hex format.
40005	Actual 1 (select using 5310)	R	By default, stores a copy of 0103 OUTPUT FREQ. Use parameter 5310 to select a different actual value for this register.
40006	Actual 2 (select using 5311)	R	By default, stores a copy of 0104 CURRENT. Use parameter 5311 to select a different actual value for this register.
40007	Actual 3 (select using 5312)	R	By default, stores nothing. Use parameter 5312 to select an actual value for this register.
40008	Actual 4 (select by 5313)	R	By default, stores nothing. Use parameter 5313 to select an actual value for this register.
40009	Actual 5 (select using 5314)	R	By default, stores nothing. Use parameter 5314 to select an actual value for this register.

Modbus Register		Access	Remarks
40010	Actual 6 (select using 5315)	R	By default, stores nothing. Use parameter 5315 to select an actual value for this register.
40011	Actual 7 (select using 5316)	R	By default, stores nothing. Use parameter 5316 to select an actual value for this register.
40012	Actual 8 (select using 5317)	R	By default, stores nothing. Use parameter 5317 to select an actual value for this register.
40031	ACS320 CONTROL WORD LSW	R/W	Maps directly to the Least Significant Word of the DCU profile's CONTROL WORD. Supported only if 5305 = 1. See parameter 0301.
40032	ACS320 CONTROL WORD MSW	R	Maps directly to the Most Significant Word of the DCU profile's CONTROL WORD. Supported only if 5305 = 1. See parameter 0302.
40033	ACS320 STATUS WORD LSW	R	Maps directly to the Least Significant Word of the DCU profile's CONTROL WORD. Supported only if 5305 = 1. See parameter 0303.
40034	ACS320 STATUS WORD MSW	R	Maps directly to the Most Significant Word of the DCU profile's CONTROL WORD. Supported only if 5305 = 1. See parameter 0304.

For the Modbus protocol, drive parameters in group 53 report the parameter mapping to 4xxxx Registers.

Code	Description
5310	EFB PAR 10 Specifies the parameter mapped to Modbus register 40005.
5311	EFB PAR 11 Specifies the parameter mapped to Modbus register 40006.
5312	EFB PAR 12 Specifies the parameter mapped to Modbus register 40007.
5313	EFB PAR 13 Specifies the parameter mapped to Modbus register 40008.
5314	EFB PAR 14 Specifies the parameter mapped to Modbus register 40009.
5315	EFB PAR 15 Specifies the parameter mapped to Modbus register 40010.
5316	EFB PAR 16 Specifies the parameter mapped to Modbus register 40011.
5317	EFB PAR 17 Specifies the parameter mapped to Modbus register 40012.
5318	Reserved.
5319	EFB PAR 19 Holds a copy (in hex) of the CONTROL WORD, Modbus register 40001.
5320	EFB PAR 20 Holds a copy (in hex) of the STATUS WORD, Modbus register 40004.

Except where restricted by the drive, all parameters are available for both reading and writing. The parameter writes are verified for the correct value, and for a valid register addresses.

Note! Parameter writes through standard Modbus are always volatile i.e. modified values are not automatically stored to permanent memory. Use parameter 1607 PARAM. SAVE to save all altered values.

The AC320 supports the following Modbus function codes for 4xxxx registers:

Function Code	Description
03	Read holding 4xxxx registers
06	Preset single 4xxxx register
16 (0x10 Hex)	Preset multiple 4xxxx registers
23 (0x17 Hex)	Read/write 4xxxx registers

Actual Values

The contents of the register addresses 40005…40012 are ACTUAL VALUES and are:

- Specified using parameters 5310…5317.
- Read-only values containing information on the operation of the drive.
- 16-bit words containing a sign bit and a 15-bit integer.
- When negative values, written as the two's complement of the corresponding positive value.
- Scaled as described earlier in *Actual Value Scaling*.

Exception Codes

Exception codes are serial communication responses from the drive. The ACS320 supports the standard Modbus exception codes defined below.

Exception Code	Name	Meaning
01	ILLEGAL FUNCTION	Unsupported Command
02	ILLEGAL DATA ADDRESS	The data address received in the query is not allowable. It is not a defined parameter/group.
03	ILLEGAL DATA VALUE	A value contained in the query data field is not an allowable value for the AC320, because it is one of the following: Outside min. or max. limits. Parameter is read-only. Message is too long. Parameter write not allowed when start is active. Parameter write not allowed when factory macro is selected.

ABB Control Profiles Technical Data

Overview

ABB Drives Profile

The ABB Drives profile provides a standard profile that can be used on multiple protocols, including Modbus and the protocols available on the FBA module. Two implementations of the ABB Drives profile are available:

- ABB DRV FULL – This implementation standardizes the control interface with ACS600 and ACS800 drives.
- ABB DRV LIM – This implementation standardizes the control interface with ACH400 drives. This implementation does not support two control word bits supported by ABB DRV FULL.

Except as noted, the following “ABB Drives Profile” descriptions apply to both implementations.

DCU Profile

The DCU profile extends the control and status interface to 32 bits, and is the internal interface between the main drive application and the embedded fieldbus environment.

Control Word

The CONTROL WORD is the principal means for controlling the drive from a fieldbus system. The fieldbus master station sends the CONTROL WORD to the drive. The drive switches between states according to the bit-coded instructions in the CONTROL WORD. Using the CONTROL WORD (ABB Drives profile version) requires that:

- The drive is in remote (REM) control.
- The serial communication channel is defined as the source for controlling commands (set using parameters 1001 EXT1 COMMANDS, 1002 EXT2 COMMANDS and 1102 EXT1/EXT2 SEL).
- The serial communication channel used is configured to use an ABB control profile. For example, to use the control profile ABB DRV FULL, requires both parameter 9802 COMM PROT SEL = 1 (STD MODBUS), and parameter 5305 EFB CTRL PROFILE = 2 (ABB DRV FULL).

ABB Drives Profile

The following table and the state diagram later in this sub-section describe the CONTROL WORD content for the ABB Drives Profile.

ABB Drives Profile (EFB) CONTROL WORD				
Bit	**Name**	**Value**	**Commanded State**	**Comments**
0	OFF1 CONTROL	1	READY TO OPERATE	Enter READY TO OPERATE
		0	EMERGENCY OFF	Drive ramps to stop according to currently active deceleration ramp (2203 or 2205) Normal command sequence: • Enter OFF1 ACTIVE • Proceed to READY TO SWITCH ON, unless other interlocks (OFF2, OFF3) are active.
1	OFF2 CONTROL	1	OPERATING	Continue operation (OFF2 inactive)
		0	EMERGENCY OFF	Drive coasts to stop. Normal command sequence: • Enter OFF2 ACTIVE • Proceed to SWITCHON INHIBITED
2	OFF3 CONTROL	1	OPERATING	Continue operation (OFF3 inactive)
		0	EMERGENCY STOP	Drive stops within in time specified by parameter 2208. Normal command sequence: • Enter OFF3 active • Proceed to switch on inhibited **WARNING! Be sure motor and driven equipment can be stopped using this mode.**
3	INHIBIT OPERATION	1	OPERATION ENABLED	Enter OPERATION ENABLED (Note the Run enable signal must be active. See 1601. If 1601 is set to COMM, this bit also actives the Run Enable signal.)
		0	OPERATION INHIBITED	Inhibit operation. Enter OPERATION INHIBITED
4	Unused (**ABB DRV LIM**)			
	RAMP_OUT_ ZERO (**ABB DRV FULL**)	1	NORMAL OPERATION	Enter RAMP FUNCTION GENERATOR: ACCELERATION ENABLED
		0	RFG OUT ZERO	Force ramp function generator output to Zero. Drive ramps to stop (current and DC voltage limits in force).
5	RAMP_HOLD	1	RFG OUT ENABLED	Enable ramp function. Enter RAMP FUNCTION GENERATOR: ACCELERATOR ENABLED
		0	RFG OUT HOLD	Halt ramping (Ramp Function Generator output held)
6	RAMP_IN_ ZERO	1	RFG INPUT ENABLED	Normal operation. Enter OPERATING
		0	RFG INPUT ZERO	Force Ramp Function Generator input to zero.

ABB Drives Profile (EFB) CONTROL WORD				
Bit	**Name**	**Value**	**Commanded State**	**Comments**
7	RESET	0=>1	RESET	Fault reset if an active fault exists (Enter SWITCH-ON INHIBITED). Effective if 1604 = COMM.
		0	OPERATING	Continue normal operation
8…9	Unused			
10	Unused (**ABB DRV LIM**)			
	REMOTE_CMD (**ABB DRV FULL**)	1		Fieldbus control enabled.
		0		• CW ≠ 0 or Ref ≠ 0: Retain last CW and Ref. • CW = 0 and Ref = 0: Fieldbus control enabled. • Ref and deceleration/acceleration ramp are locked.
11	EXT CTRL LOC	1	EXT2 SELECT	Select external control location 2 (EXT2). Effective if 1102 = COMM.
		0	EXT1 SELECT	Select external control location 1 (EXT1). Effective if 1102 = COMM.
12…15	Unused			

DCU Profile

The following tables describe the CONTROL WORD content for the DCU profile.

DCU Profile CONTROL WORD (See Parameter 0301)				
Bit	**Name**	**Value**	**Command/Req.**	**Comments**
0	STOP	1	Stop	Stops according to either the stop mode parameter or the stop mode requests (bits 7 and 8). Simultaneous STOP and START commands result in a stop command.
		0	(no op)	
1	START	1	Start	
		0	(no op)	
2	REVERSE	1	Reverse direction	This bit XOR'd with the sign of the reference defines direction.
		0	Forward direction	
3	LOCAL	1	Local mode	When the fieldbus sets this bit, it steals control and the drive moves to fieldbus local control mode.
		0	External mode	
4	RESET	-> 1	Reset	Edge sensitive.
		other	(no op)	
5	EXT2	1	Switch to EXT2	
		0	Switch to EXT1	
6	RUN_DISABLE	1	Run disable	Inverted run enable.
		0	Run enable on	
7	STPMODE_R	1	Normal ramp stop mode	
		0	(no op)	

DCU Profile CONTROL WORD (See Parameter 0301)				
Bit	**Name**	**Value**	**Command/Req.**	**Comments**
8	STPMODE_EM	1	Emergency ramp stop mode	
		0	(no op)	
9	STPMODE_C	1	Coast stop mode	
		0	(no op)	
10	RAMP_2	1	Ramp pair 2	
		0	Ramp pair 1	
11	RAMP_OUT_0	1	Ramp output to 0	
		0	(no op)	
12	RAMP_HOLD	1	Ramp freeze	
		0	(no op)	
13	RAMP_IN_0	1	Ramp input to 0	
		0	(no op)	
14	RREQ_LOCALLOC	1	Local mode lock	In lock, drive will not switch to local mode.
		0	(no op)	
15	TORQLIM2	1	Torque limit pair 2	
		0	Torque limit pair 1	

DCU Profile CONTROL WORD (See Parameter 0302)				
Bit	**Name**	**Value**	**Function**	**Comments**
16…26	Reserved			
27	REF_CONST	1	Constant speed ref.	These bits are only for supervision purposes.
		0	(no op)	
28	REF_AVE	1	Average speed ref.	
		0	(no op)	
29	LINK_ON	1	Master is detected in link	
		0	Link is down	
30	REQ_STARTINH	1	Start inhibit request is pending	
		0	Start inhibit request is OFF	
31	OFF_INTERLOCK	1	Panel OFF button pressed	For the control panel (or PC tool) this is the OFF button interlock.
		0	(no op)	

Status Word

The contents of the STATUS WORD is status information, sent by the drive to the master station.

ABB Drives Profile

The following table and the state diagram later in this sub-section describe the status word content for the ABB Drives Profile.

ABB Drives Profile (EFB) STATUS WORD			
Bit	**Name**	**Value**	**Description (Correspond to states/boxes in the state diagram)**
0	RDY_ON	1	READY TO SWITCH ON
		0	NOT READY TO SWITCH ON
1	RDY_RUN	1	READY TO OPERATE
		0	OFF1 ACTIVE
2	RDY_REF	1	OPERATION ENABLED
		0	OPERATION INHIBITED
3	TRIPPED	0…1	FAULT
		0	No fault
4	OFF_2_STA	1	OFF2 INACTIVE
		0	**OFF2 ACTIVE**
5	OFF_3_STA	1	OFF3 INACTIVE
		0	**OFF3 ACTIVE**
6	SWC_ON_INHIB	1	SWITCH-ON INHIBIT ACTIVE
		0	SWITCH-ON INHIBIT NOT ACTIVE
7	ALARM	1	Warning/alarm (See “Alarm Listing” in the “Diagnostics” section for details on alarms.)
		0	No warning/alarm
8	AT_SETPOINT	1	OPERATING**.** Actual value equals (within tolerance limits) the reference value.
		0	Actual value is outside tolerance limits (not equal to reference value).
9	REMOTE	1	Drive control location: REMOTE (EXT1 or EXT2)
		0	Drive control location: LOCAL
10	ABOVE_LIMIT	1	Supervised parameter’s value ≥ supervision high limit. Bit remains “1” until supervised parameter’s value < supervision low limit. See group 32, Supervision
		0	Supervised parameter’s value < supervision low limit. Bit remains “0” until supervised parameter’s value > supervision high limit. See group 32, Supervision
11	EXT CTRL LOC	1	External control location 2 (EXT2) selected
		0	External control location 1 (EXT1) selected
12	EXT RUN ENABLE	1	External Run Enable signal received
		0	No External Run Enable signal received
13… 15	Unused		

DCU Profile

The following tables describe the STATUS WORD content for the DCU profile.

DCU Profile STATUS WORD (See Parameter 0303)			
Bit	**Name**	**Value**	**Status**
0	READY	1	Drive is ready to receive start command.
		0	Drive is not ready.
1	ENABLED	1	External run enable signal received.
		0	No external run enable signal received.
2	STARTED	1	Drive has received start command.
		0	Drive has not received start command.
3	RUNNING	1	Drive is modulating.
		0	Drive is not modulating.
4	ZERO_SPEED	1	Drive is at zero speed.
		0	Drive has not reached zero speed.
5	ACCELERATE	1	Drive is accelerating.
		0	Drive is not accelerating.
6	DECELERATE	1	Drive is decelerating.
		0	Drive is not decelerating.
7	AT_SETPOINT	1	Drive is at setpoint.
		0	Drive has not reached setpoint.
8	LIMIT	1	Operation is limited by Group 20 settings.
		0	Operation is within Group 20 settings.
9	SUPERVISION	1	A supervised parameter (Group 32) is outside its limits.
		0	All supervised parameters are within limits.
10	REV_REF	1	Drive reference is in reverse direction.
		0	Drive reference is in forward direction.
11	REV_ACT	1	Drive is running in reverse direction.
		0	Drive is running in forward direction.
12	PANEL_LOCAL	1	Control is in control panel (or PC tool) local mode.
		0	Control is not in control panel local mode.
13	FIELDBUS_LOCAL	1	Control is in fieldbus local mode (steals control panel local).
		0	Control is not in fieldbus local mode.
14	EXT2_ACT	1	Control is in EXT2 mode.
		0	Control is in EXT1 mode.
15	FAULT	1	Drive is in a fault state.
		0	Drive is not in a fault state.

DCU Profile STATUS WORD (See Parameter 0304)			
Bit	**Name**	**Value**	**Status**
16	ALARM	1	An alarm is on.
		0	No alarms are on.
17	REQ_MAINT	1	A maintenance request is pending.
		0	No maintenance request is pending.
18	DIRLOCK	1	Direction lock is ON. (Direction change is locked out.)
		0	Direction lock is OFF.
19	LOCALLOCK	1	Local mode lock is ON. (Local mode is locked out.)
		0	Local mode lock is OFF.
20	CTL_MODE	1	Drive is in vector control mode.
		0	Drive is in scalar control mode.
21…25	Reserved		
26	REQ_CTL	1	Copy the control word
		0	(no op)
27	REQ_REF1	1	Reference 1 requested in this channel.
		0	Reference 1 is not requested in this channel.
28	REQ_REF2	1	Reference 2 requested in this channel.
		0	Reference 2 is not requested in this channel.
29	REQ_REF2EXT	1	External PID reference 2 requested in this channel.
		0	External PID reference 2 is not requested in this channel.
30	ACK_STARTINH	1	A start inhibit from this channel is granted.
		0	A start inhibit from this channel is not granted.
31	ACK_OFF_ILCK	1	Start inhibit due to OFF button
		0	Normal operation

State Diagram

ABB Drives Profile


To illustrate the operation of the state diagram, the following example (ABB DRV LIM implementation of the ABB Drives profile) uses the control word to start the drive:

- First, the requirements for using the CONTROL WORD must be met. See above.
- When the power is first connected, the state of the drive is not ready to switch on. See dotted lined path (▬▬) in the state diagram below.
- Use the CONTROL WORD to step through the state machine states until the OPERATING state is reached, meaning that the drive is running and follows the given reference. See table below.

Step	CONTROL WORD **Value**	**Description**
1	CW = 0000 0000 0000 0110 bit 15 bit 0	This CW value changes the drive state to READY TO SWITCH ON.

Step	CONTROL WORD **Value**	**Description**
2		Wait at least 100 ms before proceeding.
3	CW = 0000 0000 0000 0111	This CW value changes the drive state to READY TO OPERATE.
4	CW = 0000 0000 0000 1111	This CW value changes the drive state to OPERATION ENABLED. The drive starts, but will not accelerate.
5	CW = 0000 0000 0010 1111	This CW value releases the ramp function generator (RFG) output, and changes the drive state to RFG: ACCELERATOR ENABLED.
6	CW = 0000 0000 0110 1111	This CW value releases the ramp function generator (RFG) output, and changes the drive state to OPERATING. The drive accelerates to the given reference and follows the reference.

The state diagram below describes the start-stop function of CONTROL WORD (CW) and STATUS WORD (SW) bits for the ABB Drives profile.

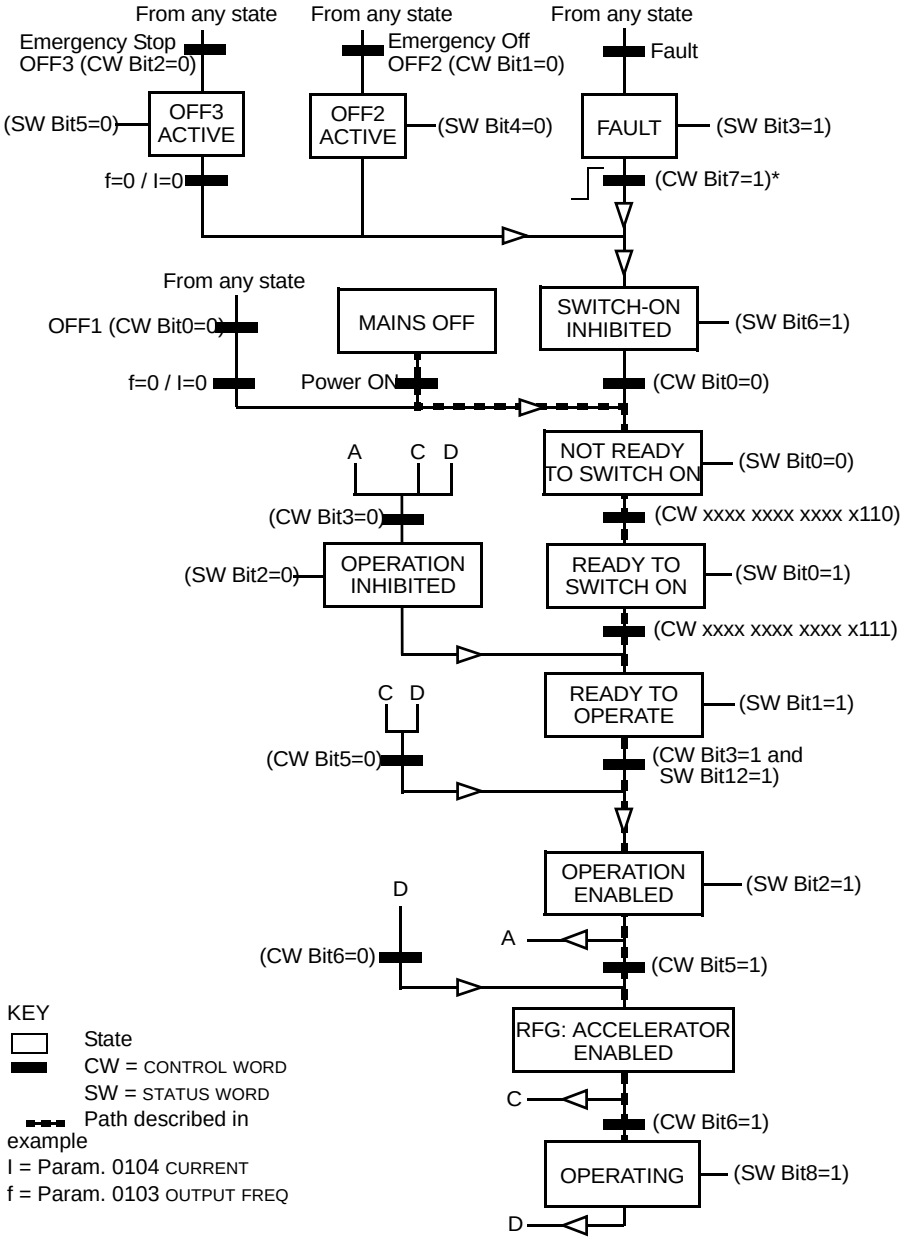

*This state transition also occurs if the fault is reset from any other source (e.g. digital input).

Reference Scaling

ABB Drives and DCU Profiles

The following table describes REFERENCE scaling for the ABB Drives profile.

ABB Drives and DCU Profiles				
Reference	**Range**	**Reference Type**	**Scaling**	**Remarks**
REF1	-32767 … +32767	Speed or frequency	-20000 = -**(par. 1105)** 0 = 0 +20000 = **(par. 1105)** (20000 corresponds to 100%)	Final reference limited by 1104/1105. Actual motor speed limited by 2001/2002 (speed) or 2007/2008 (frequency).
REF2	-32767 … +32767	Speed or frequency	-10000 = -**(par. 1108)** 0 = 0 +10000 = **(par. 1108)** (10000 corresponds to 100%)	Final reference limited by 1107/1108. Actual motor speed limited by 2001/2002 (speed) or 2007/2008 (frequency).
		Torque	-10000 = -**(par. 1108)** 0 = 0 +10000 = **(par. 1108)** (10000 corresponds to 100%)	Final reference limited by 2015/2017 (torque1) or 2016/2018 (torque2).
		PID Reference	-10000 = -**(par. 1108)** 0 = 0 +10000 = **(par. 1108)** (10000 corresponds to 100%)	Final reference limited by 4012/4013 (PID set1) or 4112/4113 (PID set2).

Note! The setting of parameter 1104 REF1 MIN and 1107 REF2 MIN has no effect on the scaling of references.

When parameter 1103 REF1 SELECT or 1106 REF2 SELECT is set to COMM+AI1 or COMM*AI1, the reference is scaled as follows:

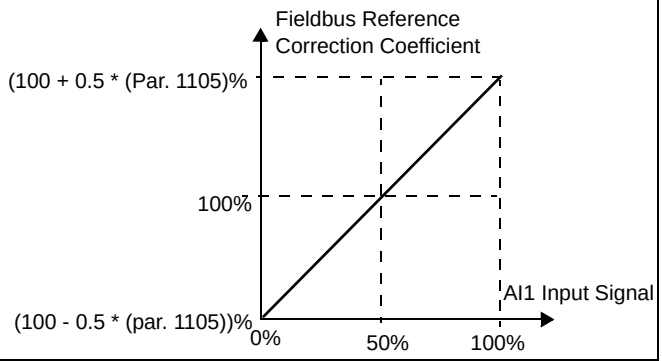
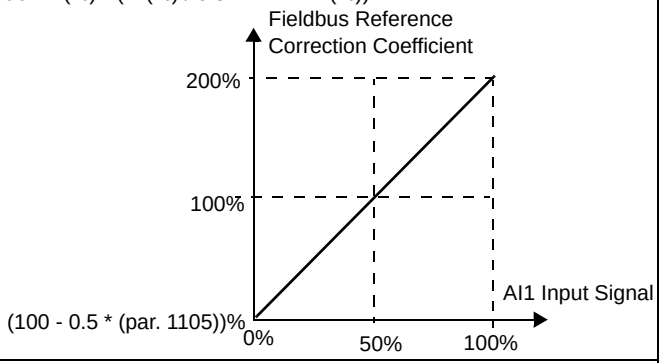
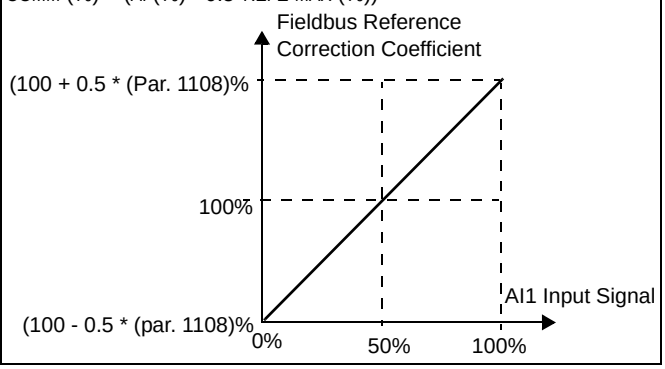
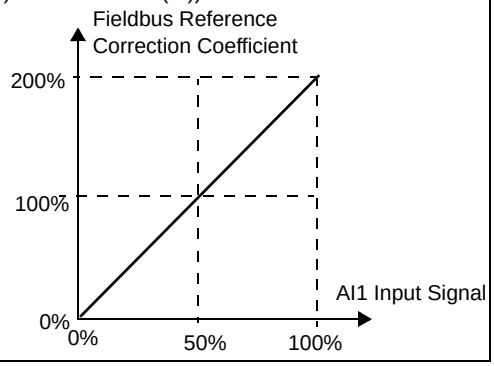
ABB Drives and DCU Profiles		
Reference	**Value Setting**	**AI Reference Scaling**
REF1	COMM+AI1	COMM (%) +(AI (%) - 0.5*REF1 MAX (%)) 
REF1	COMM*AI1	COMM (%) * (AI (%) / 0.5*REF1 MAX (%)) 
REF2	COMM+AI1	COMM (%) + (AI (%) - 0.5*REF2 MAX (%)) 

ABB Drives and DCU Profiles		
Reference	**Value Setting**	**AI Reference Scaling**
REF2	COMM*AI1	COMM (%) * (AI (%) / 0.5*REF2 MAX (%)) 

Reference Handling

Use group 10 parameters to configure for control of rotation direction for each control location (EXT1 and EXT2). The following diagrams illustrate how group 10 parameters and the sign of the fieldbus reference interact to produce REFERENCE values (REF1 and REF2). Note, fieldbus references are bipolar, that is they can be positive or negative.

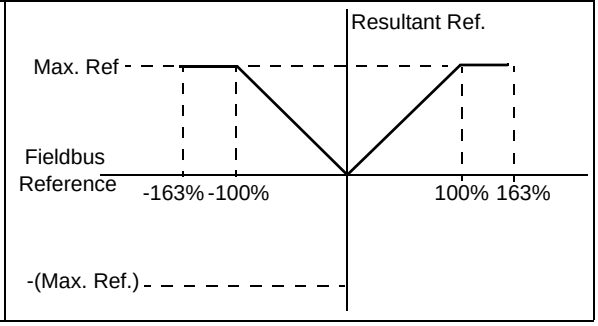
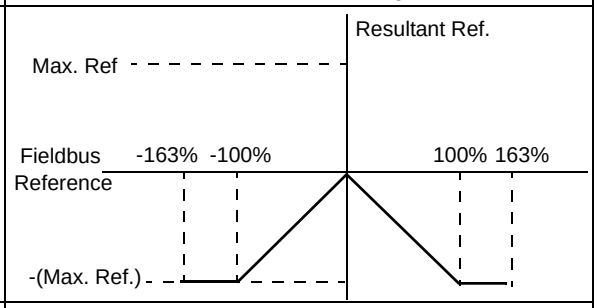
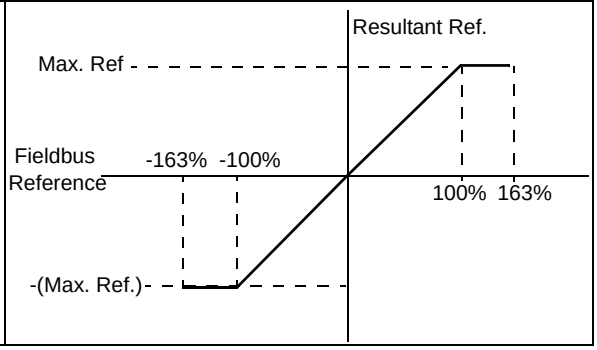
ABB Drives Profile		
Parameter	**Value Setting**	**AI Reference Scaling**
1003 DIRECTION	1 (FORWARD)	

ABB Drives Profile		
Parameter	**Value Setting**	**AI Reference Scaling**
1003 DIRECTION	2 (REVERSE)	
1003 DIRECTION	3 (request)	

12

Fault tracing

What this chapter contains

The chapter tells how to reset faults and view fault history. It also lists all alarm and fault messages including the possible cause and corrective actions.

Safety

WARNING! Only qualified electricians are allowed to maintain the drive. Read the safety instructions in chapter *Safety* on page *15* before you work on the drive.

Alarm and fault indications

Fault is indicated with a red LED. See section *LEDs* on page *347*.

An alarm or fault message on the panel display indicates abnormal drive status. Using the information given in this chapter most alarm and fault causes can be identified and corrected. If not, contact an ABB representative.

The four digit code number in parenthesis after the fault is for the fieldbus communication. (See chapter *Fieldbus control with embedded fieldbus* on page *257*.)

How to reset

The drive can be reset either by pressing the keypad key RESET EXIT (Basic Control Panel) or RESET (Assistant Control Panel), through digital input or fieldbus, or by switching the supply voltage off for a while. The source for the fault reset signal is selected by parameter *1604* FAULT RESET SEL. When the fault has been removed, the motor can be restarted.

Fault history

When a fault is detected, it is stored in the Fault History. The latest faults are stored together with the time stamp.

Parameters *0401* LAST FAULT, *0412* PREVIOUS FAULT 1 and *0413* PREVIOUS FAULT 2 store the most recent faults. Parameters *0404*…*0409* show drive operation data at the time the latest fault occurred. The Assistant Control Panel provides additional information about the fault history. See section *Fault Logger Mode* on page *64* for more information.

Alarm messages generated by the drive

CODE	ALARM	CAUSE	WHAT TO DO
2001	OVERCURRENT *0308* bit 0 (programmable fault function *1610*)	Output current limit controller is active.	Check motor load. Check acceleration time (*2202* and *2205*). Check motor and motor cable (including phasing). Check ambient conditions. Load capacity decreases if installation site ambient temperature exceeds 40 °C. See section *Derating* on page *350*.
2002	OVERVOLTAGE *0308* bit 1 (programmable fault function *1610*)	DC overvoltage controller is active.	Check deceleration time (*2203* and *2206*). Check input power line for static or transient overvoltage.
2003	UNDERVOLTAGE *0308* bit 2 (programmable fault function *1610*)	DC undervoltage controller is active.	Check input power supply.
2004	DIR LOCK *0308* bit 3	Change of direction is not allowed.	Check parameter *1003* DIRECTION settings.
2005	IO COMM *0308* bit 4 (programmable fault function *3018*, *3019*)	Fieldbus communication break	Check status of fieldbus communication. See chapter *Fieldbus control with embedded fieldbus* on page *257*. Check fault function parameter settings. Check connections. Check if master can communicate.
2006	AI1 LOSS *0308* bit 5 (programmable fault function *3001*, *3021*)	Analog input AI1 signal has fallen below limit defined by parameter *3021* AI1 FAULT LIMIT.	Check fault function parameter settings. Check for proper analog control signal levels. Check connections.
2007	AI2 LOSS *0308* bit 6 (programmable fault function *3001*, *3021*)	Analog input AI2 signal has fallen below limit defined by parameter *3022* AI2 FAULT LIMIT.	Check fault function parameter settings. Check for proper analog control signal levels. Check connections.
2008	PANEL LOSS *0308* bit 7 (programmable fault function *3002*)	Control panel selected as active control location for drive has ceased communicating.	Check panel connection. Check fault function parameters. Check control panel connector. Refit control panel in mounting platform. If drive is in external control mode (REM) and is set to accept start/stop, direction commands or references via control panel: Check *Group 10: AcStart/Stop/Dir* and *Group 11: Reference Select* settings.

CODE	ALARM	CAUSE	WHAT TO DO
2009	DEVICE OVERTEMP *0308* bit 8	Drive IGBT temperature is excessive. Alarm limit is 120 °C.	Check ambient conditions. See also section *Derating* on page *350*. Check air flow and fan operation. Check motor power against unit power.
2010	MOTOR TEMP *0305* bit 9 (programmable fault function *3005*…*3009* / *3503*)	Motor temperature is too high (or appears to be too high) due to excessive load, insufficient motor power, inadequate cooling or incorrect start-up data.	Check motor ratings, load and cooling. Check start-up data. Check fault function parameters.
		Measured motor temperature has exceeded alarm limit set by parameter *3503* ALARM LIMIT.	Check value of alarm limit. Check that actual number of sensors corresponds to value set by parameter (*2501* SENSOR TYPE). Let motor cool down. Ensure proper motor cooling: Check cooling fan, clean cooling surfaces, etc.
2012	MOTOR STALL *0308* bit 11 (programmable fault function *3010*…*3012*)	Motor is operating in stall region due to eg excessive load or insufficient motor power.	Check motor load and drive ratings. Check fault function parameters.
2013 [1)]	AUTORESET *0308* bit 12	Automatic reset alarm	Check parameter *Group 31: Automatic Reset* settings.
2014 [1)]	AUTOCHANGE *0308* bit 13	PFC Autochange function is active.	See parameter *Group 81: PFA*, section on page *89*.
2015	PFC I LOCK *0308* bit 14	PFC interlocks are active.	Drive cannot start • any motor (when Autochange is used) • the speed regulated motor (when Autochange is not used). See parameter group *Group 81: PFA*.
2018 [1)]	PID SLEEP *3009* bit 1	Sleep function has entered sleeping mode.	See parameter *Group 40: Process PID Set 1*…*Group 41: Process PID Set 2*.
2021	START ENABLE 1 MISSING *3009* bit 4	No Start Enable 1 signal received	Check parameter *1608* START ENABLE 1settings. Check digital input connections. Check fieldbus communication settings.
2022	START ENABLE 2 MISSING *3009* bit 5	No Start Enable 2 signal received	Check parameter *1609* START ENABLE 2 settings. Check digital input connections. Check fieldbus communication settings.

CODE	ALARM	CAUSE	WHAT TO DO
2023	EMERGENCY STOP *3009* bit 6	Drive has received emergency stop command and ramps to stop according to ramp time defined by parameter *2208* EMERG DEC TIME.	Check that it is safe to continue operation. Return emergency stop push button to normal position.
2025	FIRST START *3009* bit 8	Motor identification magnetization is on. This alarm belongs to normal start-up procedure.	Wait until drive indicates that motor identification is completed.
2027	USER LOAD CURVE *3009* bit 10	Condition defined by *3701* USER LOAD C MODE has been valid longer than half of the time set by *3703* USER LOAD C TIME.	See parameter *Group 37: User Load Curve*.
2028	START DELAY *3009* bit 11	Start delay in progress	See parameter *2113* START DELAY.
2030	INLET LOW *3009* bit 13	Pressure at pump/fan inlet too low	Check for a closed valve on the inlet side of the pump/fan. Check piping for leaks. See parameter *Group 44: Pump Protection*.
2031	OUTLET HIGH *3009* bit 14	Pressure at pump/fan outlet too high	Check piping for blocks. See parameter *Group 44: Pump Protection*.
2032	PIPE FILL *3009* bit 15	Pipe fill in progress	See parameters *4421*…*4426*.
2033	INLET VERY LOW *0310* bit 0	Pressure at pump/fan inlet too low	Check for a closed valve on the inlet side of the pump/fan. Check piping for leaks. See parameter *Group 44: Pump Protection*.
2034	OUTLET VERY HIGH *0310* bit 1	Pressure at pump/fan outlet too high	Check piping for blocks. See parameter *Group 44: Pump Protection*.

[1] Even when the relay output is configured to indicate alarm conditions (eg parameter *1401* RELAY OUTPUT 1 = 5 (ALARM) or 16 (FLT/ALARM)), this alarm is not indicated by a relay output.

Alarms generated by the Basic Control Panel

The Basic Control Panel indicates Control Panel alarms with a code, A5xxx.

ALARM CODE	CAUSE	WHAT TO DO
5001	Drive is not responding.	Check panel connection.
5002	Incompatible communication profile	Contact your local ABB representative.
5010	Corrupted panel parameter backup file	Retry parameter upload. Retry parameter download.
5011	Drive is controlled from another source.	Change drive control to local control mode.
5012	Direction of rotation is locked.	Enable change of direction. See parameter *1003* DIRECTION.
5013	Panel control is disabled because start inhibit is active.	Start from the panel is not possible. Reset the emergency stop command or remove the 3-wire stop command before starting from the panel. See parameters *1001* EXT1 COMMANDS, *1002* EXT2 COMMANDS and *2109* EMERG STOP SEL.
5014	Panel control is disabled because of drive fault.	Reset drive fault and retry.
5015	Panel control is disabled because local control mode lock is active.	Deactivate local control mode lock and retry. See parameter *1606* LOCAL LOCK.
5018	Parameter default value is not found.	Contact your local ABB representative.
5019	Writing non-zero parameter value is prohibited.	Only parameter reset is allowed.
5020	Parameter or parameter group does not exist or parameter value is inconsistent.	Contact your local ABB representative.
5021	Parameter or parameter group is hidden.	Contact your local ABB representative.
5022	Parameter is write protected.	Parameter value is read-only and cannot be changed.
5023	Parameter change is not allowed, when drive is running.	Stop drive and change parameter value.
5024	Drive is executing task.	Wait until task is completed.
5025	Software is being uploaded or downloaded.	Wait until upload/download is complete.
5026	Value is at or below minimum limit.	Contact your local ABB representative.
5027	Value is at or above maximum limit.	Contact your local ABB representative.
5028	Invalid value	Contact your local ABB representative.
5029	Memory is not ready.	Retry.

ALARM CODE	CAUSE	WHAT TO DO
5030	Invalid request	Contact your local ABB representative.
5031	Drive is not ready for operation, eg due to low DC voltage.	Check input power supply.
5032	Parameter error	Contact your local ABB representative.
5040	Parameter download error. Selected parameter set is not in current parameter backup file.	Perform upload function before download.
5041	Parameter backup file does not fit into memory.	Contact your local ABB representative.
5042	Parameter download error. Selected parameter set is not in current parameter backup file.	Perform upload function before download.
5043	No start inhibit	
5044	Parameter backup file restoring error	Check that file is compatible with drive.
5050	Parameter upload aborted	Retry parameter upload.
5051	File error	Contact your local ABB representative.
5052	Parameter upload has failed.	Retry parameter upload.
5060	Parameter download aborted	Retry parameter download.
5062	Parameter download has failed.	Retry parameter download.
5070	Panel backup memory write error	Contact your local ABB representative.
5071	Panel backup memory read error	Contact your local ABB representative.
5080	Operation is not allowed because drive is not in local control mode.	Switch to local control mode.
5081	Operation is not allowed because of active fault.	Check cause of fault and reset fault.
5083	Operation is not allowed because parameter lock is on.	Check parameter *1602* PARAMETER LOCK setting.
5084	Operation is not allowed because drive is performing task.	Wait until task is completed and retry.
5085	Parameter download from source to destination drive has failed.	Check that source and destination drive types are same, ie ACS320. See the type designation label of the drive.
5086	Parameter download from source to destination drive has failed.	Check that source and destination drive type designations are the same. See type designation labels of the drives.

ALARM CODE	CAUSE	WHAT TO DO
5087	Parameter download from source to destination drive has failed because parameter sets are incompatible.	Check that source and destination drive information are same. See parameters in *Group 33: Information*.
5088	Operation has failed because of drive memory error.	Contact your local ABB representative.
5089	Download has failed because of CRC error.	Contact your local ABB representative.
5090	Download has failed because of data processing error.	Contact your local ABB representative.
5091	Operation has failed because of parameter error.	Contact your local ABB representative.
5092	Parameter download from source to destination drive has failed because parameter sets are incompatible.	Check that source and destination drive information are same. See parameters in *Group 33: Information*.

Fault messages generated by the drive

CODE	FAULT	CAUSE	WHAT TO DO
0001	OVERCURRENT (2310) *0305* bit 0	Output current has exceeded trip level.	Check motor load. Check acceleration time (*2202* and *2505*). Check motor and motor cable (including phasing). Check ambient conditions. Load capacity decreases if installation site ambient temperature exceeds 40 °C. See section *Derating* on page *350*.
0002	DC OVERVOLT (3210) *0305* bit 1	Excessive intermediate circuit DC voltage. DC overvoltage trip limit is 420 V for 200 V drives and 840 V for 400 V drives.	Check that overvoltage controller is on (parameter *2505* OVERVOLT CTRL). Check input power line for static or transient overvoltage. Check deceleration time (*2203*, *2206*).
0003	DEV OVERTEMP (4210) *0305* bit 2	Drive IGBT temperature is excessive. Fault trip limit is 135 °C.	Check ambient conditions. See also section *Derating* on page *350*. Check air flow and fan operation. Check motor power against unit power.
0004	SHORT CIRC (2340) *0305* bit 3	Short circuit in motor cable(s) or motor	Check motor and motor cable.
0006	DC UNDERVOLT (3220) *0305* bit 5	Intermediate circuit DC voltage is not sufficient due to missing input power line phase, blown fuse, rectifier bridge internal fault or too low input power.	Check that undervoltage controller is on (parameter *2006* UNDERVOLT CTRL). Check input power supply and fuses.
0007	AI1 LOSS (8110) *0305* bit 6 (programmable fault function *3001*, *3021*)	Analog input AI1 signal has fallen below limit defined by parameter *3021* AI1 FAULT LIMIT.	Check fault function parameter settings. Check for proper analog control signal levels. Check connections.
0008	AI2 LOSS (8110) *0305* bit 7 (programmable fault function *3001*, *3022*)	Analog input AI2 signal has fallen below limit defined by parameter *3022* AI2 FAULT LIMIT.	Check fault function parameter settings. Check for proper analog control signal levels. Check connections.

CODE	FAULT	CAUSE	WHAT TO DO
0009	MOT OVERTEMP (4310) *0305* bit 8 (programmable fault function *0305*…*3009* / *3504*)	Motor temperature is too high (or appears to be too high) due to excessive load, insufficient motor power, inadequate cooling or incorrect start-up data.	Check motor ratings, load and cooling. Check start-up data. Check fault function parameters.
		Measured motor temperature has exceeded fault limit set by parameter *3504* FAULT LIMIT.	Check value of fault limit. Check that actual number of sensors corresponds to value set by parameter (*3501* SENSOR TYPE). Let motor cool down. Ensure proper motor cooling: Check cooling fan, clean cooling surfaces, etc.
0010	PANEL LOSS (5300) *0305* bit 9 (programmable fault function *3002*)	Control panel selected as active control location for drive has ceased communicating.	Check panel connection. Check fault function parameters. Check control panel connector. Refit control panel in mounting platform. If drive is in external control mode (REM) and is set to accept start/stop, direction commands or references via control panel: Check *Group 10: AcStart/Stop/Dir* and *Group 11: Reference Select* settings.
0012	MOTOR STALL (7121) *0305* bit 11 (programmable fault function *3010*…*3012*)	Motor is operating in stall region due to eg excessive load or insufficient motor power.	Check motor load and drive ratings. Check fault function parameters.
0014	EXT FAULT 1 (9000) *0305* bit 13 (programmable fault function *3003*)	External fault 1	Check external devices for faults. Check parameter *3003* EXTERNAL FAULT 1 setting.
0015	EXT FAULT 2 (9001) *0305* bit 14 (programmable fault function *3004*)	External fault 2	Check external devices for faults. Check parameter *3004* EXTERNAL FAULT 2 setting.
0016	EARTH FAULT (2330) *0305* bit 15 (programmable fault function *3017*)	Drive has detected earth (ground) fault in motor or motor cable.	Check motor. Check fault function parameters. Check motor cable. Motor cable length must not exceed maximum specifications. See section *Motor connection data* on page *355*.

CODE	FAULT	CAUSE	WHAT TO DO
0018	THERM FAIL (5210) *0306* bit 1	Drive internal fault. Thermistor used for drive internal temperature measurement is open or short-circuited.	Contact your local ABB representative.
0021	CURR MEAS (2211) *0306* bit 4	Drive internal fault. Current measurement is out of range.	Contact your local ABB representative.
0022	SUPPLY PHASE (3130) *0306* bit 5	Intermediate circuit DC voltage is oscillating due to missing input power line phase or blown fuse. Trip occurs when DC voltage ripple exceeds 14% of nominal DC voltage.	Check input power line fuses. Check for input power supply imbalance. Check fault function parameters.
0024	OVERSPEED (7310) *0306* bit 7	Motor is turning faster than highest allowed speed due to incorrectly set minimum/maximum speed. Operating range limits are set by parameters *2007* MINIMUM FREQ and *2008* MAXIMUM FREQ.	Check minimum/maximum frequency settings. Check adequacy of motor braking torque.
0026	DRIVE ID (5400) *0306* bit 9	Internal drive ID fault	Contact your local ABB representative.
0027	CONFIG FILE (630F) *0306* bit 10	Internal configuration file error	Contact your local ABB representative.
0028	SERIAL 1 ERR (7510) *0306* bit 11 (programmable fault function *3018*, *3019*)	Fieldbus communication break	Check status of fieldbus communication. See chapter *Fieldbus control with embedded fieldbus* on page *257*. Check fault function parameter settings. Check connections. Check if master can communicate.
0029	EFB CON FILE (6306) *0306* bit 12	Configuration file reading error	Contact your local ABB representative.
0030	FORCE TRIP (FF90) *0306* bit 13	Trip command received from fieldbus	See appropriate communication module manual.

CODE	FAULT	CAUSE	WHAT TO DO
0031	EFB 1 (FF92) *0307* bit 0	Error from the embedded fieldbus (EFB) protocol application. The meaning is protocol dependent.	See chapter *Fieldbus control with embedded fieldbus* on page *257*.
0032	EFB 2 (FF93) *0307* bit 1		
0033	EFB 3 (FF94) *0307* bit 2		
0034	MOTOR PHASE (FF56) *0306* bit 14	Motor circuit fault due to missing motor phase or motor thermistor relay (used in motor temperature measurement) fault.	Check motor and motor cable. Check motor thermistor relay (if used).
0035	OUTP WIRING (FF95) *0306* bit 15 (programmable fault function *3023*)	Incorrect input power and motor cable connection (ie input power cable is connected to drive motor connection). The fault can be erroneously declared if the input power is a delta grounded system and the motor cable capacitance is large. This fault can be disabled using parameter *3023* WIRING FAULT.	Check input power connections. Check fault function parameters.
0036	INCOMPATIBLE SW (630F) *0307* bit 3	Loaded software is not compatible.	Contact your local ABB representative.
0038	USER LOAD CURVE (FF6B) *0307* bit 4	Condition defined by *3701* USER LOAD C MODE has been valid longer than the time set by *3703* USER LOAD C TIME.	See parameter *Group 37: User Load Curve*.
0039	UNKNOWN EXTENSION (7086) *0307* bit 5	Option module not supported by the drive firmware is connected to the drive.	Check connections.
0040	INLET VERY LOW (8A81) *0307* bit 6	Pressure at pump/fan inlet too low	Check for a closed valve on the inlet side of the pump/fan. Check piping for leaks. See parameter *Group 44: Pump Protection*.

CODE	FAULT	CAUSE	WHAT TO DO
0041	OUTLET VERY HIGH (8A83) *0307* bit 7	Pressure at pump/fan outlet too high	Check piping for blocks. See parameter *Group 44: Pump Protection*.
0042	INLET LOW (8A80) *0307* bit 8	Pressure at pump/fan inlet too low	Check for a closed valve on the inlet side of the pump/fan. Check piping for leaks. See parameter *Group 44: Pump Protection*.
0043	OUTLET HIGH (8A82) *0307* bit 9	Pressure at pump/fan outlet too high	Check piping for blocks. See parameter *Group 44: Pump Protection*.
0101	SERF CORRUPT (FF55) *0307* bit 14	Drive internal error	Write down fault code and contact your local ABB representative.
0103	SERF MACRO (FF55) *0307* bit 14		
0201	DSP T1 OVERLOAD (6100) *0307* bit 13		
0202	DSP T2 OVERLOAD (6100) *0307* bit 13		
0203	DSP T3 OVERLOAD (6100) *0307* bit 13		
0204	DSP STACK ERROR (6100) *0307* bit 12		
0206	CB ID ERROR (5000) *0307* bit 11		
1000	PAR HZRPM (6320) *0307* bit 15	Incorrect frequency limit parameter setting	Check parameter settings. Check that following applies: • *2007* MINIMUM FREQ < *2008* MAXIMUM FREQ • *2007* MINIMUM FREQ / *9907* MOTOR NOM FREQ and *2008* MAXIMUM FREQ / *9907* MOTOR NOM FREQ are within range.

CODE	FAULT	CAUSE	WHAT TO DO
1001	PAR PFC REF NEG (6320) *0307* bit 15	Incorrect PFC parameters	Check parameter *Group 81: PFA* settings. Check that following applies: • *2007* MINIMUM FREQ > 0 when *8123* is ACTIVE or SPFC ACTIVE.
1003	PAR AI SCALE (6320) *0307* bit 15	Incorrect analog input AI signal scaling	Check parameter *Group 13: Analog Inputs* settings. Check that following applies: • *1301* MINIMUM AI1 < *1302* MAXIMUM AI1 • *1304* MINIMUM AI2 < *1305* MAXIMUM AI2.
1004	PAR AO SCALE (6320) *0307* bit 15	Incorrect analog output AO signal scaling	Check parameter *Group 15: Analog Outputs* settings. Check that following applies: • *1504* MINIMUM AO1 < *1505* MAXIMUM AO1.
1005	PAR PCU 2 (6320) *0307* bit 15	Incorrect motor nominal power setting	Check parameter *9009* setting. Following must apply: • 1.1 < (*9906* MOTOR NOM CURR * *9905* MOTOR NOM VOLT * 1.73 / P_N) < 3.0 where P_N = 1000 * *9909* MOTOR NOM POWER (if units are in kW) or P_N = 746 * *9909* MOTOR NOM POWER (if units are in hp).
1006	PAR EXT RO (6320) *0307* bit 15	Incorrect extension relay output parameters.	Check parameter settings. Check that following applies: • Relay Output Extension Module MREL-0 is connected to the drive. • *1402*…*1403* RELAY OUTPUT 2…3 and *1410* RELAY OUTPUT 4 have non-zero values. See *MREL-01 Relay Output Extension Module User's Manual* (3AUA0000035974 [English]).
1007	PAR FBUSMISS (6320) *0307* bit 15	Fieldbus control has not been activated.	Check fieldbus parameter settings.
1009	PAR PCU 1 (6320) *0307* bit 15	Incorrect motor nominal speed/frequency setting	Check parameter settings. Following must apply: • 1 < (60 * *9907* MOTOR NOM FREQ / *9908* MOTOR NOM SPEED) < 16 • 0.8 < *9908* MOTOR NOM SPEED / (120 * *9907* MOTOR NOM FREQ / Motor poles) < 0.992

CODE	FAULT	CAUSE	WHAT TO DO
1012	PAR PFC IO 1 (6320) *0307* bit 15	I/O configuration for PFC not complete	Check parameter settings. Following must apply: • There are enough relays parameterized for PFC. • No conflict exists between parameter *Group 14: Relay Outputs*, parameter *8117* NR OF AUX MOT and parameter *8118* AUTOCHNG INTERV.
1013	PAR PFC IO 2 (6320) *0307* bit 15	I/O configuration for PFC not complete	Check parameter settings. Following must apply: • The actual number of PFC motors (parameter *8127* MOTORS) matches the PFC motors in parameter *Group 14: Relay Outputs* and parameter *8118* AUTOCHNG INTERV.
1014	PAR PFC IO 3 (6320) *0307* bit 15	I/O configuration for PFC not complete. The drive is unable to allocate a digital input (interlock) for each PFC motor.	See parameters *8120* INTERLOCKS and *8127* MOTORS.
1015	PAR CUSTOM U/F (6320) *0307* bit 15	Incorrect voltage to frequency (U/f) ratio voltage setting.	Check parameter *2610* USER DEFINED U1…*2617* USER DEFINED F4 settings.
1017	PAR SETUP 1 (6320) *0307* bit 15	It is not allowed to use frequency input signal and frequency output signal simultaneously.	Disable frequency output or frequency input: • change transistor output to digital mode (value of parameter *1804* TO MODE = DIGITAL), or • change frequency input selection to other value in parameters *Group 11: Reference Select*, *Group 40: Process PID Set 1*, *Group 41: Process PID Set 2* and *Group 42: External PID*.
1026	PAR USER LOAD C (6320) *0307* bit 15	Incorrect user load curve parameter setting	Check parameter settings. Following must apply: • *3704* LOAD FREQ 1 ≤ *3707* LOAD FREQ 2 ≤ *3710* LOAD FREQ 3 ≤ *3713* LOAD FREQ 4 ≤ *3716* LOAD FREQ 5 • *3705* LOAD TORQ LOW 1 < *3706* LOAD TORQ HIGH 1 • *3708* LOAD TORQ LOW 2 < *3709* LOAD TORQ HIGH 2 • *3711* LOAD TORQ LOW 3 < *3712* LOAD TORQ HIGH 3 • *3714* LOAD TORQ LOW 4 < *3715* LOAD TORQ HIGH 4 • *3717* LOAD TORQ LOW 5 < *3718* LOAD TORQ HIGH 5.

Embedded fieldbus faults

Embedded fieldbus faults can be traced by monitoring group *Group 53: EFB Protocol* parameters. See also fault/alarm *SERIAL 1 ERR*.

No master device

If there is no master device on line, parameter *5306* EFB OK MESSAGES and *5307* EFB CRC ERRORS values remain unchanged.

What to do:

- Check that the network master is connected and properly configured.
- Check the cable connection.

Same device address

If two or more devices have the same address, parameter *5307* EFB CRC ERRORS value increases with every read/write command.

What to do:

- Check the device addresses. No two devices on line may have the same address.

Incorrect wiring

If the communication wires are swapped (terminal A on one device is connected to terminal B on another device), parameter *5306* EFB OK MESSAGES value remains unchanged and parameter *5307* EFB CRC ERRORS increases.

What to do:

- Check the RS-232/485 interface connection.

13

Maintenance and hardware diagnostics

What this chapter contains

The chapter contains preventive maintenance instructions and LED indicator descriptions.

Maintenance intervals

If installed in an appropriate environment, the drive requires very little maintenance. The table lists the routine maintenance intervals recommended by ABB.

Maintenance	Interval	Instruction
Reforming of capacitors	Every year when stored	See *Capacitors* on page *346*.
Check of dustiness, corrosion and temperature	Every year	
Replacement of the cooling fan (frame sizes R1…R4)	Every three years	See *Cooling fan* on page *345*.
Check and tightening of the power terminals	Every six years	See *Power connections* on page *346*.
Replacement of the battery in the Assistant Control Panel	Every ten years	See *Changing the battery in the Assistant Control Panel* on page *347*.

Consult your local ABB Service representative for more details on the maintenance. On the Internet, go to http://www.abb.com/drives and select *Drive Services – Maintenance and Field Services*.

Cooling fan

The drive's cooling fan has a life span of minimum 25 000 operating hours. The actual life span depends on the drive usage and ambient temperature.

When the Assistant Control Panel is in use, the Notice Handler Assistant informs when the definable value of the operating hour counter is reached (see parameter *2901* COOLING FAN TRIG). This information can also be passed to the relay output (see parameter *1401* RELAY OUTPUT 1) regardless of the used panel type.


Fan failure can be predicted by the increasing noise from the fan bearings. If the drive is operated in a critical part of a process, fan replacement is recommended once these symptoms start appearing. Replacement fans are available from ABB. Do not use other than ABB specified spare parts.


Replacing the cooling fan (frame sizes R1…R4)

Only frame sizes R1…R4 include a fan; frame size R0 has natural cooling.


WARNING! Read and follow the instructions in chapter *Safety* on page *15*. Ignoring the instructions can cause physical injury or death, or damage to the equipment.

1. Stop the drive and disconnect it from the power line. Wait for five minutes to let the drive DC capacitors discharge. Ensure by measuring with a multimeter (impedance at least 1 Mohm) that there is no voltage present.
2. Remove the hood if the drive has the NEMA 1 option.
3. Lever the fan holder off the drive frame with eg a screwdriver and lift the hinged fan holder slightly upward from its front edge.
4. Free the fan cable from the clip in the fan holder.
5. Disconnect the fan cable. Use long-nose pliers if needed.

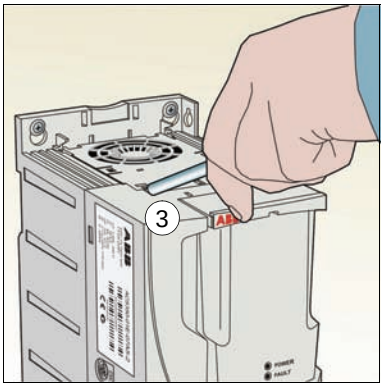

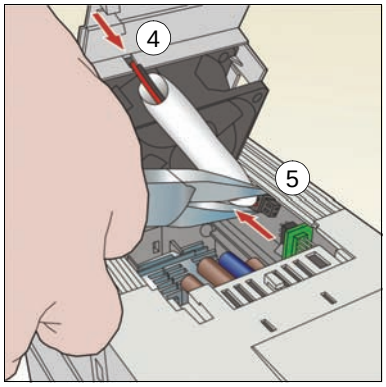

6. Remove the fan from the holder.

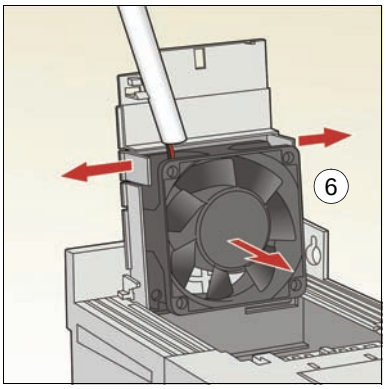

7. Install the new fan in reverse order.
8. Restore power.

Capacitors

Reforming the capacitors

The capacitors must be reformed if the drive has been stored for a year. See section *Type designation label* on page *25* for how to find out the manufacturing time from the serial number. For information on reforming the capacitors, refer to *Guide for Capacitor Reforming in ACS50, ACS55, ACS150, ACS310, ACS320, ACS350, ACS550 and ACH550* (3AFE68735190 [English]), available on the Internet (go to http://www.abb.com and enter the code in the Search field).

Power connections

WARNING! Read and follow the instructions in chapter *Safety* on page *15*. Ignoring the instructions can cause physical injury or death, or damage to the equipment.

1. Stop the drive and disconnect it from the power line. Wait for five minutes to let the drive DC capacitors discharge. Ensure by measuring with a multimeter (impedance at least 1 Mohm) that there is no voltage present.
2. Check the tightness of the power cable connections. Use the tightening torques given in section *Terminal and lead-through data for the power cables* on page *354*.
3. Restore power.

Control panel

Cleaning the control panel

Use a soft damp cloth to clean the control panel. Avoid harsh cleaners which could scratch the display window.

Changing the battery in the Assistant Control Panel

A battery is only used in Assistant Control Panels that have the clock function available and enabled. The battery keeps the clock operating in memory during power interruptions.

The expected life for the battery is greater than ten years. To remove the battery, use a coin to rotate the battery holder on the back of the control panel. Replace the battery with type CR2032.

Note: The battery is NOT required for any control panel or drive functions, except the clock.

LEDs

There is a green and a red LED on the front of the drive. They are visible through the panel cover but invisible if a control panel is attached to the drive. The Assistant Control Panel has one LED. The table below describes the LED indications.

Where	**LED off**	**LED lit and steady**		**LED blinking**	
On the front of the drive. If a control panel is attached to the drive, switch to remote control (otherwise a fault will be generated), and then remove the panel to be able to see the LEDs.	No power	Green	Power supply on the board OK	Green	Drive in an alarm state
		Red	Drive in a fault state. To reset the fault, press RESET from the control panel or switch off the drive power.	Red	Drive in a fault state. To reset the fault, switch off the drive power.
At the top left corner of the Assistant Control Panel	Panel has no power or no drive connection.	Green	Drive in a normal state	Green	Drive in an alarm state
		Red	Drive in a fault state. To reset the fault, press RESET from the control panel or switch off the drive power.	Red	-

14

Technical data

What this chapter contains

The chapter contains the technical specifications of the drive, eg ratings, sizes and technical requirements as well as provisions for fulfilling the requirements for CE and other marks.

Ratings

Type ACS320-x = E/U [1]	Input	Output					Frame size
	I_{1N}	I_{LD}	I_{2N}	I_{2max}	P_N		
	A	A	A	A	kW	hp	
3-phase U_N = 200…240 V (200, 208, 220, 230, 240 V)							
03x-02A6-2	4.7	2.4	2.6	4.2	0.37	0.5	R0
03x-03A9-2	6.7	3.5	3.9	6.1	0.55	0.75	R0
03x-05A2-2	8.4	4.7	5.2	8.2	0.75	1	R1
03x-07A4-2	13.0	6.7	7.4	11.7	1.1	1.5	R1
03x-08A3-2	13.2	7.5	8.3	13.1	1.5	2	R1
03x-10A8-2	15.7	9.8	10.8	17.2	2.2	3	R2
03x-14A6-2	23.9	13.3	14.6	23.3	3	3	R2
03x-19A4-2	27.3	17.6	19.4	30.8	4	5	R2
03x-26A8-2	45	24.4	26.8	42.7	5.5	7.5	R3
03x-34A1-2	55	31.0	34.1	54.3	7.5	10	R4
03x-50A8-2	76	46.2	50.8	80.9	11.0	15	R4
3-phase U_N = 380…480 V (380, 400, 415, 440, 460, 480 V)							
03x-01A3-4	2.4	1.2	1.3	2.1	0.37	0.5	R0
03x-02A1-4	4.0	1.9	2.1	3.3	0.55	0.75	R0
03x-02A6-4	4.5	2.4	2.6	4.2	0.75	1	R1
03x-03A6-4	6.6	3.3	3.6	5.8	1.1	1.5	R1
03x-04A5-4	7.6	4.1	4.5	7.2	1.5	2	R1
03x-06A2-4	10.6	5.6	6.2	9.8	2.2	3	R1
03x-08A0-4	12.8	7.3	8.0	12.8	3	3	R1
03x-09A7-4	15.0	8.8	9.7	15.4	4	5	R1
03x-13A8-4	20.7	12.5	13.8	21.9	5.5	7.5	R3
03x-17A2-4	24.3	15.6	17.2	27.3	7.5	10	R3
03x-25A4-4	34.0	23.1	25.4	40.4	11	15	R3
03x-34A1-4	57	31	34.1	54.3	15	20	R4
03x-41A8-4	67	38	41.8	66.5	18.5	25	R4
03x-48A4-4	74	44	48.4	77.0	22.0	30	R4

[1] E = EMC filter connected (metal EMC filter screw installed),
U = EMC filter disconnected (plastic EMC filter screw installed), US parametrization

00578903.xls D

Definitions

I_{1N}	continuous rms input current (for dimensioning cables and fuses) at ambient temperature of +40 °C
I_{LD}	continuous output current at max ambient temperature of +50 °C. 10% overloadability for one minute every ten minutes.
I_{2N}	maximum continuous output current at ambient temperature of +40 °C. No overloadability, derating 1% for every additional 1 °C up to 50 °C.
I_{2max}	maximum instantaneous output current. Available for two seconds every ten minutes at start-up, or as long as allowed by the drive temperature.

P_N	typical motor power. The kilowatt ratings apply to most IEC 4-pole motors. The horsepower ratings apply to most NEMA 4-pole motors.
R0…R4	ACS320 is manufactured in frame sizes R0…R4. Some instructions and other information that only concern certain frame sizes are marked with the symbol of the frame size (R0…R4)

Sizing

The current ratings are the same regardless of the supply voltage within one voltage range. To achieve the rated motor power given in the table, the rated current of the drive must be higher than or equal to the rated motor current.

Note 1: The maximum allowed motor shaft power is limited to 1.5 · P_N. If the limit is exceeded, motor torque and current are automatically restricted. The function protects the input bridge of the drive against overload.

Note 2: The ratings apply at ambient temperature of 40 °C (104 °F).

Derating

The load capacity decreases if the installation site ambient temperature exceeds 40 °C (104 °F) or if the altitude exceeds 1000 meters (3300 ft).

Temperature derating

In the temperature range +40 °C…+50 °C (+104 °F…+122 °F), the rated output current is decreased by 1% for every additional 1 °C (1.8 °F). The output current is calculated by multiplying the current given in the rating table by the derating factor.

Example: If the ambient temperature is 50 °C (+122 °F), the derating factor is 100% - 1 $\frac{\%}{°C}$ · 10 °C = 90% or 0.90. The output current is then 0.90 · I_{2N}.

Altitude derating

In altitudes 1000…2000 m (3300…6600 ft) above sea level, the derating is 1% for every 100 m (330 ft).

Switching frequency derating

Derate according to the switching frequency used (see parameter *2606* SWITCHING FREQ) as follows:

Switching frequency	Drive voltage rating	
	U_N = 200…240 V	U_N = 380…480 V
4 kHz	No derating	No derating
8 kHz	Derate I_{2N} to 90%.	Derate I_{2N} to 75% for R0 or to 80% for R1…R4.
12 kHz	Derate I_{2N} to 80%.	Derate I_{2N} to 50% for R0 or to 65% for R1…R4 and derate maximum ambient temperature to 30 °C (86 °F).
16 kHz	Derate I_{2N} to 75%.	Derate I_{2N} to 50% and derate maximum ambient temperature to 30 °C (86 °F).

Power cable sizes and fuses

Cable dimensioning for rated currents (I_{1N}) is shown in the table below together with the corresponding fuse types for short-circuit protection of the input power cable. **The rated fuse currents given in the table are the maxima for the mentioned fuse types.** If smaller fuse ratings are used, check that the fuse rms current rating is larger than the rated I_{1N} current given in section *Ratings* on page *349*. If 150% output power is needed, multiply current I_{1N} by 1.5. See also section *Selecting the power cables* on page *34*.

Check that the operating time of the fuse is below 0.5 seconds. The operating time depends on the fuse type, the supply network impedance as well as the cross-sectional area, material and length of the supply cable. In case the 0.5 seconds operating time is exceeded with the gG or T fuses, ultra rapid (aR) fuses will in most cases reduce the operating time to an acceptable level.

Note: Larger fuses must not be used.

Type ACS320- x = E/U	Fuses		Size of copper conductor in cablings					
	gG	UL Class T (600 V)	Supply (U1, V1, W1)		Motor (U2, V2, W2)		PE	
	A	A	mm^2	AWG	mm^2	AWG	mm^2	AWG
3-phase U_N = 200…240 V (200, 208, 220, 230, 240 V)								
03x-02A6-2	10	10	2.5	14	1.5	14	2.5	14
03x-03A9-2	10	10	2.5	14	1.5	14	2.5	14
03x-05A2-2	10	15	2.5	14	1.5	14	2.5	14
03x-07A4-2	16	15	2.5	12	1.5	14	2.5	12
03x-08A3-2	16	15	2.5	12	1.5	14	2.5	12
03x-10A8-2	16	20	2.5	12	2.5	12	2.5	12
03x-14A6-2	25	30	6.0	10	6	10	6.0	10
03x-19A4-2	25	35	6.0	10	6	10	6.0	10
03x-26A8-2	63	60	10.0	8	10	8	10.0	8
03x-34A1-2	80	80	16.0	6	16	6	16.0	6
03x-50A8-2	100	100	25.0	2	25	2	16.0	4
3-phase U_N = 380…480 V (380, 400, 415, 440, 460, 480 V)								
03x-01A3-4	10	10	2.5	14	1.5	14	2.5	12
03x-02A1-4	10	10	2.5	14	1.5	14	2.5	12
03x-02A6-4	10	10	2.5	14	1.5	14	2.5	12
03x-03A6-4	10	10	2.5	12	1.5	14	2.5	12
03x-04A5-4	16	15	2.5	12	1.5	14	2.5	12
03x-06A2-4	16	15	2.5	12	1.5	14	2.5	12
03x-08A0-4	16	20	2.5	12	1.5	14	2.5	12
03x-09A7-4	20	25	2.5	12	2.5	12	2.5	12
03x-13A8-4	25	30	6.0	10	6	10	6.0	10
03x-17A2-4	35	35	6.0	8	6	8	6.0	8
03x-25A4-4	50	50	10.0	8	10	8	10.0	8
03x-34A1-4	80	80	16.0	6	16	6	16.0	6
03x-41A8-4	100	100	25.0	4	16	4	16.0	4
03x-48A4-4	100	100	25.0	4	25	4	16.0	4

00578903.xls D

Dimensions, weights and free space requirements

Dimensions and weights

Frame size	Dimensions and weights											
	IP20 (cabinet) / UL open											
	H1		H2		H3		W		D		Weight	
	mm	in	mm	in	mm	in	mm	in	mm	in	kg	lb
R0	169	6.65	202	7.95	239	9.41	70	2.76	161	6.34	1.1	2.4
R1	169	6.65	202	7.95	239	9.41	70	2.76	161	6.34	1.3	2.9
R2	169	6.65	202	7.95	239	9.41	105	4.13	165	6.50	1.5	3.3
R3	169	6.65	202	7.95	236	9.29	169	6.65	169	6.65	2.9	6.4
R4	181	7.13	202	7.95	244	9.61	260	10.24	169	6.65	4.4	9.7

00578903.xls D

Frame size	Dimensions and weights									
	IP20 / NEMA 1									
	H4		H5		W		D		Weight	
	mm	in	mm	in	mm	in	mm	in	kg	lb
R0	257	10.12	280	11.02	70	2.76	169	6.65	1.5	3.3
R1	257	10.12	280	11.02	70	2.76	169	6.65	1.7	3.7
R2	257	10.12	282	11.10	105	4.13	169	6.65	1.9	4.2
R3	260	10.24	299	11.77	169	6.65	177	6.97	3.5	7.7
R4	270	10.63	320	12.60	260	10.24	177	6.97	5.0	11.0

00578903.xls D

Symbols
IP20 (cabinet) / UL open
H1 height without fastenings and clamping plate
H2 height with fastenings, without clamping plate
H3 height with fastenings and clamping plate
IP20 / NEMA 1
H4 height with fastenings and connection box
H5 height with fastenings, connection box and hood

Free space requirements

Frame size	Free space required					
	Above		Below		On the sides	
	mm	in	mm	in	mm	in
R0…R4	75	3	75	3	0	0

00578903.xls D

Losses, cooling data and noise

Losses and cooling data

Frame size R0 has natural convection cooling. Frame sizes R1…R4 are provided with an internal fan. The air flow direction is from bottom to top.

The table below specifies the heat dissipation in the main circuit at nominal load and in the control circuit with minimum load (I/O and panel not in use) and maximum load (all digital inputs in the on state and the panel, fieldbus and fan in use). The total heat dissipation is the sum of the heat dissipation in the main and control circuits.

Type ACS320-x = E/U	Heat dissipation						Air flow	
	Main circuit		Control circuit					
	Rated I_{1N} and I_{2N}		Min		Max			
	W	BTU/Hr	W	BTU/Hr	W	BTU/Hr	m^3/h	ft^3/min
3-phase U_N = 200…240 V (200, 208, 220, 230, 240 V								
03x-02A6-2	19	65	6.1	21	22.7	78	-	-
03x-03A9-2	31	106	6.1	21	22.7	78	-	-
03x-05A2-2	38	130	9.5	32	26.4	90	24	14
03x-07A4-2	60	205	9.5	32	26.4	90	24	14
03x-08A3-2	62	212	9.5	32	26.4	90	21	12
03x-10A8-2	83	283	10.5	36	27.5	94	21	12
03x-14A6-2	112	383	10.5	36	27.5	94	52	31
03x-19A4-2	152	519	10.5	36	27.5	94	52	31
03x-26A8-2	250	854	16.6	57	35.4	121	71	42
03x-34A1-2	270	922	33.4	114	57.8	197	96	57
03x-50A8-2	430	1469	33.4	114	57.8	197	96	57
3-phase U_N = 380…480 V (380, 400, 415, 440, 460, 480 V)								
03x-01A3-4	11	38	6.6	23	24.4	83	-	-
03x-02A1-4	16	55	6.6	23	24.4	83	-	-
03x-02A6-4	21	72	9.8	33	28.7	98	13	8
03x-03A6-4	31	106	9.8	33	28.7	98	13	8
03x-04A5-4	40	137	9.8	33	28.7	98	13	8
03x-06A2-4	61	208	9.8	33	28.7	98	19	11
03x-08A0-4	74	253	14.1	48	32.7	112	24	14
03x-09A7-4	94	321	14.1	48	32.7	112	24	14
03x-13A8-4	130	444	12.0	41	31.2	107	52	31
03x-17A2-4	173	591	12.0	41	31.2	107	52	31
03x-25A4-4	266	908	16.6	57	35.4	121	71	42
03x-34A1-4	350	1195	33.4	114	57.8	197	96	57
03x-41A8-4	440	1503	33.4	114	57.8	197	96	57
03x-48A4-4	530	1810	33.4	114	57.8	197	96	57

00578903.xls D

Noise

Frame size	Noise level
	dBA
R0	<30
R1	50…62
R2	50…62
R3	50…62
R4	<62

00578903.xls D

Terminal and lead-through data for the power cables

Frame size	Max. cable diameter for NEMA 1		U1, V1, W1, U2, V2, W2				PE			
	U1, V1, W1, U2, V2, W2		Max. terminal size flexible/rigid		Tightening torque		Max. clamp size solid or stranded		Tightening torque	
	mm	in	mm^2	AWG	N·m	lbf·in	mm^2	AWG	N·m	lbf·in
R0	16	0.63	4.0/6.0	10	0.8	7	25	3	1.2	11
R1	16	0.63	4.0/6.0	10	0.8	7	25	3	1.2	11
R2	16	0.63	4.0/6.0	10	0.8	7	25	3	1.2	11
R3	29	1.14	10.0/16.0	6	1.7	15	25	3	1.2	11
R4	35	1.38	25.0/35.0	2	2.5	22	25	3	1.2	11

00578903.xls D

Terminal and lead-through data for the control cables

Conductor size						Tightening torque	
Solid or stranded		Stranded, with ferrule without plastic sleeve		Stranded, with ferrule with plastic sleeve			
Min/Max	Min/Max	Min/Max	Min/Max	Min/Max	Min/Max		
mm^2	AWG	mm^2	AWG	mm^2	AWG	N·m	lbf·in
0.14/1.5	26/16	0.25/1.5	23/16	0.25/1.5	23/16	0.4	3.5

Electric power network specification

Voltage (U_1)	200/208/220/230/240 V AC 3-phase for 200 V AC drives 380/400/415/440/460/480 V AC 3-phase for 400 V AC drives ±10% variation from converter nominal voltage is allowed as default.
Short-circuit capacity	Maximum allowed prospective short-circuit current at the input power connection as defined in IEC 60439-1 is 100 kA. The drive is suitable for use in a circuit capable of delivering not more than 100 kA rms symmetrical amperes at the drive maximum rated voltage.
Frequency	50/60 Hz ± 5%, maximum rate of change 17%/s
Imbalance	Max. ±3% of nominal phase to phase input voltage

Motor connection data

Voltage (U_2)	0 to U_1, 3-phase symmetrical, U_{max} at the field weakening point
Short-circuit protection (IEC 61800-5-1, UL 508C)	The motor output is short-circuit proof by IEC 61800-5-1 and UL 508C.
Frequency	0…500 Hz
Frequency resolution	0.01 Hz
Current	See section *Ratings* on page *349*.
Power limit	1.5 · P_N
Field weakening point	10…500 Hz
Switching frequency	4, 8, 12 or 16 kHz
Maximum recommended motor cable length	R0: 30 m (100 ft), R1…R4: 50 m (165 ft) With output chokes the motor cable length may be extended to 60 m (195 ft) for R0 and 100 m (330 ft) for R1…R4. To comply with the European EMC Directive, use the cable lengths specified in the table below for 4 kHz switching frequency. The lengths are given for using the drive with the internal EMC filter or an optional external EMC filter.

4 kHz switching frequency	**Internal EMC filter**	**Optional external EMC filter**
Second environment (category C3 [1])	30 m (100 ft)	30 m (100 ft) minimum
First environment (category C2 [1])	-	30 m (100 ft)

[1] See the new terms in section *Definitions* on page *359*.

Control connection data

Analog inputs X1A: 2 and 5	Voltage signal,	unipolar	0 (2)…10 V, R_{in} > 312 kohm
		bipolar	-10…10 V, R_{in} > 312 kohm
	Current signal,	unipolar	0 (4)…20 mA, R_{in} = 100 ohm
		bipolar	-20…20 mA, R_{in} = 100 ohm
	Potentiometer reference value (X1A: 4)		10 V ± 1%, max. 10 mA, R < 10 kohm
	Resolution		0.1%
	Accuracy		±1%
Analog output X1A: 7			0 (4)…20 mA, load < 500 ohm
Auxiliary voltage X1A: 9			24 V DC ± 10%, max. 200 mA
Digital inputs X1A: 12…16 (frequency input X1A: 16)	Voltage		12…24 V DC with internal or external supply
	Type		PNP and NPN
	Frequency input		Pulse train 0…16 kHz (X1A: 16 only)
	Input impedance		2.4 kohm
Relay output X1B: 17…19	Type		NO + NC
	Max. switching voltage		250 V AC / 30 V DC
	Max. switching current		0.5 A / 30 V DC; 5 A / 230 V AC
	Max. continuous current		2 A rms
Digital output X1B: 20…21	Type		Transistor output PNP
	Max. switching voltage		30 V DC
	Max. switching current		100 mA / 30 V DC, short-circuit protected
	Frequency		10 Hz …16 kHz
	Resolution		1 Hz
	Accuracy		0.2%
RS-485 interface X1C: 23…26	Cable		Shielded twisted pair, impedance 100…150 ohm
	Termination		Daisy chained bus without drop out lines
	Isolation		Bus interface isolated from the drive
	Transfer rate		1.2…76.8 kbit/s
	Communication type		Serial, asynchronous, half duplex
	Protocol		Modbus

Efficiency

Approximately 95 to 98% at nominal power level, depending on the drive size and options

Degrees of protection

IP20 (cabinet installation) / UL open: Standard enclosure. The drive must be installed in a cabinet to fulfil the requirements for shielding from contact.

IP20 / NEMA 1: Achieved with an option kit including a hood and a connection box.

Ambient conditions

Environmental limits for the drive are given below. The drive is to be used in a heated indoor controlled environment.

	Operation installed for stationary use	**Storage** in the protective package	**Transportation** in the protective package
Installation site altitude	0 to 2000 m (6600 ft) above sea level (above 1000 m [3300 ft], see section *Derating* on page *350*)	-	-
Air temperature	-10 to +50 °C (14 to 122 °F). No frost allowed. See section *Derating* on page *350*.	-40 to +70 °C (-40 to +158 °F)	-40 to +70 °C (-40 to +158 °F)
Relative humidity	0 to 95%	Max. 95%	Max. 95%
	No condensation allowed. Maximum allowed relative humidity is 60% in the presence of corrosive gases.		
Contamination levels (IEC 60721-3-3, IEC 60721-3-2, IEC 60721-3-1)	No conductive dust allowed.		
	According to IEC 60721-3-3, chemical gases: Class 3C2 solid particles: Class 3S2. The drive must be installed in clean air according to enclosure classification. Cooling air must be clean, free from corrosive materials and electrically conductive dust.	According to IEC 60721-3-1, chemical gases: Class 1C2 solid particles: Class 1S2	According to IEC 60721-3-2, chemical gases: Class 2C2 solid particles: Class 2S2
Sinusoidal vibration (IEC 60721-3-3)	Tested according to IEC 60721-3-3, mechanical conditions: Class 3M4 2…9 Hz, 3.0 mm (0.12 in) 9…200 Hz, 10 m/s^2 (33 ft/s^2)	-	-
Shock (IEC 60068-2-27, ISTA 1A)	-	According to ISTA 1A. Max. 100 m/s^2 (330 ft/s^2), 11 ms.	According to ISTA 1A. Max. 100 m/s^2 (330 ft/s^2), 11 ms.
Free fall	Not allowed	76 cm (30 in)	76 cm (30 in)

Materials

Drive enclosure	• PC/ABS 2 mm, PC+10%GF 2.5…3 mm and PA66+25%GF 1.5 mm, all in color NCS 1502-Y (RAL 9002 / PMS 420 C) • hot-dip zinc coated steel sheet 1.5 mm, thickness of coating 20 micrometers • extruded aluminium AlSi.
Package	Corrugated cardboard.
Disposal	The drive contains raw materials that should be recycled to preserve energy and natural resources. The package materials are environmentally compatible and recyclable. All metal parts can be recycled. The plastic parts can either be recycled or burned under controlled circumstances, according to local regulations. Most recyclable parts are marked with recycling marks. If recycling is not feasible, all parts excluding electrolytic capacitors and printed circuit boards can be landfilled. The DC capacitors contain electrolyte, which is classified as hazardous waste within the EU. They must be removed and handled according to local regulations. For further information on environmental aspects and more detailed recycling instructions, please contact your local ABB distributor.

Applicable standards

The drive complies with the following standards:

• **IEC/EN 61800-5-1: 2003**	Electrical, thermal and functional safety requirements for adjustable frequency a.c. power drives
• **IEC/EN 60204-1: 2006**	Safety of machinery. Electrical equipment of machines. Part 1: General requirements. *Provisions for compliance:* The final assembler of the machine is responsible for installing - an emergency-stop device - a supply disconnecting device.
• **IEC/EN 61800-3: 2004**	Adjustable speed electrical power drive systems. Part 3: EMC requirements and specific test methods
• **UL 508C**	UL Standard for Safety, Power Conversion Equipment, third edition

CE marking

The CE mark is attached to the drive to verify that the drive follows the provisions of the European Low Voltage and EMC Directives (Directive 73/23/EEC, as amended by 93/68/EEC, and Directive 2004/108/EC).

Compliance with the European EMC Directive

The EMC Directive defines the requirements for immunity and emissions of electrical equipment used within the European Union. The EMC product standard (EN 61800-3:2004) covers requirements stated for drives. See section *Compliance with EN 61800-3:2004* on page *359*.

Compliance with EN 61800-3:2004

Definitions

EMC stands for **E**lectro**m**agnetic **C**ompatibility. It is the ability of electrical/electronic equipment to operate without problems within an electromagnetic environment. Likewise, the equipment must not disturb or interfere with any other product or system within its locality.

First environment includes establishments connected to a low-voltage network which supplies buildings used for domestic purposes.

Second environment includes establishments connected to a network not directly supplying domestic premises.

Drive of category C2: drive of rated voltage less than 1000 V and intended to be installed and commissioned only by a professional when used in the first environment.

Note: A professional is a person or organization having necessary skills in installing and/or commissioning power drive systems, including their EMC aspects.

Category C2 has the same EMC emission limits as the earlier class first environment restricted distribution. EMC standard IEC/EN 61800-3 does not any more restrict the distribution of the drive, but the using, installation and commissioning are defined.

Drive of category C3: drive of rated voltage less than 1000 V, intended for use in the second environment and not intended for use in the first environment.

Category C3 has the same EMC emission limits as the earlier class second environment unrestricted distribution.

Category C2

The emission limits are complied with the following provisions:

1. The optional EMC filter is selected according to the ABB documentation and installed as specified in the EMC filter manual.

2. The motor and control cables are selected as specified in this manual.
3. The drive is installed according to the instructions given in this manual.
4. Motor cable length maximum 30 m (100 ft) with 4 kHz switching frequency.

WARNING! In a domestic environment, this product may cause radio inference, in which case supplementary mitigation measures may be required.

Category C3

The immunity performance of the drive complies with the demands of IEC/EN 61800-3, second environment (see page *359* for IEC/EN 61800-3 definitions).

The emission limits are complied with the following provisions:

1. The internal EMC filter is connected (the metal screw at EMC is in place) or the optional EMC filter is installed.
2. The motor and control cables are selected as specified in this manual.
3. The drive is installed according to the instructions given in this manual.
4. With the internal EMC filter: motor cable length 30 m (100 ft) with 4 kHz switching frequency.

WARNING! A drive of category C3 is not intended to be used on a low-voltage public network which supplies domestic premises. Radio frequency interference is expected if the drive is used on such a network.

Note: It is not allowed to install a drive with the internal EMC filter connected on IT (ungrounded) systems. The supply network becomes connected to ground potential through the EMC filter capacitors which may cause danger or damage the drive.

Note: It is not allowed to install a drive with the internal EMC filter connected on a corner grounded TN system as this would damage the drive.

UL marking

See the type designation label for the valid markings of your drive.

The UL mark is attached to the drive to verify that it meets UL requirements.

UL checklist

Input power connection – See section *Electric power network specification* on page *355*.

Disconnecting device (disconnecting means) – See *Selecting the supply disconnecting device (disconnecting means)* on page *33*.

Ambient conditions – The drives are to be used in a heated indoor controlled environment. See section *Ambient conditions* on page *357* for specific limits.

Input cable fuses – For installation in the United States, branch circuit protection must be provided in accordance with the National Electrical Code (NEC) and any applicable local codes. To fulfil this requirement, use the UL classified fuses given in section *Power cable sizes and fuses* on page *351*.

For installation in Canada, branch circuit protection must be provided in accordance with Canadian Electrical Code and any applicable provincial codes. To fulfil this requirement, use the UL classified fuses given in section *Power cable sizes and fuses* on page *351*.

Power cable selection – See section *Selecting the power cables* on page *34*.

Power cable connections – For the connection diagram and tightening torques, see section *Connecting the power cables* on page *44*.

Overload protection – The drive provides overload protection in accordance with the National Electrical Code (US).

C-Tick marking

See the type designation label for the valid markings of your drive.

C-Tick marking is required in Australia and New Zealand. A C-Tick mark is attached to the drive to verify compliance with the relevant standard (IEC 61800-3:2004 – Adjustable speed electrical power drive systems – Part 3: EMC product standard including specific test methods), mandated by the Trans-Tasman Electromagnetic Compatibility Scheme.

The Trans-Tasman Electromagnetic Compatibility Scheme (EMCS) was introduced by the Australian Communication Authority (ACA) and the Radio Spectrum Management Group (RSM) of the New Zealand Ministry of Economic Development (NZMED) in November 2001. The aim of the scheme is to protect the radio frequency spectrum by introducing technical limits for emission from electrical/electronic products.

For fulfilling the requirements of the standard, see section *Compliance with EN 61800-3:2004* on page *359*.

RoHS marking

The RoHS mark is attached to the drive to verify that drive follows the provisions of the European RoHS Directive. RoHS = the restriction of the use of certain hazardous substances in electrical and electronic equipment.

Liability limits

The manufacturer is not responsible for:

- Any costs resulting from a failure if the installation, commissioning, repair, alteration, or ambient conditions of the drive do not fulfil the requirements specified in the documentation delivered with the unit and other relevant documentation.
- Units subjected to misuse, negligence or accident.
- Units comprised of materials provided or designs stipulated by the purchaser.

In no event shall the manufacturer, its suppliers or subcontractors be liable for special, indirect, incidental or consequential damages, losses or penalties.

Patent protection in the USA

This product is protected by one or more of the following US patents:

4,920,306	5,301,085	5,463,302	5,521,483	5,532,568	5,589,754	5,612,604
5,654,624	5,799,805	5,940,286	5,942,874	5,952,613	6,094,364	6,147,887
6,175,256	6,184,740	6,195,274	6,229,356	6,252,436	6,265,724	6,305,464
6,313,599	6,316,896	6,335,607	6,370,049	6,396,236	6,448,735	6,498,452
6,552,510	6,597,148	6,600,290	6,741,059	6,774,758	6,844,794	6,856,502
6,859,374	6,922,883	6,940,253	6,934,169	6,956,352	6,958,923	6,967,453
6,972,976	6,977,449	6,984,958	6,985,371	6,992,908	6,999,329	7,023,160
7,034,510	7,036,223	7,045,987	7,057,908	7,059,390	7,067,997	7,082,374
7,084,604	7,098,623	7,102,325	7,109,780	7,164,562	7,176,779	7,190,599
7,215,099	7,221,152	7,227,325	7,245,197	7,250,739	7,262,577	7,271,505
7,274,573	7,279,802	7,280,938	7,330,095	7,349,814	7,352,220	7,365,622
7,372,696	7,388,765	D503,931	D510,319	D510,320	D511,137	D511,150
D512,026	D512,696	D521,466	D541,743S	D541,744S	D541,745S	D548,182S
D548,183S						

Other patents pending.


15

Dimension drawings

Dimension drawings of the ACS320 are shown below. The dimensions are given in millimeters and [inches].

Frame sizes R0 and R1, IP20 (cabinet installation) / UL open

R1 and R0 are identical except for the fan at the top of R1.

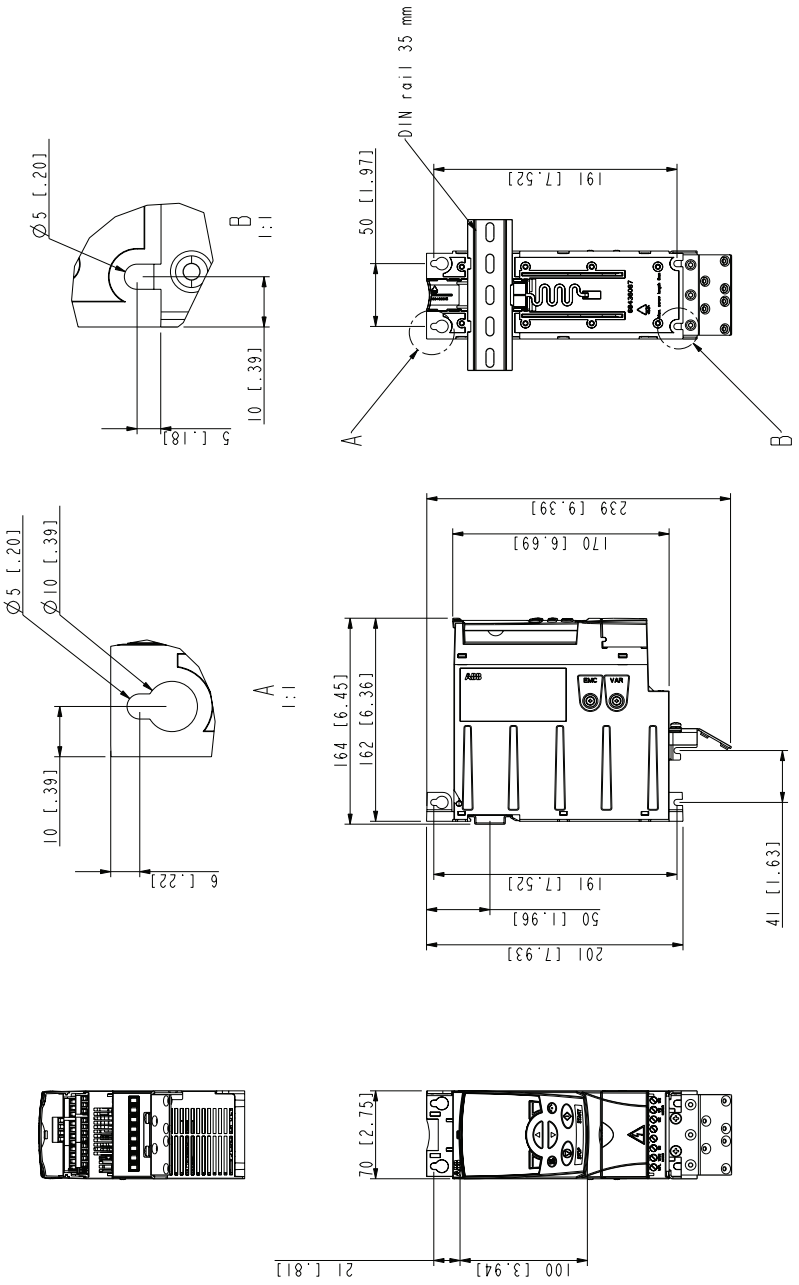


Frame sizes R0 and R1, IP20 (cabinet installation) / UL open

3AUA0000050967-A

Frame sizes R0 and R1, IP20 / NEMA 1


R1 and R0 are identical except for the fan at the top of R1.

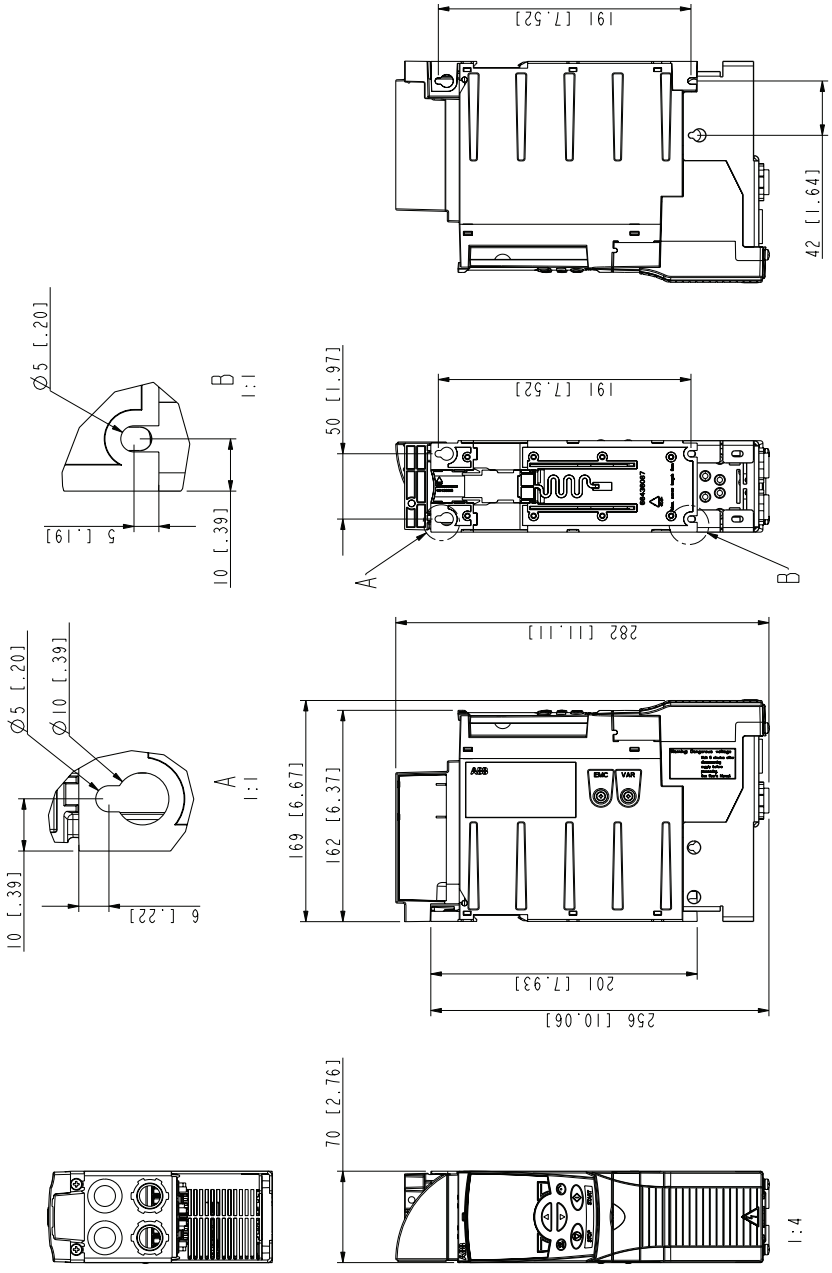

Frame sizes R0 and R1, IP20 / NEMA 1


3AUA0000051086-A

Frame size R2, IP20 (cabinet installation) / UL open

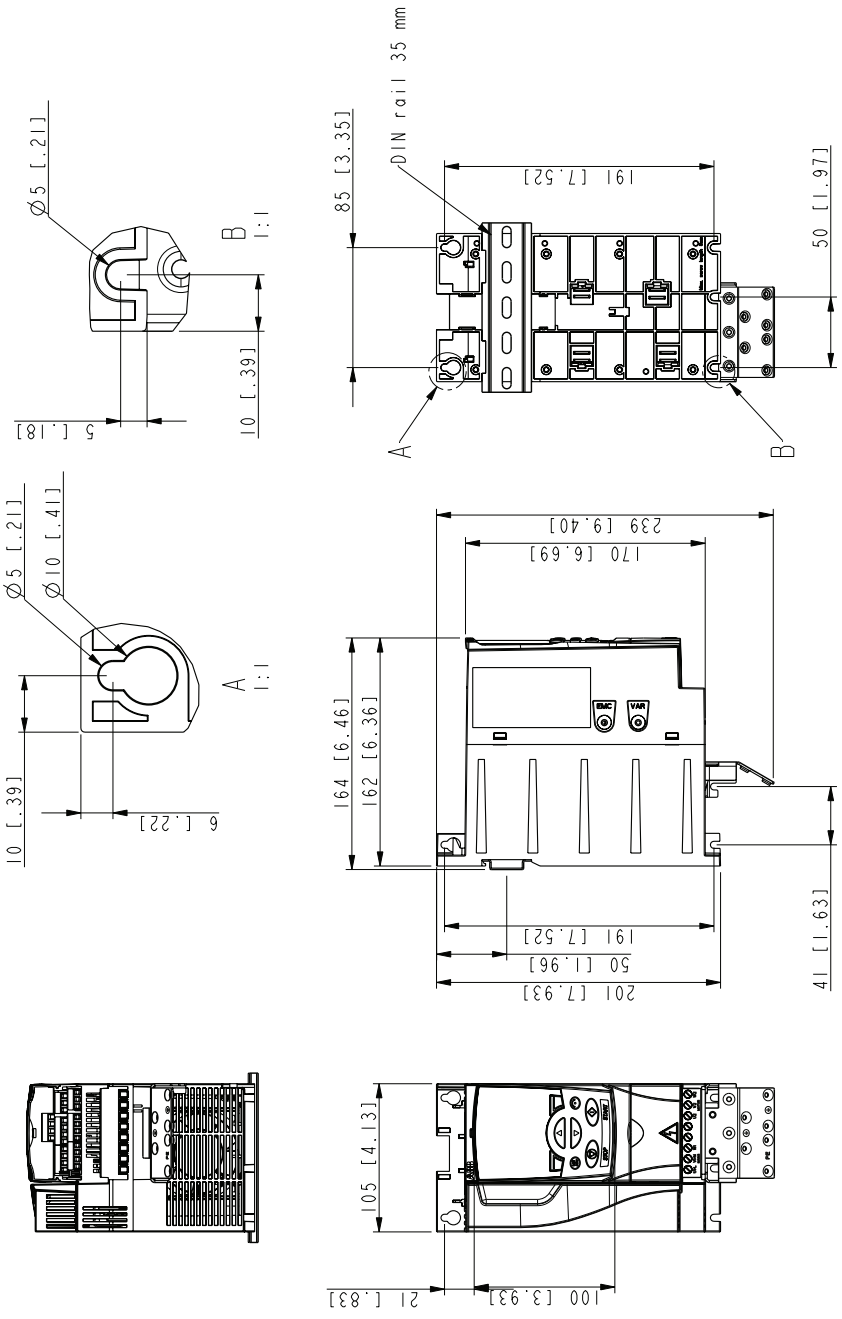

Frame size R2, IP20 (cabinet installation) / UL open


Frame size R2, NEMA 1

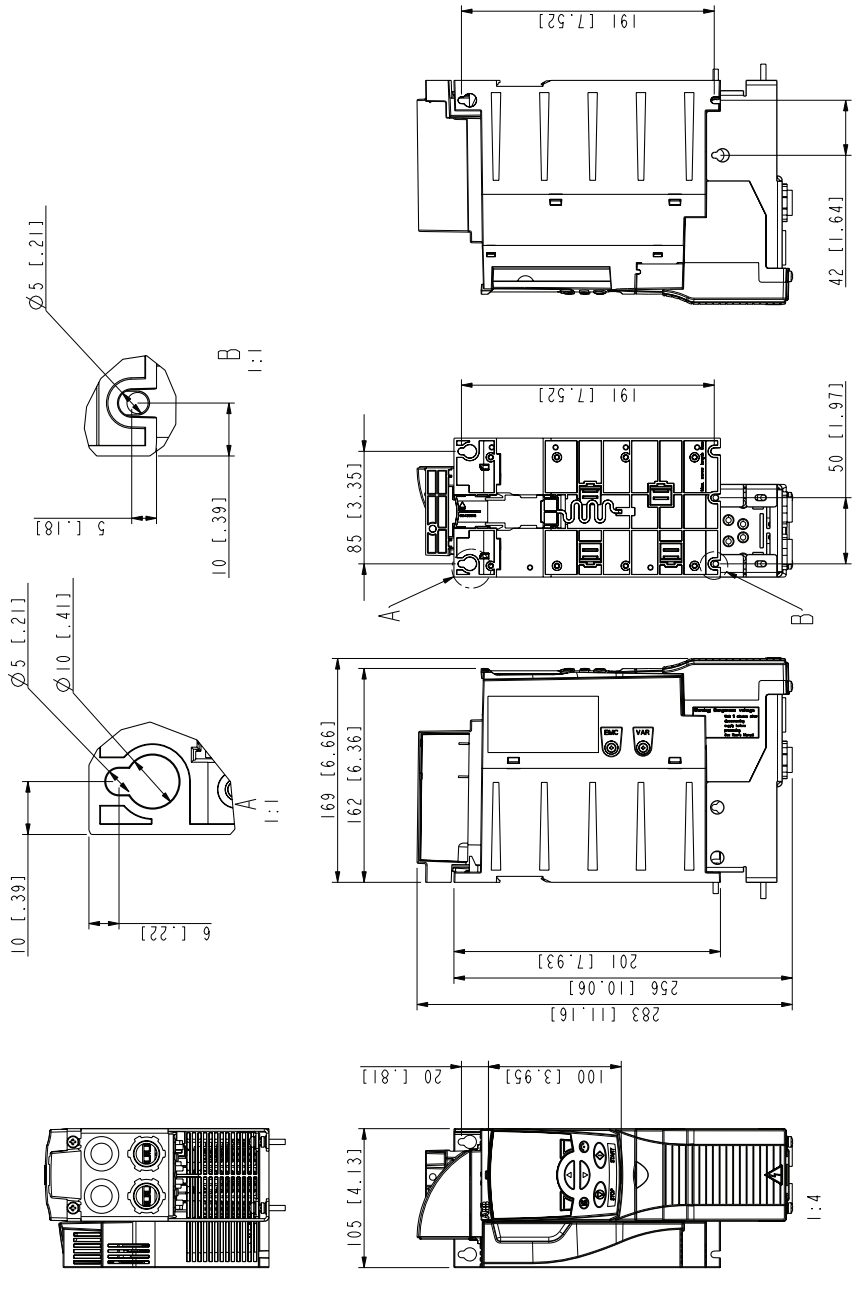

Frame size R2, IP20 / NEMA 1

3AUA0000051097-A


Frame size R3, IP20 (cabinet installation) / UL open

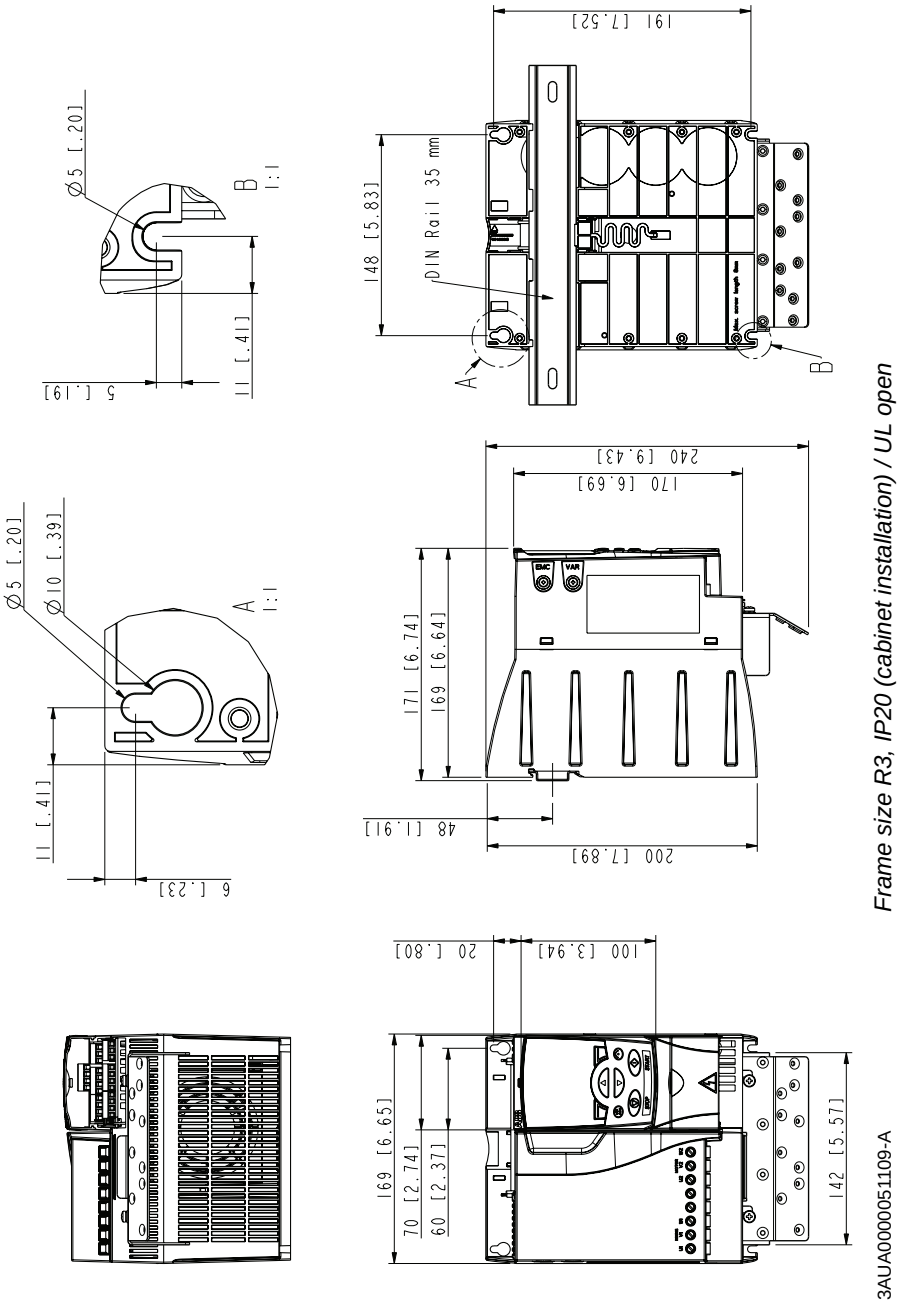


Frame size R3, IP20 (cabinet installation) / UL open

3AUA0000051109-A

Frame size R3, NEMA 1

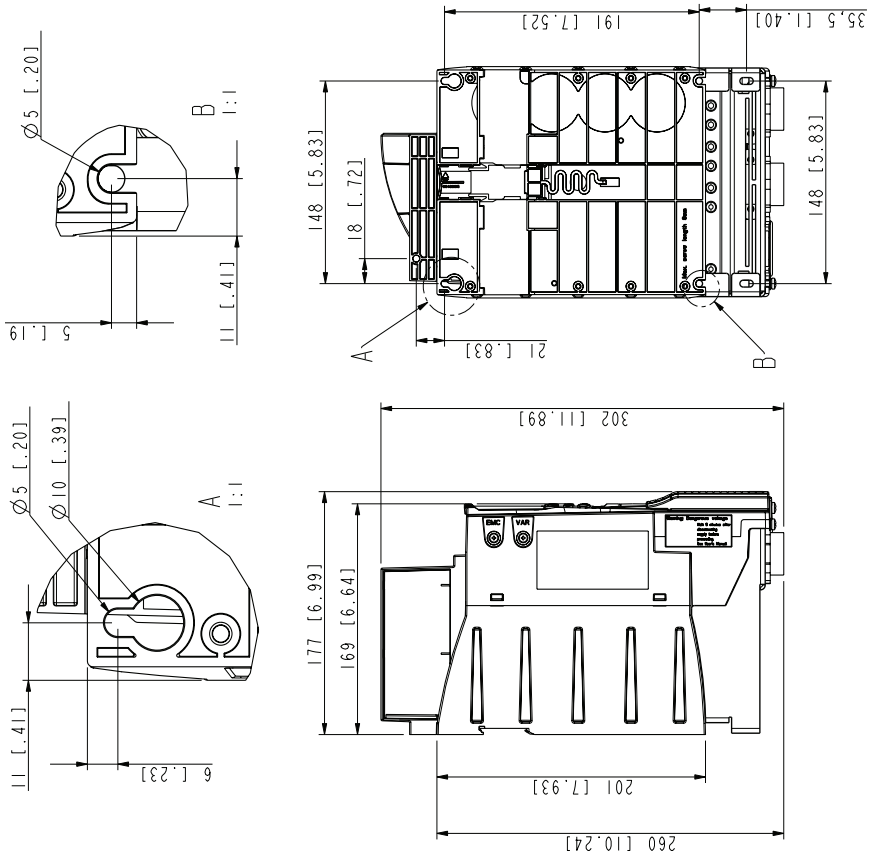


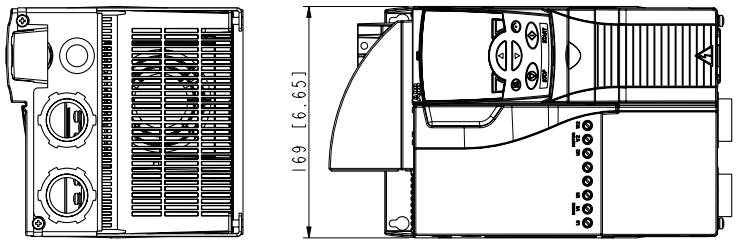

Frame size R3, IP20 / NEMA 1

3AUA0000051118-A


Frame size R4, IP20 (cabinet installation) / UL open

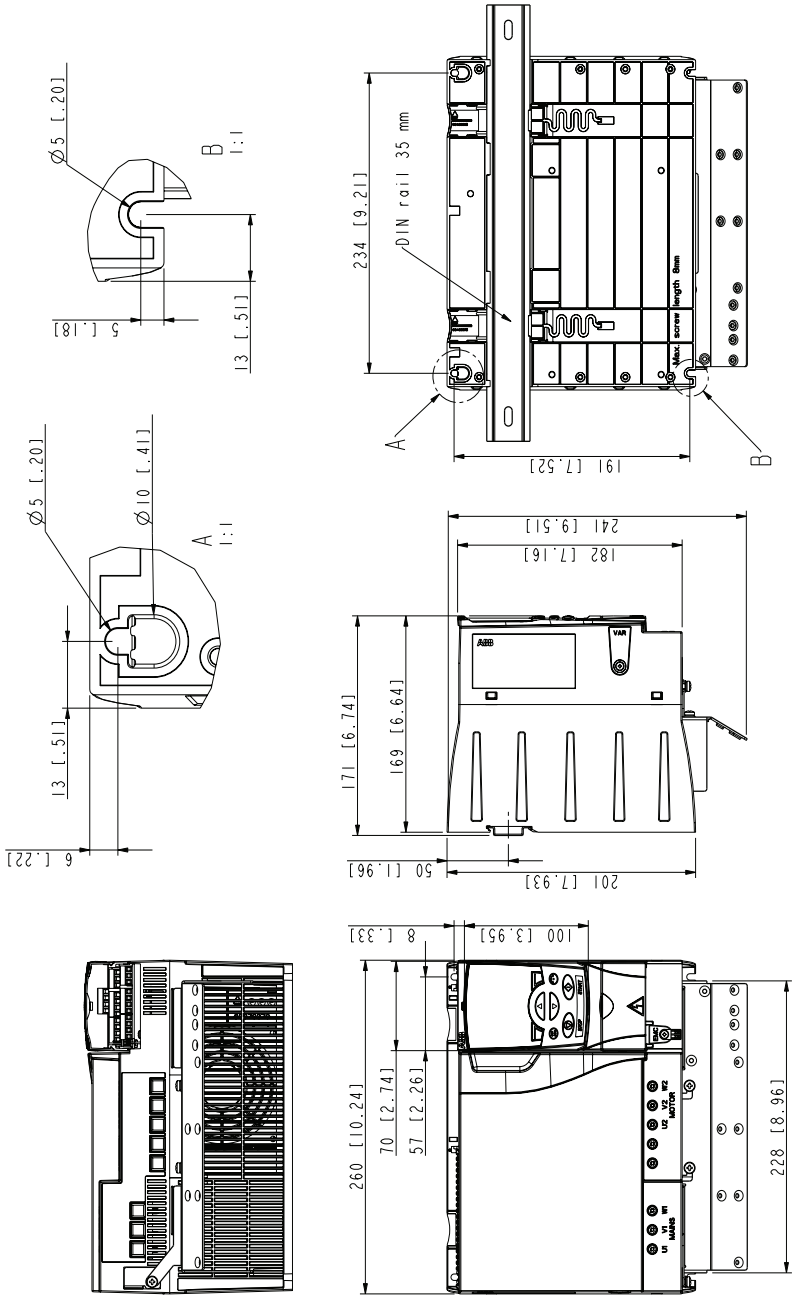

Frame size R4, IP20 (cabinet installation) / UL open

3AUA0000051130-A

Frame size R4, NEMA 1

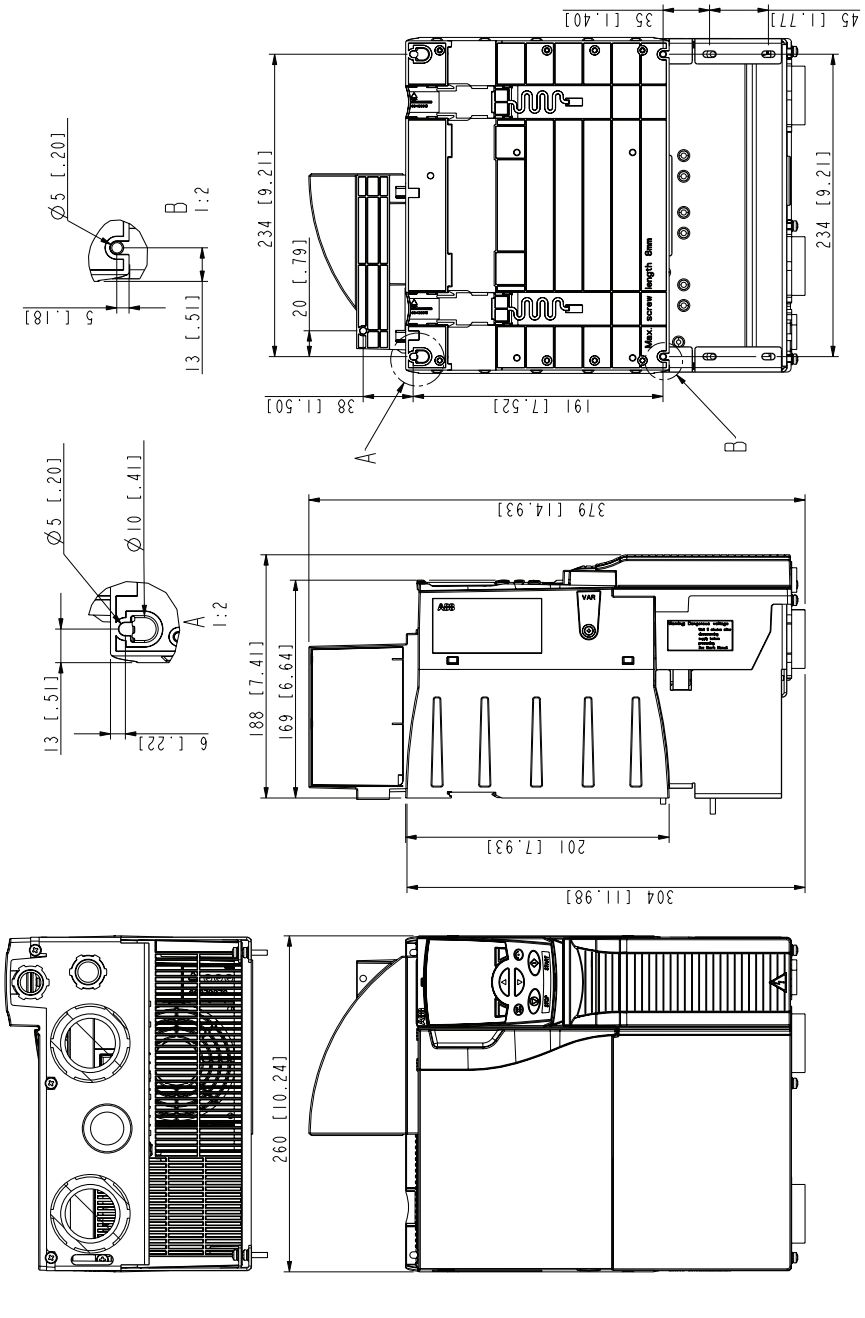

Frame size R4, IP20 / NEMA 1

3AUA0000051133-A

Numerics

0xxxx register
EFB function codes 310
EFB mapping 309
1xxxx register
EFB function codes 311
EFB mapping 310
3xxxx register
EFB function codes 312
EFB mapping 311
4xxxx register
EFB function codes 314
EFB mapping 312

A

acceleration
/deceleration, parameter group 173
at aux. stop (PFA), parameter 254
ramp select, parameter 173
ramp shape, parameter 174
ramp time (PFA), parameter 254
ramp zero select, parameter 175
time, parameter 173
activate (external PID), parameter 220
actual input (PID), parameters 210
actual max. (PID), parameters 211
actual min. (PID), parameters 211
actual signals, parameter group 134
actual values
scaling, EFB comm 271
scaling, FLN fieldbus 286
air flow 345
alarm
codes 333
enable display, parameter 163
listing 333
altitude
environment limit 357
shipping limit 357
altitude derating 350
analog cable
requirements 36
analog I/O
connections 46
specifications 46
analog input
BACnet object listing 299

data parameter 131
fault limit, parameters 183
filter, parameters 152
less than min. auto. reset, parameter 185
less than min., fault parameter 180
maximum, parameters 152
minimum, parameters 152
N2 object listing 277
parameter group 152
ref. correction formula 146
analog output
BACnet object listing 300
content max., parameters 157
content min., parameters 157
current max., parameters 157
current min., parameters 157
data content, parameters 156
data parameter 131
filter, parameters 157
N2 object listing 279
parameter group 118, 156
application block output, data parameter 131
application macro, parameter 128, 130, 134, 139, 141, 143
applications
see macros
autochange
interval, parameter 246
level, parameter 247
overview 247
starting order counter 248
automatic reset
see reset, automatic
auxiliary motor
see motor, auxiliary

B

backing up parameters (Assistant panel) 65
backup
drive parameters 65
BACnet
data link layer 303
mac id 303
max info frame property 304
MS/TP token counter 304
object, analog inputs 299
object, analog outputs 300
object, analog values 300

object, binary inputs 296
object, binary outputs 297
object, binary values 297
object, definitions 306
pics, statement 304
pics, summary 303
services supported 303
support, matrix 306
battery, assistant control panel 347
maintenance procedure 347
baud rate (RS232), parameter 233
binary input
BACnet object listing 296
N2 object listing 278
binary output
BACnet object listing 297
N2 object listing 280
branch circuit protection 34, 361
break point frequency, fault parameter 182
buffer overruns (count), parameter 233

C

cable requirements
grounding 36, 46, 50
input power 34
motor 35
capacitor
maintenance interval 344
reforming 346
CE marking 359
CISPR11 class A
radiation limits 359
CISPR11 class B
radiation limits 360
clock 70
comm
fault function, parameter 183
fault time, parameter 183
protocol select, parameter 256
relay output word, data parameter 131
values, data parameter 132
comm (EFB)
actual value scaling 271
actual values 269
also see RS232 232
analog output control, activate 268
baud rate, parameter 234

comm fault response 183, 269
config file, fault code 338
configuration 262
configure for loss of communication 273
control interface 24, 259
control profile, parameter 234
control word 315
CRC errors (count), parameter 234
diagnostics 272
drive control of functions, activate 265
exception codes 314
fault code 28 273
fault code 31 274
fault code 32 274
fault code 33 274
fault codes 339
fault tracing parameters 272
fault, duplicate device address 343
fault, duplicate stations 273
fault, intermittent off-line 274
fault, no master station on line 273, 343
fault, swapped wires 273, 343
feedback from drive 269
feedback from drive, mailbox 271
input ref. sel., activate 265
installation 51, 260
mailbox, param. read/write 271
misc. drive control, activate 266
modbus actual values 314
normal operation 272
ok messages (count), parameter 234
overview 257
parameter group 232
parameters 235
parity, parameter 234
PID control setpoint source, activate 269
planning 259
profiles 308
protocol id, parameter 234
protocol, parameter group 234, 235
reference scaling, ABB drives profile 324
relay output control, activate 267
set-up 262
start/stop control, activate 265
state diagram 323
station id, parameter 234

status word 318
status, parameter 235
termination 260
UART errors (count), parameter 235
comm (FBA)
comm fault response 183
config file
fault code 338
connections
EFB comm 51, 260
constant speed
see speed, constant
construction code 26
contamination levels
environment limit 357
shipping limit 357
contrast, control panel 55
control
connection specifications 356
location, data parameter 130
control cable
requirements 36
control panel
backup, drive parameters 65
cable requirements 37
changed parameters mode 64
clock set 70
comm error, fault parameter 180
contrast 55
display contrast 55
display decimal point (form), parameters 190
display max., parameters 190
display min., parameters 190
display process variables, parameter group 189
display selection, parameters 189
display units, parameters 190
features 54
i/o settings mode 72
maintenance interval, battery 344
maintenance procedure 347
modes 59
operating the drive 60
parameter editing 57
parameter lock, parameter 158
parameters mode 61
pass code, parameter 158

reference control, parameter 142
signal max., parameters 189
signal min., parameters 189, 195
soft keys 55
start-up assistant 56
start-up assistant mode 62
status information 59
control panel (Assistant)
battery maintenance procedure 347
fault logger mode 64
parameter backup mode 65
control word
comm (EFB), description 315
cooling 345
fan maintenance triggers 179
cooling fan 345
correction source (PID), parameter 221
cover
remove 50
CRC errors (count), parameter 233
critical speeds (avoiding)
high, parameters 176
low, parameters 175
parameter group 175
select, parameter 175
C-Tick marking 361
current
at fault, history parameter 139
data parameter 130
max. limit, parameter 169
measurement, fault code 338
rating code 26

D

DC brake time, parameter 172
DC bus voltage, data parameter 130
DC current ref., parameter 172
DC magnetizing time, parameter 171
DC overvoltage, fault code 330, 336
DC stabilator, parameter 178
DC undervoltage, fault code 330, 336
DDL file (N2) 280
deceleration
at aux. start (PFA), parameter 254
emergency time, parameter 174
parameter group 173
ramp select, parameter 173

ramp shape, parameter 174
ramp time (PFA), parameter 254
ramp zero select, parameter 175
time, parameter 173
default macro 76
derating
altitude 350
switching frequency 350
temperature 350
derivation time (PID), parameter 206
device overtemperature, fault code 336
device type (N2) 277
diagnostics
EFB comm 272
differences list, downloads 69
digital cable
requirements 37
digital input
at fault, history parameters 139
connections 46
digital output
connections 46
specifications 356
dimensions
mounting 363
outside, enclosure 363
direction
control, parameter 142
display format (PID), parameter 207, 222
download
failure 69
handling inexact transfers 68
parameter sets 66
drive
control terminal 46
device type (N2) 277
EFB comm installation 51, 260
fan replacement 345
id, fault code 338
identification 26
rating, parameter 188
temperature, data parameter 130
weight 352
drive input protection 39
drive on time, data parameters 132

E

earth fault
fault code 337
parameter 183
earthing
see ground
efficiency 356
embedded field bus
see comm (EFB)
EMC
CE marking 359
C-Tick marking 361
motor cable requirements 35
emergency
deceleration time, parameter 174
stop select, parameter 172
EN 61800-3 first environment
restricted distribution radiation limits 359
unrestricted distribution radiation limits ... 360
enclosure protection class code 26
energy savings group 228
environment
first, definition 359
second, definition 359
error value inversion (PID), parameter 207
exception codes, EFB modbus 314
external commands selection, parameter 140
external control selection, parameter 143
external fault
automatic reset, parameter 185
parameters 180
external reference, data parameter 130

F

fan, drive module
maintenance interval 344
replacement procedure 345
fault
codes 336
comm (FBA) 183
comm failure (EFB) 183**,** 269
current at, history parameter 139
digital input status at, history parameter . 139
frequency at, history parameter 139
functions, parameter group 180
history 329
history, parameter group 139

last, history parameter 139
listing 336
previous, history parameter 139
reset 51, 328
reset select, parameter 159
speed at, history parameter 139
status at, history parameter 139
time of, history parameters 139
torque at, history parameter 139
voltage at, history parameter 139
words, data parameters 136
fault code
28 serial 1 err 273
fault history 329
fault logging (Assistant panel) 64
features
N2 fieldbus 275
feedback multiplier (PID), parameter 210
feedback select (PID), parameter 210
fieldbus
see comm
command words, data parameters 134
status words, data parameters 135
firmware test date, parameter 188
firmware version, parameter 188
first environment, definition 359
FlashDrop
parameter view, parameter 163
FLN fieldbus
also see comm (EFB)
description 282
loop gains 287
point database 287
point descriptions 291
reports 282
supported features 282
force trip, fault code 338
frame errors (count), parameter 233, 234
frame size 353
free fall
stress testing 357
free space
for cooling 345
freq in & tran out 167
frequency
at fault, history parameter 139

max. limit, parameter 170
min. limit, parameter 170
motor, resolution 355
motor, specification 355
switching, parameter 177
fuses 351
200...240 volt drives 351
380...480 volt drives 351

G

gain (PID), parameter 205
generic profile
actual value scaling 271
reference scaling 324
ground
cable/wire requirements 36, 46, 50

H

heat loss 345

I

incomp swtype, fault code 339
information
parameter group 188
input power
branch circuit protection 34, 361
cable/wire requirements 34
fuses 351
specifications 355
input power connection 44
terminal size 354
torque 354
installation
compatibility 34
environment 357
flow chart 21
location 27
tools 28
insulation
check 43
integration time (PID), parameter 206, 220
interlocks
parameter 248
internal setpoint (PID), parameter 209
IR compensation
frequency, parameter 177
parameters 176
voltage, parameter 176

K

keypad reference select, parameter 142
kWh counter, data parameter 131

L

label
    serial number 25
    type designation key 25
language, parameter 128
liability limits 362
limits, parameter group 169
load analyzer group 235
load frequency, see user load curve
load package version, parameter 188
load torque, see user load curve
local mode
    lock, parameter 161
low frequency (PFA), parameters 242

M

macros
    booster pump 81
    condenser 80
    cooling tower fan 79
    dual setpoint w/ PID 86
    dual setpoint w/ PID & const. speeds 87
    floating point 85
    hand control 89
    HVAC default 76
    internal timer 83
    internal timer w/constant speeds 84
    listing 74
    return fan 78
    supply fan 77
    to select 75
mailbox, EFB comm 271
mains
    see input power
maintenance
    capacitors 346
    control panel 347
    drive module fan 345
    fan 345
    intervals 344
    triggers, parameter group 179
manuals 2
mapping
    EFB modbus 308

materials 358
maximum
frequency, parameter 170
metasys
connection diagram (companion) 277
connection diagram (system) 276
integration 276
minimum
frequency, parameter 170
modbus
EFB addressing, convention 309
EFB coils 309
EFB discrete inputs 310
EFB holding registers 312
EFB input registers 311
EFB mapping details 309
EFB mapping summary 308
EFB supported features 307
motor
aux. start delay (PFA), parameter 243
aux. stop delay (PFA), parameter 243
checking insulation 43
compatibility 34
connection specifications 355
load curve break point frequency 182
load curve max., fault parameter 181
load curve zero speed load 181
maintenance triggers 179
nominal current, parameter 129
nominal frequency, parameter 129
nominal power, parameter 129
nominal speed, parameter 129
nominal voltage, parameter 129
number of aux., parameter 243**,** 244
phase, fault code 339
stall, fault code 337
temperature alarm limit, parameter 195
temperature fault limit, parameter 195
temperature measure, parameter group . 192
temperature sensor selection, parameter 195
temperature sensor type, parameter 194
temperature, data parameter 132
thermal protection, fault parameter 181
thermal time, fault parameter 181
motor cable
checking insulation 43

max. length 355
requirements 35
requirements, EMC 35
motor connection
terminal size 354
torque 354
motor control
IR compensation, parameters 176
parameter group 176
motor temperature
measure, parameter group 118
overtemperature, fault code 337
motor, auxiliary
actual signals and parameters 239
aux start order, parameter 255
MWh counter, data parameter 132
N
N2 fieldbus
also see comm (EFB)
description 274
node limit 277
supported features 275
NCU
see network control unit
NEMA 1
see UL type 1
NEMA 12
see UL type 12
network control unit
description 274
N2 DDL file 280
noise
random sw. freq. parameter 177
NPN 47
O
object
virtual, description 275
offset (PID), parameter 220
ok messages (count), parameter 233
operating data, parameter group 130
options, parameter group 256
output frequency, data parameter 130
output voltage, data parameter 130
output wiring
fault code 339
overcurrent

automatic reset, parameter 184
fault code 336
overspeed, fault code 338
P
panel display variables, parameter group 189
panel loss, fault code 337
parameter
analog input scale, fault code 341
analog output scale, fault code 341
change lock 158
external relay output, fault code 341
fieldbus, fault code 341
hz rpm, fault code 340
PCU 1 (power control unit), fault code 342
PCU 2 (power control unit), fault code 341
PFC mode, fault code 165
PFC ref. neg., fault code 341
restore (Assistant panel) 65
save changes, parameter 161
parameter view, parameter 163
parameters
editing 57
view changes 64
parity (RS232), parameter 233
parity errors (count), parameter 233
PE earth
earth fault, parameter 183
PE earth connection
terminal size 354
torque 354
PFA
acceleration time, parameter 254
aux start order, parameter 255
aux. motor start delay, parameter 243
aux. motor stop delay, parameter 243
control, parameter group 239
deceleration time, parameter 254
enable, parameter 253
low frequency, parameters 242
number of aux. motors, parameter 243, 244
reference step, parameters 240
start delay, parameter 253
start frequency, parameters 241
PFC (pump fan control)
see PFA (pump fan alternation)
PID

0% (actual signal), parameter 207
100% (actual signal), parameter 207
actual input select, parameters 210
actual value max., parameters 211
actual value min., parameters 211
adjustment procedure 205
comm value 1, data parameter 132
comm value 2, data parameter 132
correction source, parameter 221
decimal point (actual signal), parameter ..207, 222
derivation filter, parameter 206
derivation time, parameter 206
error feedback inversion, parameter 207
external / trimming, parameter group 219, 222, 228
external source activate, parameter 220
feedback multiplier, parameter 210
feedback select, parameter 210
feedback, data parameter 131
gain, parameter 205
integration time, parameter 206, 220
internal setpoint, parameter 209
offset, parameter 220
output, data parameter 131
parameter set select, parameter 214
process sets, parameter groups 113, 203
scaling (0%...100%), parameters 207
setpoint maximum, parameter 209
setpoint minimum, parameter 209
setpoint select, parameter 208
setpoint source, EFB comm activate 269
setpoint, data parameter 131
sleep delay, parameter 212, 213
sleep level, parameter 212
sleep selection, parameter 212
trim mode, parameter 220
trim scale, parameter 220
units (actual signal), parameter 207
wake-up delay, parameter 213
wake-up deviation, parameter 213
PID controller
advanced set-up 204
basic set-up 113, 203
planning
EFB comm 259
PNP 47
power

data parameter 130
first applied 56
previous faults, history parameters 139
process PID sets, parameter groups 113, 203
process variables, data parameter 132
profiles
abb drives, overview 315
comm (EFB) 308
dcu, overview 315
protection
branch circuit 34, 361
enclosure standard 357
environmental 356
protocol
BACnet, technical data 296
protocol implementation conformance statement
see BACnet, pics
PT100 temperature sensor 194
PTC temperature sensor 194
pump cleaning group 230
pump protection group 222

R

radiation limits, conducted
EN 61800-3 359
ramp pair (accel/decel), parameter 173
ratings 349
reference
analog input corrections 146
corrections for parameter values 146
keypad control, parameter 142
maximum, parameters 147
minimum, parameters 146
select source, parameter 144
select, parameter group 142
reference scaling
EFB, ABB drives profile 324
reference step (PFA), parameters 240
regulator by-pass control, parameter 252
relative humidity
environment limit 357
shipping limit 357
relay output
activation condition parameters 153
off-delay, parameters 155
on-delay, parameters 155
parameter group 153

relays, specifications 356
remove cover 50
reports, FLN fieldbus 282
reset, automatic
analog input less than min., parameter ...185
delay time, parameter 184
external fault, parameter 185
number of trials, parameter 184
overcurrent, parameter 184
parameter group
trial time, parameter 184
undervoltage, parameter 184
resonance (avoiding)
select, parameter 175
revolution counter, data parameter 132
RoHS marking 361
RS232
baud rate, parameter 233
panel, parameter group 232
parity, parameter 233
station id, parameter 232
RS232 counts
buffer overruns, parameter 233
CRC errors, parameter 233
frame errors, parameter 233, 234
ok messages, parameter 233
parity errors, parameter 233
RS485 comm 260
run enable
source select, parameter 158
run time, data parameter 130

S

safety 15
scaling
actual values, EFB comm 271
FLN actual values 286
reference (EFB, ABB drives profile) 324
s-curve ramp, parameter 174
sensor type, parameter 194
serial 1 error (fault code 28) 273
serial 1 error, fault code 338
serial communication
see comm
serial number 25
setpoint maximum (PID), parameter 209
setpoint minimum (PID), parameter 209

setpoint select (PID), parameter 208
shock
    stress testing 357
short circuit, fault code 336
sleep selection (PID), parameter 212
slip compensation ratio, parameter 177
soft keys, control panel 55
specifications
    control connections 356
    cooling 345
    input power 355
    mains 355
    motor connections 355
speed
    at fault, history parameter 139
    data parameter 130
speed, constant
    digital input selection parameter 149
    parameter 151
    parameter group 118, 148
stall
    frequency, fault parameter 182
    function, fault parameter 182
    region 182
    time, fault parameter 182
standards
    CE marking 359
    C-Tick marking 361
    EN 61800-3 359
    ICE/EN 60204-1 358
    IEC/EN 61800-3 358
    IEC/EN 61800-5-1 358
    UL 508C 358
    UL marking 360
start
    aux. motor (PFA), parameters 241
    aux. motor delay 243
    control, EFB comm 265
    DC magnetizing time, parameter 171
    delay (PFA), parameter 253
    frequency (PFA), parameters 241
    function, parameter 171
    inhibit, parameter 172
    parameter group 171
    torque boost current, parameter 172
start delay, parameter 172

start mode
automatic 171
automatic torque boost 171
DC magnetizing 171
flying start 171
start/stop, parameter group 171
start/stop/dir, parameter group 140
starting order counter 248
start-up
macros 55
tuning 55
start-up assistant 56
start-up data, parameter group 128
state diagram
ABB drives 323
comm (EFB) 323
station id (RS232), parameter 232
status at fault, history parameter 139
status word
comm (EFB), definition 318
stop
aux. motor (PFA), parameters 242
aux. motor delay 243
DC brake time, parameter 172
DC current ref., parameter 172
emergency select, parameter 172
function, parameter 171
parameter group 171
stop function 127
emergency 172
motor 171
supervision
parameter group 186
parameter low limit, parameters 187
parameter selection, parameters 186
supply phase, fault code 338
switching frequency control, parameter 177
switching frequency derating 350
switching frequency, parameter 177
system controls, parameter group 158

T

temperature derating 350
termination 260
test date, parameter 188
thermal fail, fault code 338
timer functions

parameter group 118
timers
boost 199
enable 197
parameter group 196
source 200
start/stop time 197, 201, 233, 234, 240
tools 28
torque
at fault, history parameter 139
boost current, parameter 172
data parameter 130
trim mode (PID), parameter 220
trim scale (PID), parameter 220
type designation key 25
U
U/f ratio, parameter 177
UL type 1
code 26
description 356
UL type 12
code 26
description 356
undervoltage
automatic reset, parameter 184
control enable, parameter 170
units (PID), parameter 207
user load curve
frequency, parameters 201, 202
function, parameter 201
mode, parameter 201
time, parameter 201
torque, parameters 201, 202
user parameter set
change control, parameter 160
download 68
V
vibration
stress testing 357
virtual object, N2 275
VND 277
voltage
at fault, history parameter 139
rating code 26
voltage/frequency ratio, parameter 177

W

wake-up delay (PID), parameter 213
wake-up deviation (PID), parameter 213
warning
automatic start up 17
dangerous voltages 16
high temperatures 40
listing 15
qualified installer 16
weight 352
wiring
fault, parameter 183
installation 37
overview 33
requirements 33

Z

zero speed load, fault parameter 181

Further information

Product and service inquiries

Address any inquiries about the product to your local ABB representative, quoting the type designation and serial number of the unit in question. A listing of ABB sales, support and service contacts can be found by navigating to www.abb.com/drives and selecting *Sales*, *Support and Service Network*.

Product training

For information on ABB product training, navigate to www.abb.com/drives and select *Training courses*.

Providing feedback on ABB Drives manuals

Your comments on our manuals are welcome. Go to www.abb.com/drives and select *Document Library – Manuals feedback form (LV AC drives)*.

Document library on the Internet

You can find manuals and other product documents in PDF format on the Internet. Go to www.abb.com/drives and select *Document Library*. You can browse the library or enter selection criteria, for example a document code, in the search field.

3AUA0000062599 Rev A/ EN
EFFECTIVE: 8.1.2009

ABB Oy
AC Drives
P.O. Box 184
FI-00381 HELSINKI
FINLAND
Telephone +358 10 22 11
Fax +358 10 22 22681
Internet www.abb.com

ABB Inc.
Automation Technologies
Drives & Motors
16250 West Glendale Drive
New Berlin, WI 53151 USA
Telephone 262 785-3200
800-HELP-365
Fax 262 780-5135

ABB Beijing Drive Systems Co. Ltd.
No. 1, Block D, A-10 Jiuxianqiao Beilu
Chaoyang District
Beijing, P.R. China, 100015
Telephone +86 10 5821 7788
Fax +86 10 5821 7618
Internet www.abb.com